



VIGOR

50000mAh Multi-Port Power Bank



50000 mAh

BATTERY CAPACITY

100 W

USB-C FAST
CHARGING

6

OUTPUT PORTS

192.5 Wh

BATTERY ENERGY

USER MANUAL · EN · SKU: PWPB5W003BK · MODEL: PWPB5W003

Charged and Ready.

1



Charge It Fully

Before first use, charge it through USB-C1 or USB-C3.

100W Max

2



Check the Level

The indicator shows the battery level; it flashes while charging.

3



Connect a Device

Plug your device into a USB-C or USB-A output.

6 Ports

4



Fast Charge

Use USB-C1 or USB-C3 for up to 100W.

100W

5



Unplug When Full

Remove the cable when the device is charged.

NEVER

Get It Wet



Leave It in Heat or Sun



Open or Puncture It

Full operating guide on page 6. Safety precautions on page 8.

AT A GLANCE

50000 mAh

CAPACITY

100 W

USB-C MAX

6

PORTS

192.5 Wh

ENERGY

Thank you for choosing Powerology.

VIGOR stores 50000mAh and charges up to six devices at once. Read this guide before first use and keep it for later.

— Inside This Guide

02 Quick Start

03 Product Overview

05 Product Design

06 Specifications

08 Safety Precautions

10 Warranty & Contact

03 In the Box

04 Before First Use

06 Operation Guide

07 Cleaning & Care

08 Troubleshooting

— In the Box



VIGOR Power Bank

x1



USB-C Cable, 30cm,
100W

x1

— Product Overview

The Powerology VIGOR is a 50000mAh (192.5Wh) multi-port power bank with a reliable Li-polymer battery. Its USB-C ports deliver up to 100W fast charging for phones, tablets, game consoles and other digital devices, and six USB-A and USB-C ports charge several devices at the same time. A 30cm 100W USB-C cable is included, the indicator light shows the battery level, and automatic protection guards against overcharge and overdischarge.



Power for Every Device.

50000 mAh Capacity**100** W USB-C Output**6** Ports**777** g Weight

— Key Features



100W USB-C Fast Charging

For phones, tablets and game consoles



6-Port Multi-Device Charging

3 USB-C and 3 USB-A ports



Smart Charging Protection

Against overcharge and overdischarge



Reliable Li-Polymer Battery

50000mAh, 192.5Wh



Indicator Light Design

Shows the battery level



Portable Clip Design

With a 30cm 100W USB-C cable

— Before First Use

1

Check the Box

Check the power bank and the USB-C cable for damage.

2


Charge It Fully

Charge it fully before the first use.

3

Use a Good Charger

A fast charger with a safety certificate gives the best charging.

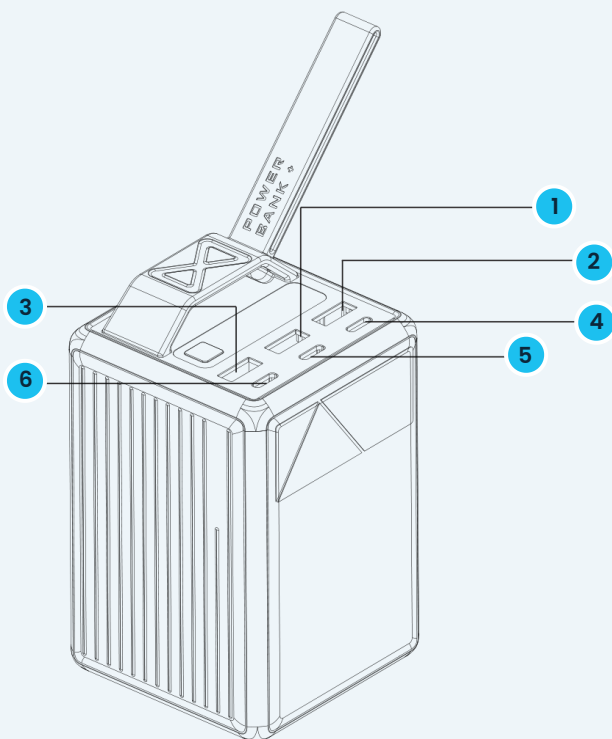

1

USB-A2 Output
5V/2A

2

USB-A3 Output
5V/2A

3

USB-A1 Output
5V/2A

4

USB-C3 Input / Output
100W Max

5

USB-C2 Output
5V/3A

6


USB-C1 Input / Output
100W Max

Charge It, Charge Them.

1

Charge the Power Bank


Connect a charger to USB-C1 or USB-C3. The indicator flashes while it charges.

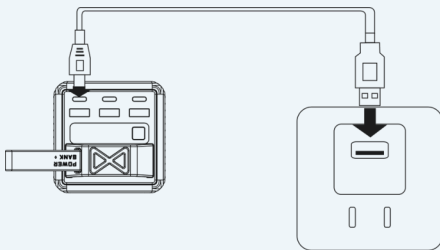

2

Charge a Device

Connect your phone, tablet or other device to an output port. The indicator lights up.

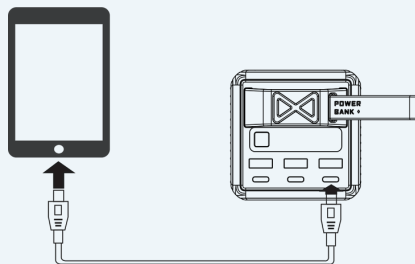

3



Protection Mode

On overcharge or overdischarge it stops and goes into protection mode. Recharge it to wake it up.



Note: USB-C1 and USB-C3 give up to 100W. The output is limited when the power bank gets hot, to protect it.

Specifications

Battery Capacity: **50000mAh, 192.5Wh**

USB-C1/C3 Input: **5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A**

USB-C1/C3 Output: **5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/5A, 100W Max**

By the Numbers.

USB-C2 Output: **5V/3A, 9V/2A, 10V/2.25A, 12V/1.5A**

USB-A1/A2/A3 Output: **5V/2A**

USB-A Total Output: **5V/3A Max**

USB-C Cable Output: **100W**

Cable Length: **30cm**

Product Weight: **777g**

Product Size: **115 x 70 x 70mm**

Model Number: **PWPB5W003**

— Cleaning & Care



Unplug First

Remove all cables before cleaning.



Wipe Dry

Wipe it with a soft, dry cloth.



Store At 50%

For long storage keep it near 50%, cool and dry.



No Liquids. Do not use water, sprays or cleaners.

— Disposal



This product contains a lithium battery. Do not put it in household waste: take it to a battery recycling point.



Warning: wrong use can damage the battery or cause heat or fire. Read all instructions before use.



Safety Precautions

- Not a toy. Keep it away from children.
- Use a charger that meets local safety standards.
- Do not drop, hit or shake it hard.
- If liquid gets inside, stop using it.
- Stop if it swells, leaks or loses capacity.
- Do not cover it or use it in a pocket, bed or sofa.
- Do not open, crush, puncture or short-circuit it.
- Keep it from water, fire and heat over 60°C.
- Do not leave it in a hot car or in the sun.
- Stay near it while it charges.
- Unplug cables when charging is done.

— Troubleshooting



No battery indicator

Why: Protection mode

Fix: Connect a charger to wake it up.



It stopped charging

Why: Overcharge / overdischarge

Fix: Recharge the power bank.



Charging is slow

Why: It is hot or a slow port

Fix: Let it cool; use USB-C1 or USB-C3.



Device not charging

Why: Loose or bad cable

Fix: Plug in firmly or try another cable.

Quick Fixes.

— Good to Know

How many devices can I charge?

Up to 6 at once: 3 USB-C and 3 USB-A.

Which port is the fastest?

USB-C1 and USB-C3: up to 100W.

How do I charge the power bank?

Through USB-C1 or USB-C3.

What is the capacity?

50000mAh, 192.5Wh.

Can it charge a laptop?

Yes, if it charges by USB-C (up to 100W).

Is a cable included?

Yes, a 30cm 100W USB-C cable.

Why did it stop working?

Protection mode: recharge it.

How do I store it?

At about 50%, cool and dry.



Still not working? Write to hey@powerology.me with your model code and a short description.

Need More Help?

WARRANTY

24

MONTHS

When bought directly from the Powerology website or store.

12

MONTHS

When bought from any of our verified retailers.

CONTACT US



EMAIL

hey@powerology.me



WEBSITE

powerology.me



INSTAGRAM

[powerology_official](https://www.instagram.com/powerology_official)



FACEBOOK

[powerology.ME](https://www.facebook.com/powerology.ME)