



**PENCIL PRO**  
**2018-2022 IPAD MODELS**  
CRAYON POUR IPAD  
SKU:PSMAPN

Before using, please read this user manual carefully and save it safely for future reference.

 
## Specifications

Indicator Hold for 3s to switch On/Off

Type-C Charging Port

Magnetic Charging

Built-in Battery




Pen Nib, Replaceable & Removable

Keep in mind that the actual item affects how it looks.


## User Guide

 1. Power On/Off: Press and hold the key switch on top of the pen for 3 seconds. The indicator light will flash quickly to signal it's on. To turn off, press and hold again until the light goes out. If inactive, the pen will automatically shut down after 5 minutes.


Hold for 3s to switch On/Off

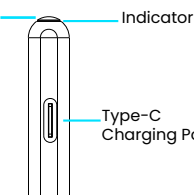

2. Usage: Tap, swipe, and perform other pencil instead of your fingers. It enables writing, drawing, and accessing other functions within applications.  
Note: Compatibility varies by iPad model.

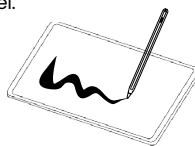


3. Pen Tip Replacement: The pencil features a removable tip. Simply rotate the tip clockwise to secure it in place, ensuring minimal wear and tear.

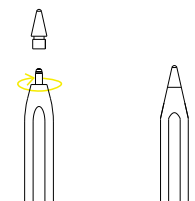


## Bluetooth Shortcut Function

Pairing: On your iPad, open the Bluetooth settings and look for the device name to pair.

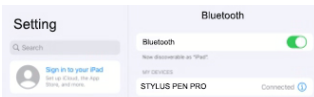


Battery Indicator: Once connected, check the widget on the left of the main interface for real-time battery status.

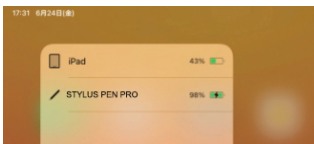

Navigation Shortcuts: Press the pen button once to return to the iPad's home screen, or double-press for multitasking.

 Press to return Home




Double-Press for Multitask




## Charging Mode

Magnetic Adsorption Charging: Activate by connecting to Bluetooth. Attach to iPad for wireless charging. When fully charged, a green light will illuminate for 30 seconds and then turn off automatically. Compatible with iPad Pro series, iPad mini 6, and iPad Air 5/4.

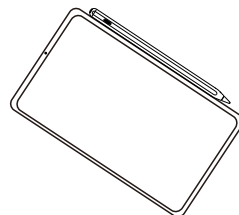


Type-C Charging: Utilize a Type-C charging cable for direct charging. Insert one end into the stylus's Type-C port and connect the other end to a standard 5V/0.1A DC charger.

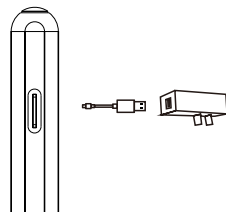


## Indicator

 
Blue Light: Indicates the pencil is in operation.



 Red Light Flashing: Signifies the pencil is currently charging.



 Green Light: Will stay on for 30 seconds after a full charge before turning off.



## Product Specification

Name	Powerology 1.5mm Tip Smart Apple iPad Pencil
Function	Drawing, Writing, Noting, and Tapping
Material	A plastic body with a POM plastic pen tip
Size	Pen tip measures 1.5mm in diameter Ø Pen body is 9.0mm in diameter
Working Time	Up to 11 hours
Color	White
Battery	65430 model battery
Charging Method	Magnetic and Type-C charging methods
Usage Scenarios	Compatible with iPads and other devices with capacitive screens.
Package Contents	Smart Pencil, Instruction Manual.

## Applicable model

Name/Size	Model
iPad mini 8.3/6-inch(2021)	A2567/A2568/A2569
iPad mini 7/5. 9-inch(2019)	A2133/A2124/A2126/A2125
iPad Pro 6/12. 9-inch(2022)	A2436/A2437/A2764/A2766
iPad Pro 12/5. 9-inch(2021)	A2378/A2461/A2379/A2462
iPad Pro 12/4. 9-inch(2020)	A2229/A2233/A2069/A2232
iPad Pro 4/11 1-inch(2022)	A2759/A2435/A2761/A2762
iPad Pro 12/3. 9-inch(2018)	A1876/A2014/A1895/A1983
iPad Pro 11/3-inch(2021)	A2377/A2459/A2301/A2460
iPad Pro 11/2-inch(2020)	A2228/A2231/A2068/A2030
iPad Pro 11/1-inch(2018)	A1980/A2013/A1934/A1979
iPad Air 5/10. 9-inch(2022)	A2588/A2589/A2591
iPad Air 10/4. 9-inch(2020)	A2316/A2324/A2325/A2072
iPad Air 10.5/3-inch(2019)	A2152/A2123/A2153/A2154
iPad 10 /10. 9-inch(2021)	A2696/A2757/A2777
iPad 10.2/9-inch(2021)	A2602/A2603/A2604/A2605
iPad 10.2/8-inch(2020)	A2270/A2428/A2429/A2430
iPad 10.2/7-inch(2019)	A2197/A2198/A2200
iPad 9/6. 7-inch(2018)	A1893/A1954

Compatibility Note: This device is not compatible with early iPad versions, iPhone, Android, and Microsoft devices. Please confirm compatibility with your iPad model before purchasing.

## Common Issues and Troubleshooting Steps

Faults	Troubleshooting methods
Broken Wire	-Ensure the nib is correctly attached and secure. Test functionality.
	-Replace with a spare nib and retest.
	-Check if a screen protector is overly thick or damaged.
Cannot Write	-Restart the tablet device.
	-Verify the pencil is turned on.
	-Confirm if the tablet supports pencil functionality.
Will Not Power On	-Check if the app in use is pencil-compatible.
	-If another pencil is connected, disconnect it and reconnect the primary one.
	-Confirm the pencil is charged.
Additional Note	-Ensure the power-on method is correctly followed.

If issues persist, please contact customer service for further assistance or to process a replacement.