 




carefully and keep for future reference.





Children should be supervised to ensure that they do not play with the appliance. 1. To prevent possible hearing damage, do not listen at high

volume levels for long time periods or a sudden high volume level. 2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if

similarly qualified persons in order to avoid a hazard.

5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.

9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or

13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe

7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.

swimming pools. Ensure that you place the unit on a dry, stable surface. 10. Do not place this unit close to a strong magnetic field.

readily operable.

This appliance is not intended for use by persons (including children) with reduced physical sensory 2. Do not use this apparatus near water. or mental capabilities, or lack of experience and knowledge, unless they have been given 3. Clean only with dry cloth. supervision or instruction concerning use of the appliance by a person responsible for their safety.

4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.

control system.

8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture removed from the AC outlet completely.

11. Do not place the unit on a amplifier or receiver. 12. Do not place this unit in a damp area as the moisture will affect the life of electric components.

with a clean, dry or slightly damp cloth. 14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull

near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

ortant Safety Instructio

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.

9. Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damage in any way, for example, when the power-supply cord or plug is damaged, liquid has · Safety and operating instruction manual should be retained for future reference. been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

> operable. In order to disconnect the apparatus from the AC power completely, the AC plug must · Do not install the product in the following areas:

the packing material, if possible, in case the Sound bar ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your Sound bar to protect it \cdot Before turning on the power for the first time, make sure the sound bar is plugged to power outled

labels or stickers from the back or bottom of the cabinet.

16. The mains plug is used to disconnect the device, the disconnected device should remain

not using it only for a short while. 3. The appliance is not intended to be operated by means of an external timer or separate remote

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or

out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.

Protect Your Furniture

Unpacking and Set Up

7. Only use attachments/accessories specified by the manufacturer.

10. The AC plug is used to disconnect the device, the disconnected device should remain readily such as a bathroom.

· For safety reasons, do not remove any covers or attempt to gain access to the inside of the

Places exposed to direct sunlight or close to radiators.

product. Refer any servicing to qualified personnel.

This soundbar is designed to operate in AC 220-240V 50/60Hz

· Areas where there is constant vibration.

Humid or moist places.

· Operate the product only as instructed in this manual.

•Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC outlet,

· Unwind the Line cord connecting the AC adapter and extend it to its full length.

recommend that you purchase small self-adhesive felt pads, available at hardware stores and home

8. Unplug this apparatus during lightning storms or when unused for long periods of time.

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated

> improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

· The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere

· Do not place near candles or other flames. · Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on •Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any

> · Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

> > Power source:

to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly

1 LED DISPLAY 7 OPTICAL

4 HDMI(ARC) 0 VOL-

6 SUB OUT (2 VOL+

3 ACIN 11 INPUT

2 LINE IN(AUX)
8 FOR UPDATE

3 USB 9 Power/Standby

Press in long time for surround speaker pair with soundbar.

 \cdot On top of other stereo equipment that radiate too much heat -Blocking ventilation or in a dusty

5 678

cabinet or an a walled shelf. Follow this guidance for best sound output and good airflow aroun

2 Wireless surround SL channel LED light 4 FOR UPDATE ONLY (FOR SOFTWARE UPGRADE ONLY) 6 Wireless surround SR channel LED light








3.RESET: Reset all CH volume levels to default of factory setting: EO to Music mode when press and hold button more than 2 sec



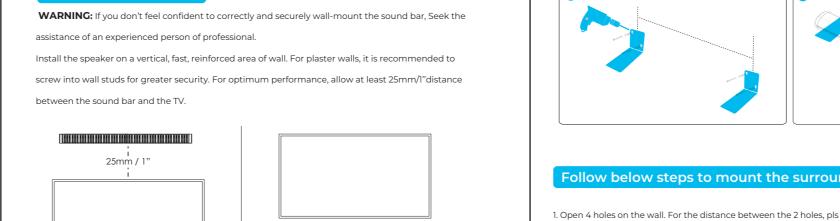

ow below steps to mount the sound bar on the

1. Open 4 holes in the wall referring to iron bracket for wall mounting, the spacing of the holes in the wall is

3. Fix the screws on the plastic anchor and tighten the screws to ensure that the wall mounting

4. After fastening the screws, Put the sound bar pads into the extension of the wall mounting bracket

corresponding to the distance between sound bar pads.

bracket will not shake.

2. Fix the plastic anchor in the 4 holes of the wall mounting bracket.

 $5. \ Plug \ the \ power \ cord \ of \ sound \ bar \ into \ a \ wall \ outlet, it \ will \ automatically \ enter \ standby \ mode.$ 6. Short-press the "STANDBY" button on sound bar or on remote controller to turn on the sound bar 1. Open 4 holes on the wall. For the distance between the 2 holes, pls refer to the soundbar bracket wall mounting. To turn off, press and hold the "STANDBY" button for 2 seconds, then unplug from wall outlet. 2. Fasten the plastic anchors in the 4 holes of the wall mount bracket.

5. Then attach the provided screws to the plastic anchors and tighten the screws to ensure that the wall mount bracket does not shaking.

f. Place the surround sepakers on bracket with the corresponding holes at the bottom, then fix the provided screws in the bottom of the bracket and the holes of the surround speakers, then tighten the screws.

1. Plug the soundbar into the main socket and press "POWER/STANDBY" to turn on the soundbar,

bL -Bluetooth Pairing mode, **RU**-AUX mode, **OPL** -Optical mode, **Hd** -ARC mode, **USb**-USB mode,

then press" "INPUT" on the soundbar to switch to the bluetooth (BT) mode. 2. Power on rear surrond speakers. The blue LED indicator on the surround will blink slowly which indicates


ntering into pairing mode between soundbar and the wireless surround. Then long press the "switch button" on the bottom of the rear surround for around 2.5 seconds. The blue indicator blinks quickly for waiting for the soundbar and rear surround to automatically pair.

4. After about 20-30 seconds, the blue indicator of the rear surrounds changes to steady on. The soundbar and rear

OPERATE INSTRUCTIONS

4:Below are input mode names appearing in the soundbar display:

ir your wireless surround with another soundbar, please repeat step 1 to step 4 above. Ensure

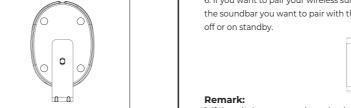

In order to avoid receiving wireless signal interference, when you are playing this wireless sound bar system, ease keep this wireless sound bar system from your other wireless devices and 2.4GHz devices at a proper dista

no device is paired, so switch off if not in use

connected to the USB port); music will automatically play

n the sound bar by pressing "STANDBY" button on sound bar or on remote controlle 4. The remote controller includes BT mode playback controls.

· If the connected device is switched off or manual disconnected, the sound bar will automatically

 $1. The soundbar supports \, HDMI \, (ARC) \, with \, audio \, return \, channel \, (ARC). \, You \, can \, hear \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, your \, description \, (ARC) \, where \, the \, TV \, audio \, through \, the \, TV \, audio \, through \, through \, the \, TV \, audio \, through \, t$ enter pairing successfully connected device will be re-established once you re-enter wireless soundbar by using a single HDMI (ARC) cable. But on condition that your TV is ARC compliant. 2. Using a high speed HDMI (ARC) cable, connect the HDMI (ARC) connector on the soundbar to the range(10 meters). to connect to other devices, repeat the above pairing steps HDMI (ARC) connector on the TV. The HDMI (ARC) connector on the TV might be labeled differently. For

· There is no automatic shutdown in pairing mode. The sound bar will remain in pairing mode even if details, see the user manual of your TV. 3. When HDMI (ARC) is connected, TV sound setting in "sound output" mode should be set as <external Dolby or Auto mode>, Bluetooth device

HDMI (ARC) cable is connected, the TV digital audio output is set as Dolby or Auto mode. Then start playing music on the TV. 4. Press "INPUT" button on the remote control or on soundbar to select $\, Hd \,$ - HDMI (ARC) mode. Different TV might be different setting, please refer to your TV User Manual.

shown steps on above.

5. Use the volume buttons to adjust the volume to your requirements. 6. You can also change the audio settings by using the relevant buttons on the remote control.

1. When connecting a device such as a TV/Set-top box/DVD/ game console with HDMI (ARC) cable, set the audio output mode of the device to Dolby or Auto mode <digital HDMI (ARC) output>.

2. The TV is connected to a HDMI (ARC) port with sound bar. Different TVs might have different setup menus, The sound bar automatically switches to USB input mode with the LED display 115H when a USB flash drive is but the operation approach is the same. inserted (this mode isn't selectable on the sound bar or remote control unless a USB flash drive is connected). 3. If needs to connect set-up box meanwhile, please firstly connect the HDMI (ARC) connector and paired to the

oundbar. Then connect the set-top box. 1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)

2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cal

-Remove the cap of optical cable (keep the cap for the future use); check the direction of the plug. Connect the soundbar and TV with the optical cable.

3. The remote control includes USB input mode playback controls -Use this mode to play music from a TV with optical digital output on the sound bar. In TV sound settings, select the soundbar optical connection (output for audio). When the optical cable is connected, the TV audio output is set to Dolby or Auto mode.

-The TV must have an optical digital output. Use the optical cable to make the connection as follows: Connect the optical cable to the optical digital output of your TV.

> 2. Connect the optical cable to the optical digital input of your soundbar. 3. Switch on the TV set and the soundbar. Set the connected TV to "Dolby or Auto mode".

4. Start playing on the TV. Press "INPUT" button on the remote control or on the soundbar to select OPL - OPTICAL mode.

7. You can also change the audio settings by using the relevant buttons on the remote control.

6. Use the volume buttons to adjust the volume to your requirements.

mode of the device to Dolby or Auto mode (digital optical output). Do not bend the optical cable, otherwise the cable inside will be damaged.

1. Firstly connect the soundbar to your PC, laptop, smart-phone, TV, or other audio devices by using an AUX cable

provided. Make sure that these devices have both AUX IN and AUX OUT terminals.

SOLUTION POSSIBLE CAUSE Another input source is selected. Select an appropriate input source. The mute function is activated.

Cancel the mute function. The volume of sound bar or TV/other device Increase the volume level on sound bar or is adjusted too low. out from sound

Input jacks on a playback device are connected.

Connect the input jack on the sound bar a the output jack on the playback device. in addition, digital audio output mode should be set as <automatic> or <decoded output as Dolby>. When the Noise is heard.

The sound bar is too close to another digital or high-frequency device.

Move those devices away from the sound bar. The unit is out of the operating range.

Use the remote control within the operating range. The batteries are weak. Replace with new batteries.

Bluetooth is not selected as the input source. Select Bluetooth as the input source.

The unit is connected to a different Bluetooth

Un-pair the Bluetooth device that is currently c
and pair with the desired Bluetooth device.

The Bluetooth device that you are using may not support the protocol.

Use a Bluetooth device that supports the protocol.

Power Supply AC 110V-240V, 50/60Hz Power Output 210W R.M.S. The volume on the Bluetooth device may Raise the volume on the Bluetooth device Audio Max Power (P.M.P.O) 735W Playback on the device has not been performed. Perform playback on the device. Input Impedance $8\Omega*5+4\Omega$ The connection to the Bluetooth device Connect with the Bluetooth device one was cut off. Frequency Response 45Hz-20KHz </=1%(1K/1W) SB: 800mV±50mV; SW: 400mV±50mV Dimensions(mm) Soundbar: 73x100x960mm Subwoofer: 190x367x306mm Surround: 73x100x190mm Bluetooth Version Version: 5.0 Range: Up to 10m

Power input or pair connecting issue.

1: Check the adaptor input
2: Pair again with soundbar

Cable connecting issue.

Noise is happened from rear speakers BT connecting or poor signal. 2: power off and on for soundbr active speaker again.

e information, please contact our support team

hey@powerology.me | www.powerology.me

f powerology 🕝 powerology.me