

54 MM

POWEROLGY

USER MANUAL

UNIVERSAL MULTI-PORT TRAVEL ADAPTER

MODEL- P65W3PD

PRODUCT OVERVIEW

Multi-socket
USA/UK/EU Plugs
LED Indicator
 LED does not light in normal operation
 1. Possible overload plug one device and check status indicator again.
 2. Fuse burn-out, please check the fuse.

USB-A/A2 Ports
USB-C/2C3 Ports
USB-C1 Port

SPECIFICATIONS

Model: P65W3PD
 AC Input: 100V-250V, 50/60Hz
 Total DC Output: 65W
 Operating Temperature: 0°C - 25°C
 USB-A1 Output: 12W 5V/2.4A
 USB-A2 Output: 12W 5V/2.4A
 USB-C1 Output: 65W 5V/3A, 9V/3A, 12V/3A, 20V/2.5A
 USB-C2 Output: 15W 5V/3A, 12V/3A, 15V/3A, 20V/2.5A
 Dimensions: 71 x 54 x 55mm

APPLICABLE OUTLETS

1. Adapter can accept Type A, B, C, E, F, G, H, I, J, L, N, L, N plugs.

Please notice that type D, H, K, M and O plugs are not accepted.

2. Adapter can plug into Type A, B, C, D, E, F, G, H, I, J, K, L, M, N and O outlets.

2-POLE UNEARTHED DEVICES

The product is suitable for use with most electronic devices up to 2500W at 250V and 1000W at 100V. IT can be used with multiple appliances such as laptops, small travel hair dryers, travel irons, electric fans, table lamp, electric razors etc. Please check the safety data sheet or data plate on the device to find this information before plugging it in.

USB DEVICES

Camera, Smartphone, Tablet, Portable Game Console, Bluetooth speaker, Power bank, etc.

HOW TO USE THE ADAPTER

Features:
 Built-in multi-nation plugs can be selected to fit all outlets in different countries. Safety function switch ensure only one plug energized.

Attentions:

1. Please make sure that the button is reset when the button is pushed out and retracted to the bottom, and if the button is not reset, it means that the plug has not been pushed in place and will affect the normal use.
 2. Only one plug-type can be used at one time by sliding the knob selection, other plug-types are locked automatically.

Slightly press the button and slide to the down for USA plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "USA" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for UK plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for EU plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "EU" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

1 2 3 4 5 6

REPLACEMENT OF THE FUSE

- Take out 1 and put 2 into the original position of 1, the adapter could work again.
- You also could change new fuse. Standard: 250Vac 10A, 6.3x25.4mm

Notes:

- You should remove all the device before you change the new fuse.
- Please confirm whether there are water flowed out from the access equipment in the power rating.
- Please confirm whether the product is wet and there is water flowed out.

CAUTION

- Always disconnect Adapter from the outlet when not in use.
- Before use, please read this instruction carefully! This product does not convert voltage (AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Indoor use only.
- Misuse can lead to electrical shock.
- The length of the USB cable should be less than 3M.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- Against inserting an adaptor into another adaptor shall be provided by the manufacturer.
- No grounding. This product is for use with unearthed or double insulated appliances only.

COMPATIBLE COUNTRIES

EU PLUG:

- Albania
- Algeria
- Angola
- Argentina
- Austria
- Azores
- Bahamas
- Bangladesh
- Belgium
- Bolivia
- Bosnia
- Brazil
- Bulgaria
- Burkina Faso
- Burundi
- Cameroon
- Canary Island
- Cape Verde
- Central African Republic
- Channel Islands
- Chile
- Comoros
- Congo
- Croatia
- Cote d'Ivoire
- Cyprus
- Denmark
- Djibouti
- Egypt
- El Salvador
- Equatorial Guinea
- Eritrea
- Faeroe Islands
- Finland
- France
- Gabon
- Germay
- Gibraltar
- Greece
- Greenland
- Guadeloupe
- Guinea
- Guinea-Bissau
- Hungary
- Iceland
- India
- Indonesia
- Iran
- Iraq
- Israel
- Italy
- Kazakhstan
- Korea
- Kuwait
- Laos
- Lebanon
- Lithuania
- Luxembourg
- Macao
- Madagascar
- Madeira
- Mali
- Martinique
- Mauritania
- Mauritius
- Monaco
- Morocco
- Nepal
- Netherlands
- Niger
- Norway
- Oman
- Pakistan
- Paraguay
- Peru
- Philippines
- Poland
- Portugal
- Romania
- Russia
- Rwanda
- Senegal
- Somalia
- Spain
- Sudan
- Suriname
- Sweden
- Switzerland
- Syria
- Thailand
- Togo
- Tunisia
- Turkey
- Uruguay
- Vietnam
- Zambia

AUS PLUG:

- American Samoa
- Anguilla
- Antilles
- Aruba
- Bahamas
- Bangladesh
- Barbados
- Bermuda
- Bolivia
- Brazil
- Camodia
- Canada
- Cayman Islands
- China
- Colombia
- Costa Rica
- Cuba
- Ecuador
- El Salvador
- Guam
- Guatemala
- Guayana
- Haiti
- Honduras
- Japan
- Jamaica
- Laos
- Lebanon
- Liberia
- Maldives
- Mexico
- Micronesia
- Montserrat
- Netherlands
- Nicaragua
- Niger
- Okinawa
- Panama
- Peru
- Philippines
- Puerto Rico
- St. Vincent
- Saudi Arabia
- Taihi
- Taiwan
- Thailand
- United States
- Venezuela
- Vietnam
- Virgin Islands
- Yemen
- Zambia
- Zimbabwe

Designed and produced by Teqtronix International Inc. All rights reserved 2022.
 For more information, please contact our support team hey@powerology.me

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

hey@powerology.me | www.powerology.me
 CE FCC RoHS RECYCLE
 f powerology @ powerology.me Made in China

7 8 9 10 11 12

54 MM

REPLACEMENT OF THE FUSE

- Take out 1 and put 2 into the original position of 1, the adapter could work again.
- You also could change new fuse. Standard: 250Vac 10A, 6.3x25.4mm

Notes:

- You should remove all the device before you change the new fuse.
- Please confirm whether there are water flowed out from the access equipment in the power rating.
- Please confirm whether the product is wet and there is water flowed out.

CAUTION

- Always disconnect Adapter from the outlet when not in use.
- Before use, please read this instruction carefully! This product does not convert voltage (AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Indoor use only.
- Misuse can lead to electrical shock.
- The length of the USB cable should be less than 3M.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- Against inserting an adaptor into another adaptor shall be provided by the manufacturer.
- No grounding. This product is for use with unearthed or double insulated appliances only.

COMPATIBLE COUNTRIES

EU PLUG:

- Albania
- Algeria
- Angola
- Argentina
- Austria
- Azores
- Bahamas
- Bangladesh
- Belgium
- Bolivia
- Bosnia
- Brazil
- Bulgaria
- Burkina Faso
- Burundi
- Cameroon
- Canary Island
- Cape Verde
- Central African Republic
- Channel Islands
- Chile
- Comoros
- Congo
- Croatia
- Cote d'Ivoire
- Cyprus
- Denmark
- Djibouti
- Egypt
- El Salvador
- Equatorial Guinea
- Eritrea
- Faeroe Islands
- Finland
- France
- Gabon
- Germay
- Gibraltar
- Greece
- Greenland
- Guadeloupe
- Guinea
- Guinea-Bissau
- Hungary
- Iceland
- India
- Indonesia
- Iran
- Iraq
- Israel
- Italy
- Kazakhstan
- Korea
- Kuwait
- Laos
- Lebanon
- Lithuania
- Luxembourg
- Macao
- Madagascar
- Madeira
- Mali
- Martinique
- Mauritania
- Mauritius
- Monaco
- Morocco
- Nepal
- Netherlands
- Niger
- Norway
- Oman
- Pakistan
- Paraguay
- Peru
- Philippines
- Poland
- Portugal
- Romania
- Russia
- Rwanda
- Senegal
- Somalia
- Spain
- Sudan
- Suriname
- Sweden
- Switzerland
- Syria
- Thailand
- Togo
- Tunisia
- Turkey
- Uruguay
- Vietnam
- Zambia

AUS PLUG:

- American Samoa
- Anguilla
- Antilles
- Aruba
- Bahamas
- Bangladesh
- Barbados
- Bermuda
- Bolivia
- Brazil
- Camodia
- Canada
- Cayman Islands
- China
- Colombia
- Costa Rica
- Cuba
- Ecuador
- El Salvador
- Guam
- Guatemala
- Guayana
- Haiti
- Honduras
- Japan
- Jamaica
- Laos
- Lebanon
- Liberia
- Maldives
- Mexico
- Micronesia
- Montserrat
- Netherlands
- Nicaragua
- Niger
- Okinawa
- Panama
- Peru
- Philippines
- Puerto Rico
- St. Vincent
- Saudi Arabia
- Taihi
- Taiwan
- Thailand
- United States
- Venezuela
- Vietnam
- Virgin Islands
- Yemen
- Zambia
- Zimbabwe

HOW TO USE THE ADAPTER

Features:
 Built-in multi-nation plugs can be selected to fit all outlets in different countries. Safety function switch ensure only one plug energized.

Attentions:

1. Please make sure that the button is reset when the button is pushed out and retracted to the bottom, and if the button is not reset, it means that the plug has not been pushed in place and will affect the normal use.
 2. Only one plug-type can be used at one time by sliding the knob selection, other plug-types are locked automatically.

Slightly press the button and slide to the down for USA plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "USA" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for UK plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for EU plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "EU" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

1 2 3 4 5 6

54 MM

REPLACEMENT OF THE FUSE

- Take out 1 and put 2 into the original position of 1, the adapter could work again.
- You also could change new fuse. Standard: 250Vac 10A, 6.3x25.4mm

Notes:

- You should remove all the device before you change the new fuse.
- Please confirm whether there are water flowed out from the access equipment in the power rating.
- Please confirm whether the product is wet and there is water flowed out.

CAUTION

- Always disconnect Adapter from the outlet when not in use.
- Before use, please read this instruction carefully! This product does not convert voltage (AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Indoor use only.
- Misuse can lead to electrical shock.
- The length of the USB cable should be less than 3M.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- Against inserting an adaptor into another adaptor shall be provided by the manufacturer.
- No grounding. This product is for use with unearthed or double insulated appliances only.

COMPATIBLE COUNTRIES

EU PLUG:

- Albania
- Algeria
- Angola
- Argentina
- Austria
- Azores
- Bahamas
- Bangladesh
- Belgium
- Bolivia
- Bosnia
- Brazil
- Bulgaria
- Burkina Faso
- Burundi
- Cameroon
- Canary Island
- Cape Verde
- Central African Republic
- Channel Islands
- Chile
- Comoros
- Congo
- Croatia
- Cote d'Ivoire
- Cyprus
- Denmark
- Djibouti
- Egypt
- El Salvador
- Equatorial Guinea
- Eritrea
- Faeroe Islands
- Finland
- France
- Gabon
- Germay
- Gibraltar
- Greece
- Greenland
- Guadeloupe
- Guinea
- Guinea-Bissau
- Hungary
- Iceland
- India
- Indonesia
- Iran
- Iraq
- Israel
- Italy
- Kazakhstan
- Korea
- Kuwait
- Laos
- Lebanon
- Lithuania
- Luxembourg
- Macao
- Madagascar
- Madeira
- Mali
- Martinique
- Mauritania
- Mauritius
- Monaco
- Morocco
- Nepal
- Netherlands
- Niger
- Norway
- Oman
- Pakistan
- Paraguay
- Peru
- Philippines
- Poland
- Portugal
- Romania
- Russia
- Rwanda
- Senegal
- Somalia
- Spain
- Sudan
- Suriname
- Sweden
- Switzerland
- Syria
- Thailand
- Togo
- Tunisia
- Turkey
- Uruguay
- Vietnam
- Zambia

AUS PLUG:

- American Samoa
- Anguilla
- Antilles
- Aruba
- Bahamas
- Bangladesh
- Barbados
- Bermuda
- Bolivia
- Brazil
- Camodia
- Canada
- Cayman Islands
- China
- Colombia
- Costa Rica
- Cuba
- Ecuador
- El Salvador
- Guam
- Guatemala
- Guayana
- Haiti
- Honduras
- Japan
- Jamaica
- Laos
- Lebanon
- Liberia
- Maldives
- Mexico
- Micronesia
- Montserrat
- Netherlands
- Nicaragua
- Niger
- Okinawa
- Panama
- Peru
- Philippines
- Puerto Rico
- St. Vincent
- Saudi Arabia
- Taihi
- Taiwan
- Thailand
- United States
- Venezuela
- Vietnam
- Virgin Islands
- Yemen
- Zambia
- Zimbabwe

HOW TO USE THE ADAPTER

Features:
 Built-in multi-nation plugs can be selected to fit all outlets in different countries. Safety function switch ensure only one plug energized.

Attentions:

1. Please make sure that the button is reset when the button is pushed out and retracted to the bottom, and if the button is not reset, it means that the plug has not been pushed in place and will affect the normal use.
 2. Only one plug-type can be used at one time by sliding the knob selection, other plug-types are locked automatically.

Slightly press the button and slide to the down for USA plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "USA" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for UK plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for EU plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "EU" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

1 2 3 4 5 6

54 MM

REPLACEMENT OF THE FUSE

- Take out 1 and put 2 into the original position of 1, the adapter could work again.
- You also could change new fuse. Standard: 250Vac 10A, 6.3x25.4mm

Notes:

- You should remove all the device before you change the new fuse.
- Please confirm whether there are water flowed out from the access equipment in the power rating.
- Please confirm whether the product is wet and there is water flowed out.

CAUTION

- Always disconnect Adapter from the outlet when not in use.
- Before use, please read this instruction carefully! This product does not convert voltage (AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Indoor use only.
- Misuse can lead to electrical shock.
- The length of the USB cable should be less than 3M.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- The travel adaptor is for temporary use only and that it shall not be used permanently.
- Against inserting an adaptor into another adaptor shall be provided by the manufacturer.
- No grounding. This product is for use with unearthed or double insulated appliances only.

COMPATIBLE COUNTRIES

EU PLUG:

- Albania
- Algeria
- Angola
- Argentina
- Austria
- Azores
- Bahamas
- Bangladesh
- Belgium
- Bolivia
- Bosnia
- Brazil
- Bulgaria
- Burkina Faso
- Burundi
- Cameroon
- Canary Island
- Cape Verde
- Central African Republic
- Channel Islands
- Chile
- Comoros
- Congo
- Croatia
- Cote d'Ivoire
- Cyprus
- Denmark
- Djibouti
- Egypt
- El Salvador
- Equatorial Guinea
- Eritrea
- Faeroe Islands
- Finland
- France
- Gabon
- Germay
- Gibraltar
- Greece
- Greenland
- Guadeloupe
- Guinea
- Guinea-Bissau
- Hungary
- Iceland
- India
- Indonesia
- Iran
- Iraq
- Israel
- Italy
- Kazakhstan
- Korea
- Kuwait
- Laos
- Lebanon
- Lithuania
- Luxembourg
- Macao
- Madagascar
- Madeira
- Mali
- Martinique
- Mauritania
- Mauritius
- Monaco
- Morocco
- Nepal
- Netherlands
- Niger
- Norway
- Oman
- Pakistan
- Paraguay
- Peru
- Philippines
- Poland
- Portugal
- Romania
- Russia
- Rwanda
- Senegal
- Somalia
- Spain
- Sudan
- Suriname
- Sweden
- Switzerland
- Syria
- Thailand
- Togo
- Tunisia
- Turkey
- Uruguay
- Vietnam
- Zambia

AUS PLUG:

- American Samoa
- Anguilla
- Antilles
- Aruba
- Bahamas
- Bangladesh
- Barbados
- Bermuda
- Bolivia
- Brazil
- Camodia
- Canada
- Cayman Islands
- China
- Colombia
- Costa Rica
- Cuba
- Ecuador
- El Salvador
- Guam
- Guatemala
- Guayana
- Haiti
- Honduras
- Japan
- Jamaica
- Laos
- Lebanon
- Liberia
- Maldives
- Mexico
- Micronesia
- Montserrat
- Netherlands
- Nicaragua
- Niger
- Okinawa
- Panama
- Peru
- Philippines
- Puerto Rico
- St. Vincent
- Saudi Arabia
- Taihi
- Taiwan
- Thailand
- United States
- Venezuela
- Vietnam
- Virgin Islands
- Yemen
- Zambia
- Zimbabwe

HOW TO USE THE ADAPTER

Features:
 Built-in multi-nation plugs can be selected to fit all outlets in different countries. Safety function switch ensure only one plug energized.

Attentions:

1. Please make sure that the button is reset when the button is pushed out and retracted to the bottom, and if the button is not reset, it means that the plug has not been pushed in place and will affect the normal use.
 2. Only one plug-type can be used at one time by sliding the knob selection, other plug-types are locked automatically.

Slightly press the button and slide to the down for USA plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "USA" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for UK plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for EU plug completely as shown. Make sure the contact blades are turned to the parallel position.

Recover the plug; press and hold the "EU" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

1 2 3 4 5 6