



**Powerology**

**75" Android Smart TV**

SKU: P75UHDA14

 
# Table of Contents

Accessories	2
Safety Instructions	2
Warnings	6
Troubleshooting	7
Base Installation	8
Schematic View	9
Main Unit Description	10
Remote Control Guide	11
Specifications	14
Disposal	15
Warranty	16
Contact Us	16

## Accessories

1. Remote Control
2. Stand
3. Screws

## Safety Instructions

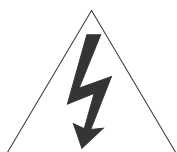



### Warning

Risk of electric shock.  
Do not open.



**Warning:** To avoid the risk of electric shock, do not remove the cover (or back). There are no user-serviceable parts inside. Please refer servicing to qualified personnel.

 The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, which may be of sufficient magnitude to constitute a risk of electric shock to a person.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**Warning:** To prevent fire or shock hazards, do not expose this apparatus to rain or moisture.

**Caution:** To ensure personal safety, observe the following rules regarding the use of this unit.

- a.** Operate only from the power source specified on the unit.
- b.** Avoid damaging the AC plug and power cord.
- c.** Avoid improper installation and never place the unit in locations where good ventilation is restricted.
- d.** Do not allow objects or liquids into the cabinet openings.
- e.** In the event of trouble, unplug the unit and contact a service technician. Do not attempt to repair it yourself or remove the rear cover.
- f.** Changes or modifications not approved could void the warranty.
- g.** When the TV is not in use for an extended period, disconnect both the power plug from the AC outlet and the antenna for safety.
- h.** To prevent electric shock, do not use this power plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself.

## Caution

To prevent electrical shock, do not open the TV casing. There are no user-serviceable parts inside. Please refer repairs to qualified service personnel.

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

- 1.** Avoid using the unit near water. Clean the unit only with a dry cloth.
- 2.** Do not block ventilation openings. Ensure ventilation is not obstructed by covering openings with items such as newspapers, tablecloths, or curtains. Maintain at least 5 cm of clearance around the unit for proper airflow.
- 3.** Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other appliances that produce heat. Never place lit candles or other open flame sources near the unit.

- 4.** Prevent the power cord from being walked on or pinched, particularly at plugs, receptacles, and where the cord exits the unit.
- 5.** Only use accessories and attachments recommended by the manufacturer.
- 6.** Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the unit. If using a cart, exercise caution when moving the cart/unit combination to prevent tipping.
- 7.** Unplug the unit during lightning storms or if it will not be used for extended periods.
- 8.** All servicing should be performed by qualified service personnel. Service is required if the unit has been damaged in any way (e.g., if the power supply cord or plug is damaged, liquid has been spilled, the unit has been exposed to rain or moisture, or if it is not operating normally).
- 9.** The unit should not be exposed to water or liquids. Avoid placing objects filled with liquids (such as vases) on top of the unit.
- 10.** Place the television on a stable, flat surface. Failure to do so may result in the unit tipping over, potentially causing injury.
- 11.** Do not allow young children to play around or on the television, or hang from the unit. Failure to do so can result in the television falling, causing injury.
- 12.** Do not allow young children to play with the plastic bag that came with the television. Failure to do so can result in suffocation, which may lead to death.
- 13.** Avoid improper installation and never position the unit where good ventilation is impossible. When installing, ensure sufficient space is maintained between the set and the wall, as well as in tightly enclosed areas like furniture. Follow the minimum distance guidelines for safe operation.
- 14.** Cautions for installation:



- Do not tilt the unit towards the left or right, or toward the back.
- Ensure the power cord is out of foot traffic areas.
- The unit may generate slight heat during operation. Ensure there is enough space around the unit for proper ventilation and cooling.
- Have two people remove the unit from the box with the screen facing away from you. Be careful when moving the unit to avoid scratching the front.

 
**15.** Ensure enough space for inserting and removing the power plug. Place the unit as close to the outlet as possible. The main power supply is controlled by inserting or removing the power plug. Physically disconnecting the plug is the only way to completely disconnect the unit from the mains power source.

**16.** Batteries should not be exposed to excessive heat such as sunlight, fire, or the like.

**17.** When this unit is connected to the wall outlet, it is always in standby mode even when all the LED lamps are off. To shut it down, unplug the unit from the wall outlet.

**18.** If the supply cord is damaged, it must be replaced by the manufacturer's service agent or another qualified person to avoid a hazard.

**19.** Always place the TV on furniture that can safely support it. Make sure the ends of the TV do not hang over the edge of the supporting furniture.

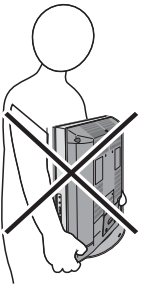

**20.** Do not place the TV on tall furniture (such as cupboards or bookcases) without anchoring both the furniture and the TV to a wall or other strong support.

**21.** Do not stand the TV on cloth or other materials placed between the TV and the supporting furniture.

**22.** When the mains plug is used as the disconnect device, the disconnect device should remain easily accessible.

## Warnings

The plug must be easily accessible.

The device should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the device.

The only way to disconnect the power is by removing the plug from the wall.

Do not place items filled with fluid on the device.

Do not expose the device to the risk of electrical shock or fire.

Only qualified technicians should open the device.

Do not wipe the device with a wet cloth; use only a dry cloth.

Do not expose the device to rain or the risk of exposure to fire and electrical shock.

Do not place the plug where people might walk over it.

When cleaning the device, always disconnect the power.

If you will not use the device for an extended period, remove the plug from the wall.

Ensure a minimum of 5 cm of space around the device for adequate ventilation.

The ventilation should not be obstructed by covering ventilation openings with items such as newspapers, tablecloths, or curtains.

Do not place naked flame sources, such as lit candles, on the device.



Pay attention to environmental considerations when disposing of batteries. The remote control battery should not be exposed to excessive heat, such as sunlight and fire.

The apparatus is suitable for use in tropical climates.

The plug should remain easily accessible and operable.

## Troubleshooting

Problem	Solution
Screen cuts short in HD PC mode	When using HD input (1080P) from a PC, please set the "Aspect Ratio" function to "Full" mode so the TV can display the content fully without cutting short.
TV will not turn on	<ul style="list-style-type: none"><li>-Ensure the power cord is plugged in.</li><li>-The batteries in the remote control may be dead. Please replace the batteries.</li></ul>
No picture, no sound	<ul style="list-style-type: none"><li>-Check the interface cable between the TV and antenna/cable TV.</li><li>-Press the power button on the remote.</li><li>-Press the SOURCE button on the remote, then press the ENTER button to select the TV source.</li></ul>
Poor picture, sound OK	<ul style="list-style-type: none"><li>-Check the interface cable between the TV and antenna/cable TV.</li><li>-Try another channel. The station may have broadcast issues.</li><li>-Adjust the brightness/contrast settings in the Video menu.</li></ul>
Picture OK, poor sound	<ul style="list-style-type: none"><li>-The sound may be muted.</li><li>-Press the MUTE button on the remote.</li><li>-Press the VOL+ button on the remote to increase the volume.</li></ul>
Sound interference	Move any infrared devices away from the TV.

 


The TFT LED panel utilizes a sophisticated technology that consists of sub-pixels. However, there may be a few bright or dark pixels on the screen. These pixels will not affect the overall performance of the product.


## Base Installation

- 1.** The stand base must be securely installed as shown below, unless the TV is wall-mounted.
- 2.** Place the TV face down on a flat surface, on a towel or blanket, to avoid damaging the screen.
- 3.** Align the holes on the base with the holes on the base support pole.
- 4.** Pass the base support pole through the base as shown in the figure, and use screws to secure the base to the TV.


**1**

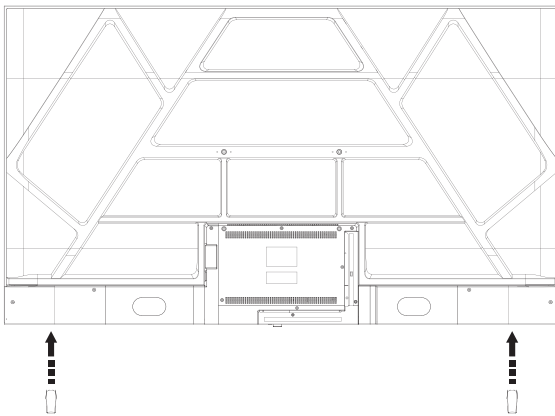


**2**

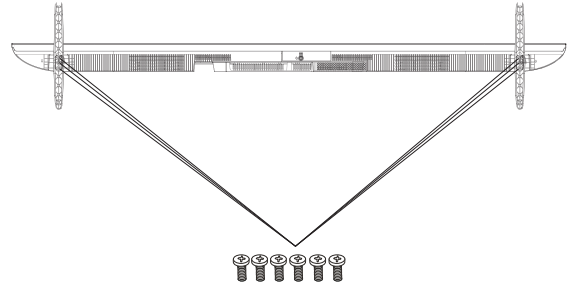 

**3**

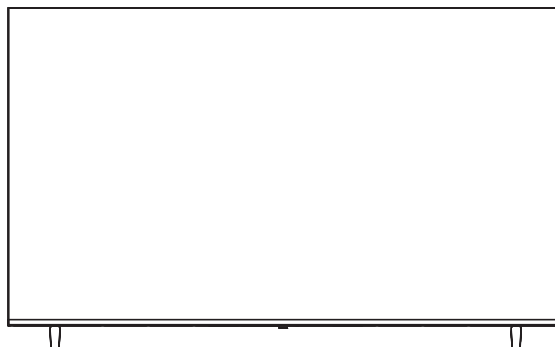 

# Schematic View

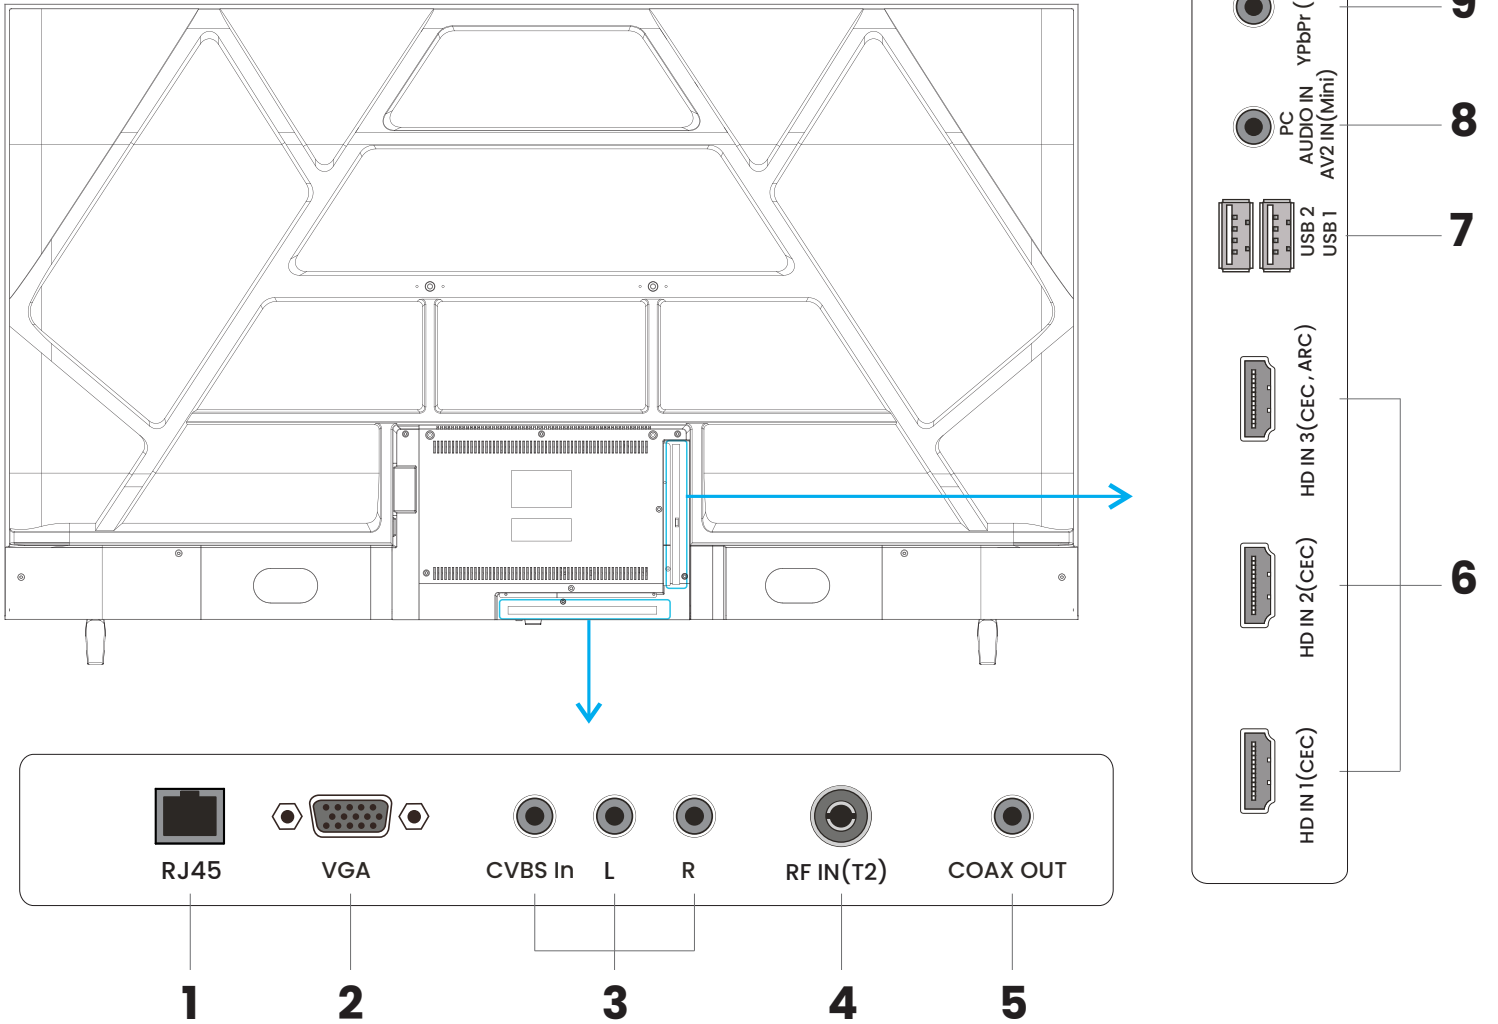 


Item	Name	Function Description
1	RJ45 INPUT	Used to connect the LAN.
2	VGA INPUT	VGA input terminal for the simulation signal from a PC.
3	CVBS AUDIO INPUT	CVBS component audio input (L, R).
4	RF INPUT T2	Connect the antenna or 75-ohm coaxial cable to receive the TV signal.
5	COAXIAL OUTPUT	Coaxial audio output.
6	HD INPUT	Connect the HD output jack of a DVD player.
7	USB INPUT	Insert the USB disk.
8	PC AUDIO INPUT	VGA input terminal for the simulation signal from a PC.
9	YPbPr INPUT(Mini)	Connect to the Y Pb Pr output jacks of a camcorder, video game console, or similar devices.
10	EARPHONE OUTPUT	Earphone output interface.

**Please note:**





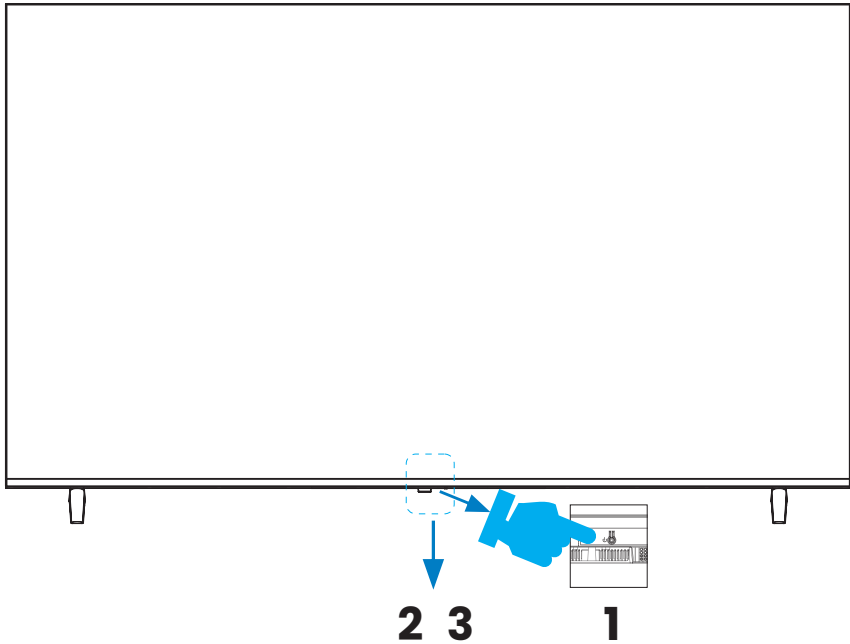 


When using a USB with an external device, if the current is too high, the external equipment may require an additional power supply such as a mobile hard disk or mobile drive.


**Main Unit Description**









- a)** Press once to initiate the functional operation (⏻ ⏸ ⏪ ⏩ + -).
- b)** Press the function menu button once, then press twice or more to move the function icon.
- Note:** The first press of this button will default to the first icon.)
- c)** Press and hold the button to confirm the function, then use the ⏪ ⏩ + - buttons to execute the related operations.

Power Off



**Single press to navigate.**

**Press and hold to select.**

Item	Button Name	Function Description
1		Turn the TV on or off from standby mode, or switch between the two.
		Press to display the main menu on the screen.
		Press to select the input source and confirm the selected menu option.
		Press to navigate through channels, using up and down for movement.
		Press to adjust the sound level, and move left or right to fine-tune.
2	Power Indicator	The indicator light will turn RED when the TV is in standby mode and GREEN when the TV is powered on.
3	Remote Sensor	Infrared sensor to detect signals from the remote control.

## Remote Control Guide



Press once to turn the TV on, and press again to turn the TV off.



Press to mute the sound output. Press again to restore it.

### P.Mode

Press to switch the image input mode.

### S.Mode

Press to switch the sound input mode.

### ASPECT

Press repeatedly to cycle through the available aspect modes.

### SUB.T CC

Select subtitle for media video files. (Requires support from the disk or file.)



## **TV Radio**

Press this button to switch to TV radio mode.

## **Audio MTS**

Press to switch channels.

## **T.SHIFT**

Press this button to activate T.SHIFT.

## **EPG**

Press to access the Electronic Program Guide (EPG).

## **REC**

Display the recording menu.

## **0-9**

Press to select and switch to a channel using numbers 0-9.

## **Fav**

Press this button to enter the Favorite list.

## **(↺↻)**

Switch between the current and previous channels.

## **SOUREC**

Press this button to open the input source OSD (On-Screen Display) menu.

## **INFO**

Press to display information about the current program.

## **MENU**

Press this button to enter the main menu.

## **EXIT**

Press to exit the OSD (On-Screen Display).

**(▲/▼/◀/▶/OK)**

Use these buttons to navigate through on-screen menus and adjust system settings to your preference. The "OK" button is equivalent to the "ENTER" button.

### **Netflix**

Shortcut button for Netflix.

### **YouTube**

Shortcut button for YouTube.

### **MEDIA**

Press this button to switch to the media input.

### **SETTING**

Press this button to access TV settings.

### **SHAHID**

Shortcut button for Shahid.

### **CH+ CH-**

Press to change the channel.

### **HOME**

Press to go back to the main page.

**(📲)**

Press this button to operate the APK.

### **VOL+ VOL-**

Press to adjust the volume.

**(⏮)**

Press to skip backward in storage mode.



Press to PLAY/PAUSE in storage mode.



Press to skip forward in storage mode.



Press to fast forward in storage mode.



Press to STOP in storage mode.



Press to fast reverse in storage mode.

[Red, Green, Yellow, Blue]

Correspond to different menu item colors.

## Specifications

Display	DLED-75T3 Frameless
Rated Voltage	AC 100-240V
Rated Frequency	50/60Hz
Rated Power	198W
Power Cord	UK 3-Pin Plug
Panel Type	A+ Panel
Resolution	2160×3840
Aspect Ratio	4:3/16:9
Maximum Viewing Angle	178°
Brightness	220-250cd/m2
Contrast Ratio	5000:1
Maximum Display Colors	16.7M
Response Time	4ms



Speakers	2 ×10W
Broadcasting Reception	ATV, DVT (DVB-C/T/T2)
RAM	1.5GB
ROM	8GB
Operating System	Android 11
Supported Image Formats	JPEG, BMP, PNG
Standby Power	≤0.5W
Screen Size	75"
OSD Language	Arabic, English, French, Spanish, Dutch, German, Portuguese
Interface	1x CVBS/Audio, 1x RF, 3x HD, 2x USB, 1x Earphone, 1x RJ1 ,45x COAX, 1x YPbPr

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
**powerology.me/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology\_official**

Facebook: **powerology.ME**