



Powerology
**Dual Design Cordless
Vacuum and Mop**

SKU: PPBCHA51



Table of Contents

Features	2
Safety Precautions	2
Schematic View	4
Product Assembly	5
Charging Instructions	6
Specifications	7
Cleaning Head Components	8
Cleaning and Washing Instructions	8
Troubleshooting	9
Warranty	10
Contact Us	10

Features

1. The dust bin has a capacity of 50ml for efficient cleaning without frequent emptying.
2. Features a dual-purpose design for cleaning both hard floors and carpets effectively.
3. Provides up to 30 minutes of continuous cleaning on a single charge.
4. Equipped with a powerful 115W DC motor for strong and consistent suction.
5. Delivers 6500Pa of suction power to handle a variety of debris types.

Safety Precautions

 
Please carefully read all contents of the manual and follow the safety instructions below.

1. When using this product, always adhere to the following basic safety guidelines. Ensure that you follow these instructions thoroughly to reduce the risk of fire, electric shock, or injury.
2. Do not use this product for purposes other than cleaning. Doing so may cause damage to the product.
3. Store the product in a location away from fire, direct sunlight, and humid or wet areas.
4. Do not use anything other than the dedicated mop pads provided.
5. This product should not be used by individuals with physical, sensory, or mental impairments, or by those lacking experience or knowledge, including children.
6. Children should be supervised to ensure they do not play with the product.
7. Do not allow children to come near the product while it is in operation. Pets may also be injured if they come too close.


- 8.** Ensure to unplug the adapter from the outlet when the product is not in use.
- 9.** Do not use the product near open flames or heating devices. Doing so may cause damage or malfunction.
- 10.** Do not forcefully stop the rotation of the mop pads during use. This can result in damage to the connecting parts, handle, or internal components, causing malfunction or failure.
- 11.** When the mop pad is dirty, remove any waste or debris immediately. Continuing to use the product with a dirty pad may result in decreased performance and damage to the product's functions.
- 12.** Do not use harmful detergents, alcohol, benzene, thinner, or shoe polish. These substances may cause deformation, discoloration, or malfunction.
- 13.** If foreign objects or excessive waste accumulate, do not attempt to forcefully remove them, as this may damage the product or cause malfunction due to the foreign materials being lodged in the rotating parts.
- 14.** Avoid using the product on materials or objects that may be damaged or have sharp edges, such as raw meat.
- 15.** Do not forcibly pull or bend the adapter cord or connection parts. Doing so may cause damage to the adapter or cord.
- 16.** Be cautious when using the mop pads as they may absorb oil stains easily, potentially making the surface slippery, although this does not affect the product's functionality.
- 17.** Avoid using wet mop pads on delicate surfaces such as hardwood floors, as they may cause discoloration.
- 18.** Do not obstruct the movement of the product with Velcro or other materials, as these could become entangled and cause damage.
- 19.** Do not disassemble, repair, or modify the product. This can pose a risk of electric shock, fire, or other hazards, as well as cause product malfunction.

20. Do not use the product to collect water, chemicals, cigarette butts, or hot ashes, or in areas with fumes, as this may lead to hazards or fire.

Schematic View

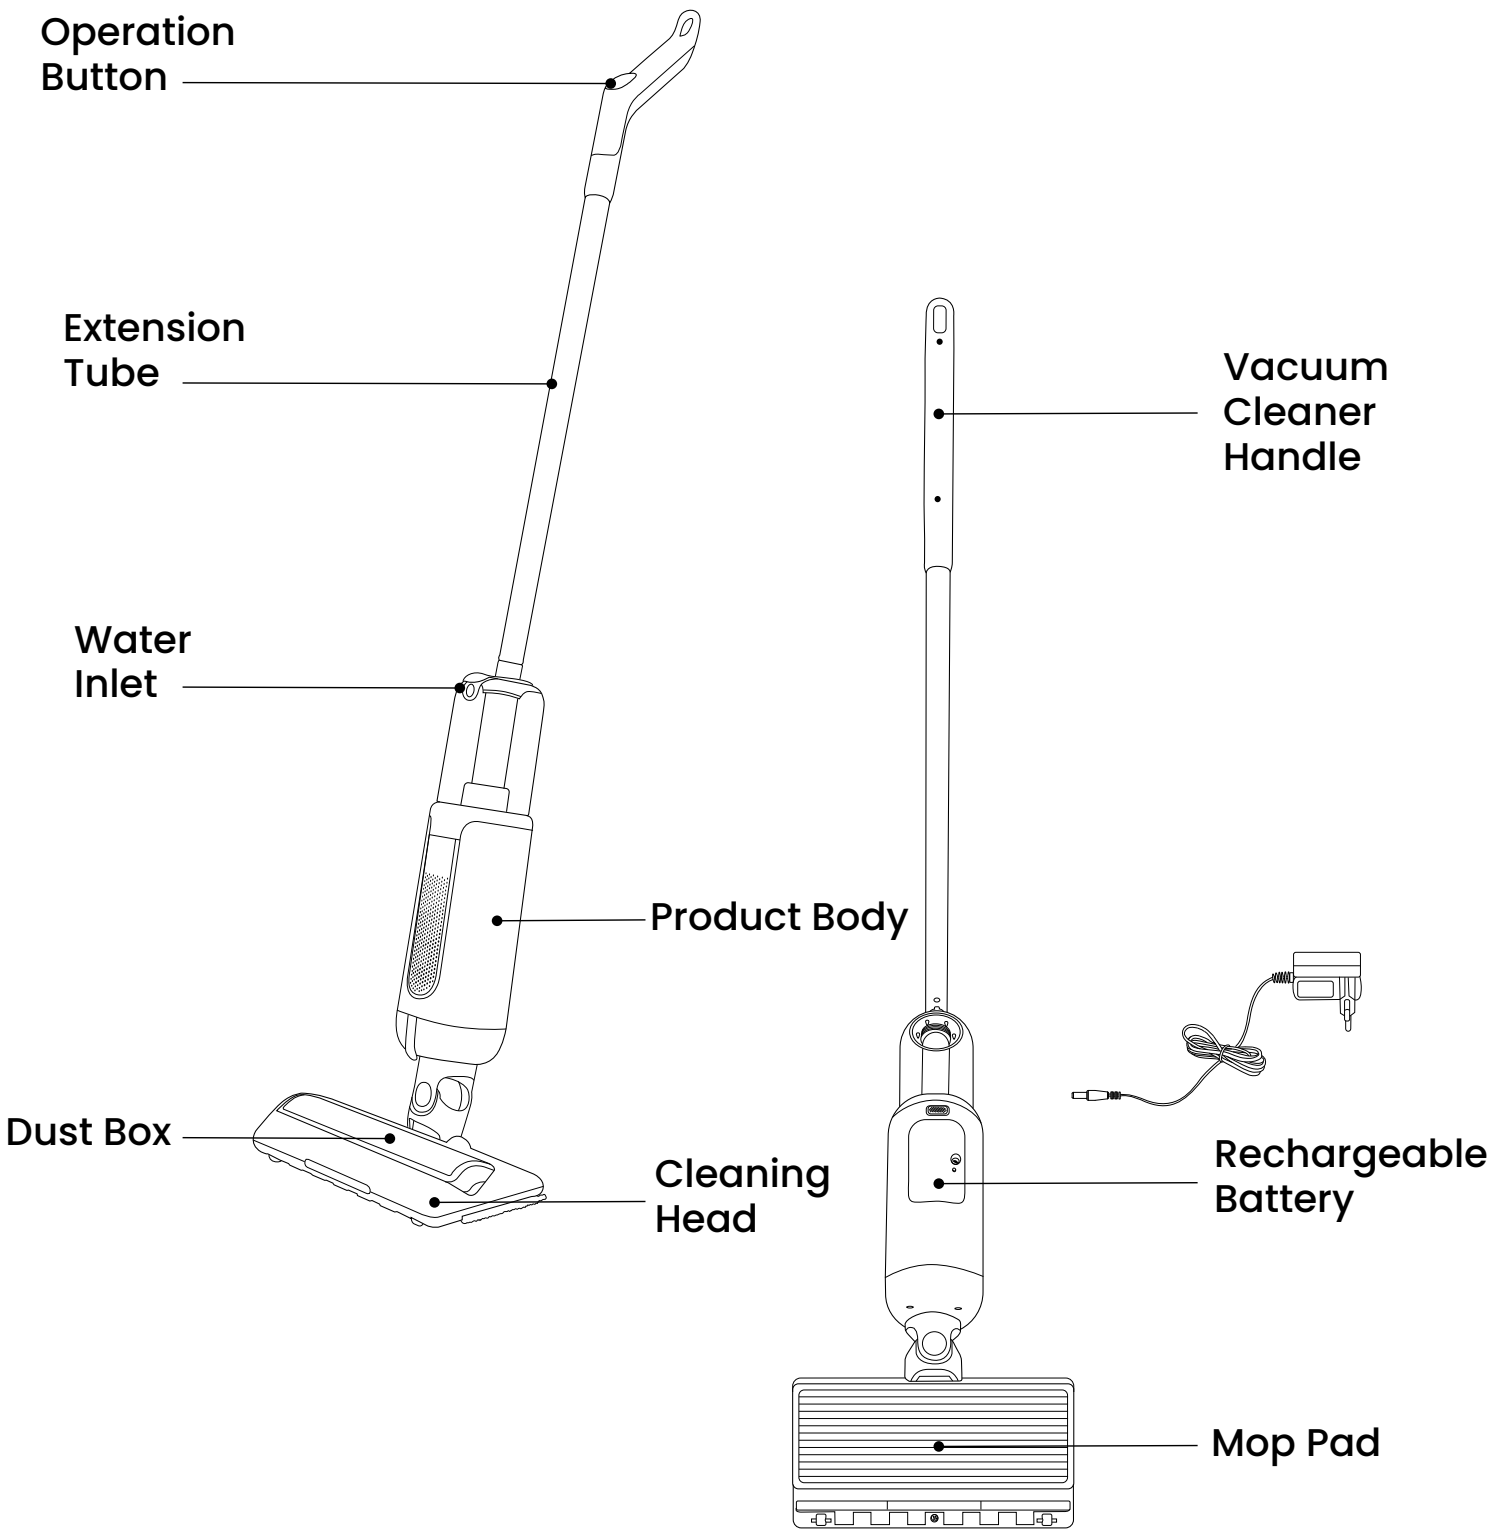

Product Assembly

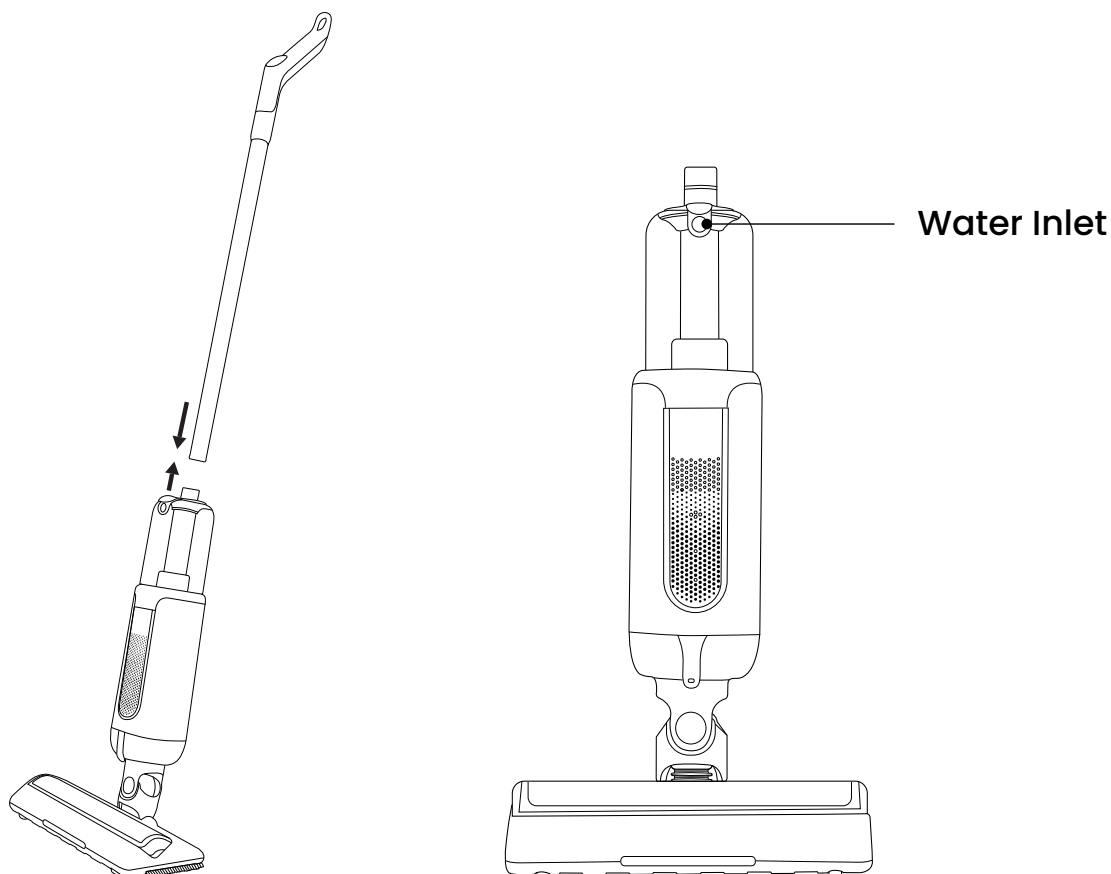 


1. When using the product for the first time, ensure the battery is fully charged before use.
2. Align the cleaning head with the main unit in the same direction and connect them until you hear a click.
3. Connect the main unit and the connecting parts together and ensure they fit until you hear a soft clicking sound.
4. Open the water tank lid and use a measuring cup to fill the water inlet with water. Once filled, be sure to securely close the water tank lid.
5. Press the operation button to activate the deep cleaning mode. For more thorough cleaning, press the water supplement button, which allows water to flow down to the lower section of the brush, ensuring a cleaner wash.

Note: If the product will not be used for an extended period, charge the battery once or twice a month to prevent battery drainage. If left uncharged, the battery lifespan may decrease. Also, store the product in a cool and dry place.

Charging Instructions

 - 1.** Open the charging port cover located on the back of the main unit and connect the adapter to the charging port.
- 2.** If the battery is low, the blue indicator light on the charging display will start flashing.
- 3.** During the charging process, the blue light will flash continuously. Once charging is complete, the blue light will stop flashing and remain on.
- 4.** After charging is complete, disconnect the adapter from the main unit and store it safely.

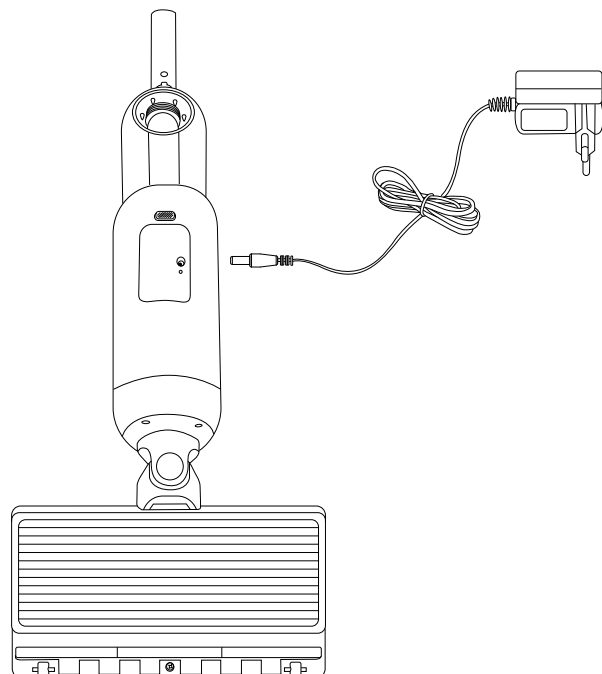


Specifications

Rated Voltage	100-240V
Rated Frequency	50/60Hz
Battery Capacity	2200mAh, 14.8V Li-ion
Recharge Time	4H
Motor Power	115W
Working Time	≥30min
Bin Capacity	50ml
Water Tank Capacity	300ml
Spray Water Volume	150ml/min
Suction Power	6500Pa
Product Weight	1.69kg
Product Dimension	114×25×10 cm

Cleaning Head Components

The product components are:

 - * Main Body
- * Switch Handle
- * Cleaning Head and Dustbin
- * HEPA Filters (2 units: 1 attached to the main body)
- * Water Pads (2 units: 1 attached to the head)
- * Water Suction Device (1 unit)

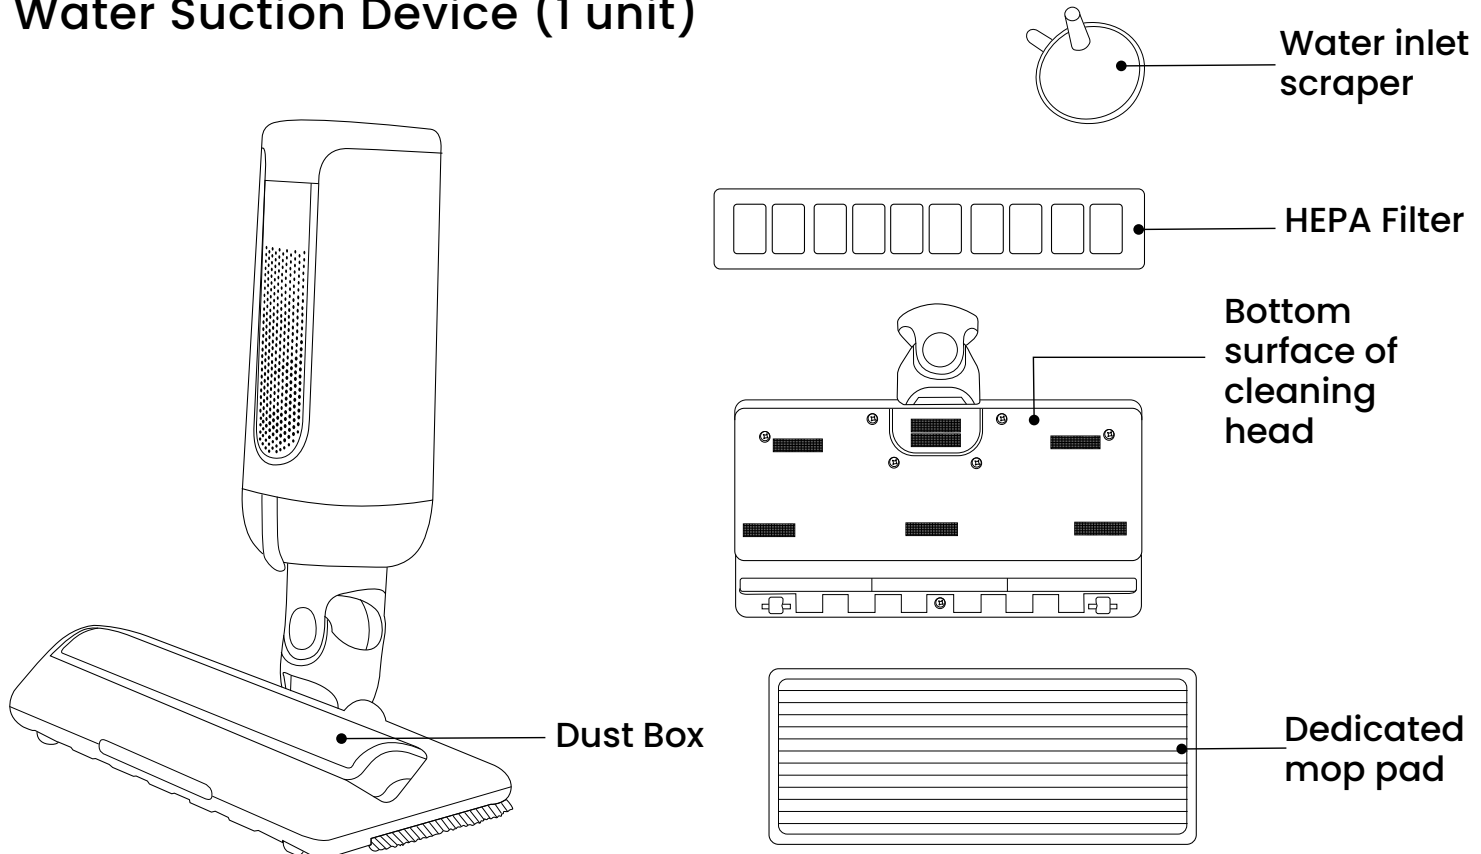

Cleaning and Washing Instructions

1. Please ensure the product is powered off before cleaning.
2. Press the dustbin release button together with the filter button to detach them.
3. After separating the dustbin and HEPA filter, thoroughly clean the dustbin with clean water, then dry it and reattach it to the main body.
4. Separate the water tank from the bottom of the cleaning head, clean it with fresh water, and reattach it after washing. Ensure that the water tank is properly secured before operating the product to avoid malfunction.

5. After cleaning the dustbin and filter, dry them completely before attaching them to prevent water from remaining inside, which may cause malfunction.
6. For long-term storage, store the product in a well-ventilated place after completely drying it.
7. Check the direction of the dustbin and reattach it properly.
8. Improper assembly may weaken suction power or cause malfunction.

Troubleshooting

Issues	Solutions
The device is not working.	<ol style="list-style-type: none"> 1. Press the power button again to ensure it is on. 2. Check the battery charge status.
The noise level is excessive.	This is the sound that occurs when the motor operates at high speed; it is not a malfunction.
The suction power has weakened.	<ol style="list-style-type: none"> 1. Empty the dust container and clean the filter. 2. Check if there is any debris stuck between the cleaning head and the body of the product.
Can the product be used while it is plugged into the charger?	After the charging is complete, remove the adapter and use the device wirelessly.
There is a smell coming from the product.	<ol style="list-style-type: none"> 1. During initial use, there may be a slight odor. This is not a malfunction. 2. Check if there is any foreign material inside the dust container causing the odor. 3. Ensure that the device is thoroughly dried after washing to prevent any lingering odors. 4. If the filter is not properly cleaned or dried after long-term use, an odor may remain. Clean the dust container and filter after every use.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
powerology.me/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology_official**

Facebook: **powerology.ME**