



Powerology

Powerful Spot Cleaner

**Hot Water and Steam Function for
Carpet, Upholstery, and Hard Floors**

SKU: PCRTSCGY

Table of Contents

Features	2
Safety Warnings	2
Electrical Warnings	5
Package Contents	5
Schematic View	6
Filling the Solution Tank	6
Getting Ready to Clean	7
Instructions for Use	8
After Use Cleaning and Maintenance	10
Heat Protection	11
Troubleshooting	12
Specifications	13
Disposal	14
Warranty	14
Contact Us	15

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

1. Precisely sprays water deep into the stain, ensuring targeted cleaning without unnecessary water wastage.
2. Easily removes stains through effective brushing that is gentle enough to protect the surface integrity.
3. Equipped with an 11kPa suction power, this feature ensures that all dirt and moisture are effectively removed, leaving surfaces clean and dry.
4. The machine comes with a high-performance 1200W motor that drives efficient and thorough cleaning action.
5. This system separates clean water from dirty water, ensuring superior hygiene by preventing cross-contamination.
6. Capable of cleaning a variety of surfaces, including fabrics and floors, making it suitable for multiple cleaning scenarios.

Safety Warnings

When using this electrical appliance, always adhere to basic safety precautions, including the following:

1. Read all instructions before using your appliance.
2. To mitigate the risk of fire, electric shock, or injury, follow these basic precautions when using an electrical appliance.
3. Connect only to a properly grounded outlet. Refer to the grounding instructions. Do not modify the three-prong grounded plug.
4. Unplug the appliance when not in use, especially before cleaning or servicing.
5. Avoid using the appliance outdoors or on wet surfaces to reduce the risk of electric shock.

- 6.** Use the appliance solely for its intended purposes as described in this manual. Only use attachments recommended by the manufacturer.
- 7.** Do not use if the cord or plug is damaged. If the appliance malfunctions or is damaged in any way, take it to an authorized service center for repair.
- 8.** Do not pull on the cord or use it as a handle, close a door on the cord, wrap the cord around sharp edges, or allow the appliance to run over the cord. Keep the cord away from heated surfaces.
- 9.** To unplug the appliance, hold the plug itself and not the cord. Ensure your hands are dry to avoid electric shock.
- 10.** Do not expose the appliance to rain or wet conditions. Store it indoors to reduce the risk of electric shock.
- 11.** This appliance is not a toy. Supervise its use near children to prevent unintended use.
- 12.** Plastic films can pose a suffocation risk; keep them out of reach of children.
- 13.** Turn off all controls before connecting or disconnecting the appliance from the power supply.
- 14.** Ensure that no objects block any openings. Keep the appliance free of dust, lint, and hair to maintain airflow.
- 15.** Exercise caution when cleaning carpets on stairs.
- 16.** Position the appliance on a flat, stable surface to ensure proper operation.
- 17.** Avoid vacuuming toxic substances like bleach, ammonia, or drain cleaner.
- 18.** Do not vacuum burning or smoking objects, or use the appliance near flammable or combustible materials.
- 19.** Avoid picking up hard or sharp objects that could cause damage.
- 20.** Use only cleaning products recommended for this appliance to prevent damage.


- 21.** Follow the guidelines for the type and amount of cleaning solutions used as specified in the operations manual.
- 22.** Avoid directing liquid toward any electrical components.
- 23.** Do not submerge the appliance in water. Use it only on surfaces moistened by the cleaning process.
- 24.** Each cleaner is rigorously tested and inspected before shipping. The presence of a small amount of water vapor in the water tank is normal.
- 25.** Exercise caution when using steam or hot water to prevent scalding. Do not direct steam or hot water at people.
- 26.** Disconnect the appliance from the power source before filling, rinsing, or cleaning.
- 27.** Keep the water fill cap closed when using the steam-cleaning attachment.
- 28.** Avoid turning over or directly touching the steam-cleaning nozzle or its surface when it's attached.
- 29.** Refill the reservoir with water only. Avoid using chemicals or additives.
- 30.** Never apply steam directly to people or animals.
- 31.** Avoid contact with the steam-cleaning nozzle or nearby surfaces while it is hot or in use.
- 32.** Regularly inspect the hose for signs of wear and cracks.
- 33.** Use the hose solely for indoor household carpet cleaning with the recommended cleaning solutions.

Servicing the Wet Suction Hose Warning: This hose contains electrical components. To avoid electric shock, never use or try to repair a damaged hose. Only qualified service personnel should perform maintenance on the hose, ensuring it is handled with care and knowledge of its structure.

Electrical Warnings

1. The wet suction hose contains electric wires. To reduce the risk of electric shock, never use or attempt to repair a damaged hose. Ensure a float is installed before any wet suction operation is activated.
2. Improper connection of the equipment-grounding conductor can pose a serious risk of electric shock. Consult a qualified electrician or service technician if you are unsure whether the outlet is properly grounded. Do not modify the plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for a standard 230V circuit and includes a grounding plug that matches the plug shown in the diagram. Ensure the appliance is connected to an outlet with the same configuration. No plug adapter should be used with this appliance.
3. Connect this appliance to a grounded wiring system to ensure safety. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current, helping to reduce the risk of electric shock. The cord for this appliance includes an equipment-grounding conductor and a grounding plug. It must be plugged into an outlet that is correctly installed and grounded in compliance with all applicable local codes and regulations.
4. To minimize the risk of injury, read the instruction manual carefully. Use this appliance indoors only. For household use only. Do not immerse in water.
5. This product is for household use ONLY.

Package Contents

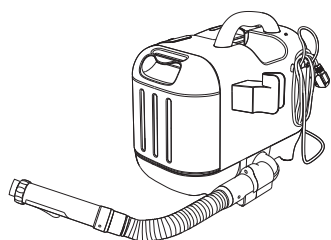


Main Body



Multi-functional Tool




 Cloth Cover




Steam Jet Nozzle

Schematic View

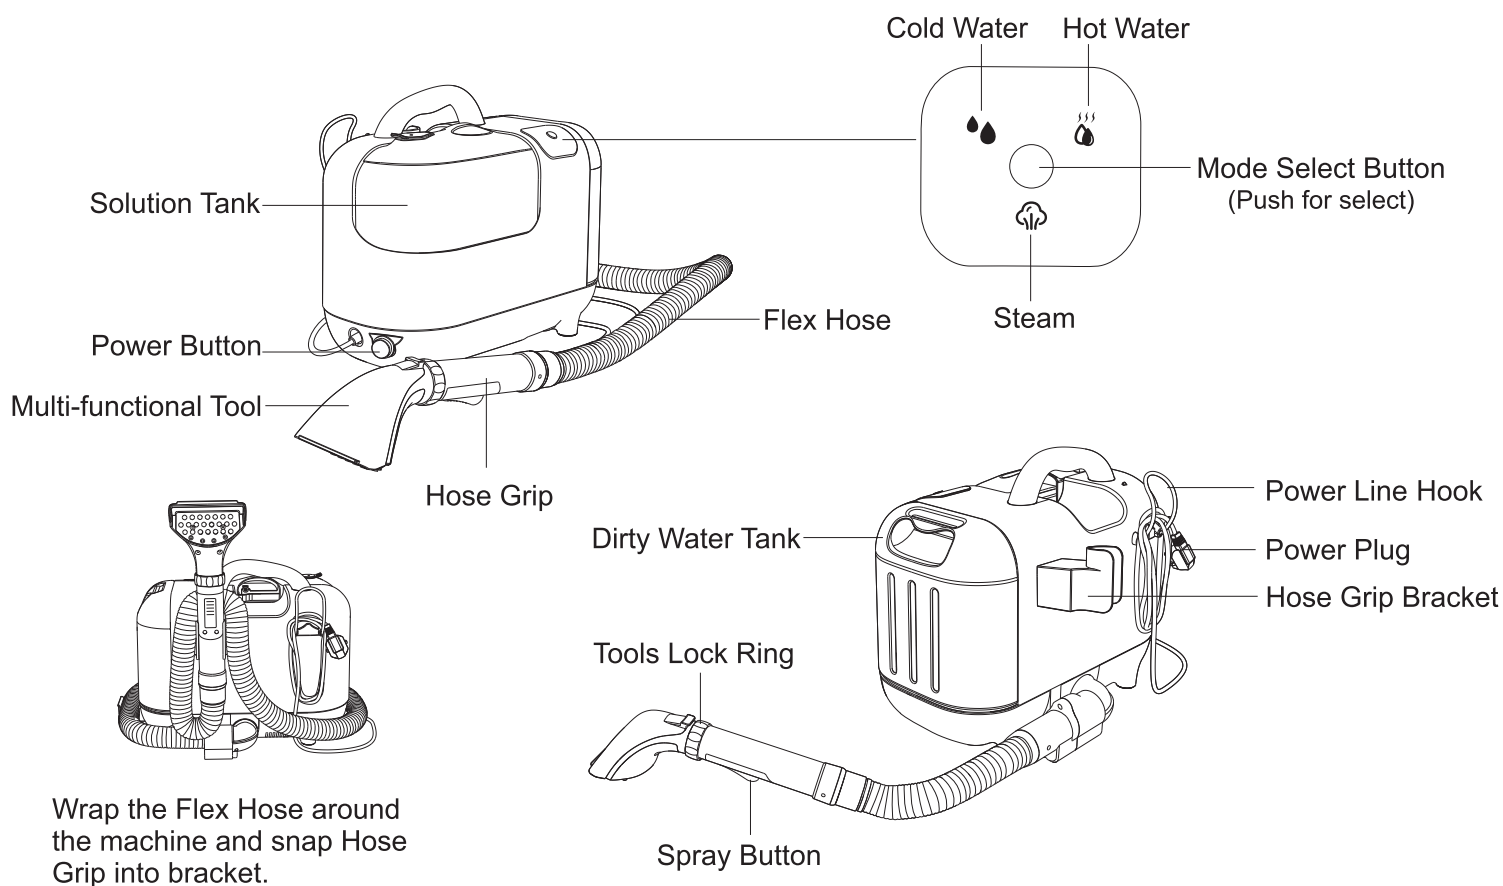


Filling the Solution Tank

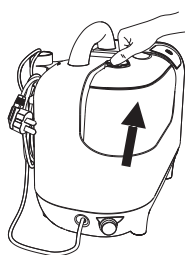


1. Detach the tank from the machine by lifting the top away.




2. Pull the rubber tab to expose the filling opening. The plug rotates for convenient access.

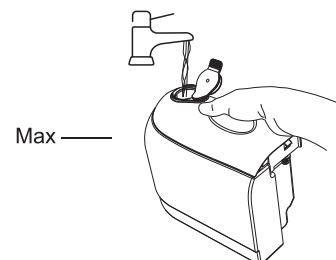

3. Add water up to the indicated fill line. Do not exceed this line to ensure optimal performance.

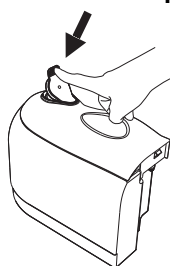

4. Rotate the plug back into its original position and press down gently to secure.

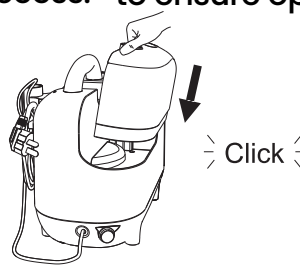

5. Insert the tank back into the machine, pushing down until you hear a click indicating it is locked in place.

Warning!


1. Do not use boiling water.
2. Avoid heating the water tank in a microwave.
3. For extended service life, it is advisable to use purified or filtered water.

Getting Ready to Clean


A. Before You Begin Cleaning

1. Apply cleaning solution directly onto stained or soiled areas.
2. Allow the solution to sit for at least three minutes.
3. Proceed with cleaning as per the instructions.


B. Selecting Your Cleaning Tool or Accessory

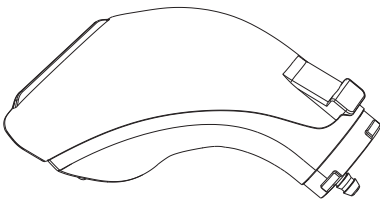

Multi-functional Tool

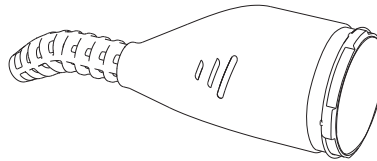


Steam Jet Nozzle

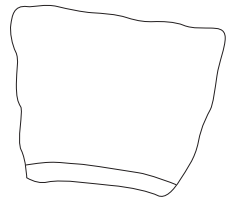


Cloth Cover

C. Attaching Your Chosen Tool or Accessory


[C.1] For the Multi-functional Tool

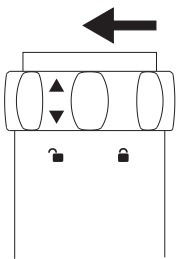

1. Align the arrow on the lock ring with the unlock icon on the handle.

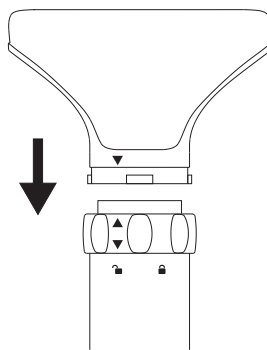


2. Position the multi-functional tool such that the arrow on the tool aligns with the arrow on the lock ring.

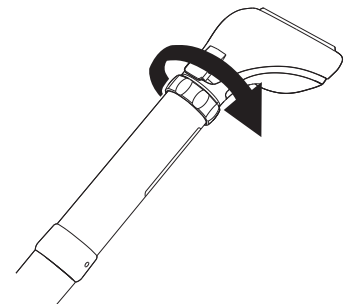



3. Secure by turning the lock ring clockwise until tight.

Note: Removing an Unwanted Tool.

1. Unscrew the locking ring counterclockwise.
2. Pull the tool outward to remove.



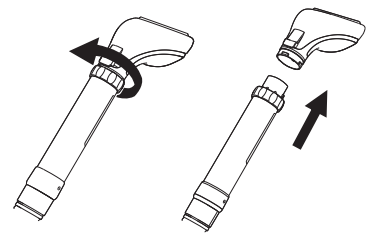


[C.2] Cloth Cover Usage

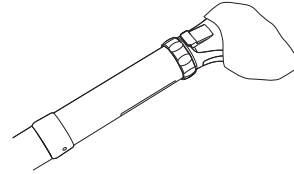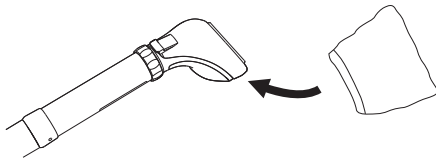

Note: The Multi-functional Tool, when equipped with a cloth cover, is suitable for cleaning non-fabric surfaces such as leather sofas.




[C.3] Steam Jet Nozzle Attachment

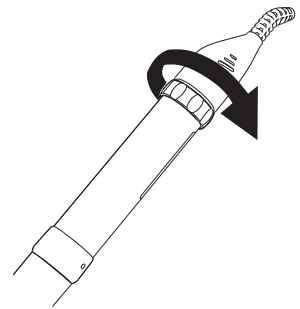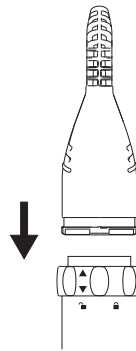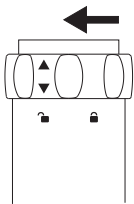


1. Align the arrow on the lock ring with the unlock icon on the hose grip.
2. Insert the steam jet nozzle into the end of the hose grip.
3. Tighten the lock ring by turning it clockwise.

Instructions for Use


[1] Using the Multi-functional Tool

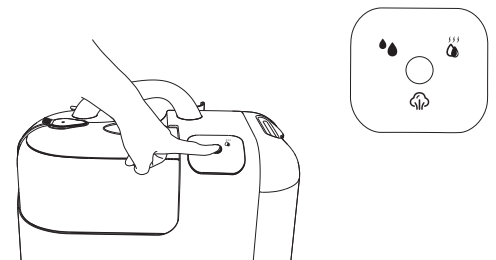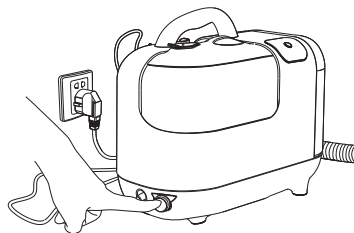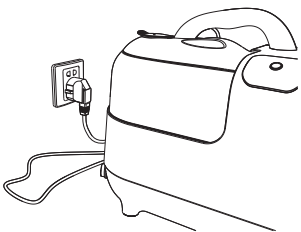

1. Unwind the power cord and connect it to a power outlet.
2. Press the power button to switch the machine to standby mode.
3. Use the mode button to select the required setting: choose from cold water, hot water, or steam mode.

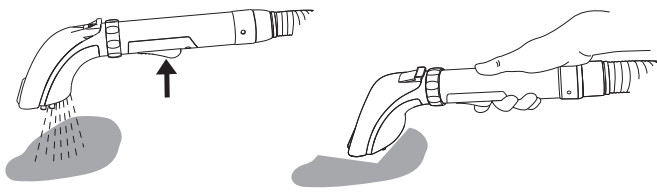

4. Aim the multi-functional tool at the stain or spot. Press the spray button to release the cleaning solution and gently scrub the area to remove the stain.

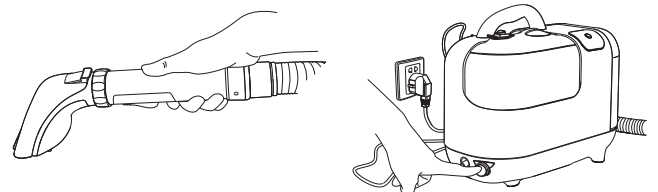

5. Once cleaning is complete, release the spray button and turn off the machine by switching off the power.

Note:

1. Always maintain contact between the multi-functional tool and the carpet to prevent over-spraying.

2. Press the spray button to release water or steam as needed. To stop, release the spray button.

⚠ Warning!

1. Exercise caution with steam and hot water to avoid the risk of burns.

2. For your safety and to ensure consistent performance, avoid keeping the tool stationary during use.


Note:

The following occurrences are normal:


1. The unit requires approximately 40 seconds to pre-heat in steam mode. Afterwards, press the spray button to release steam.

2. A small amount of water may be expelled before steam is released.

[2] Using the Steam Jet Nozzle

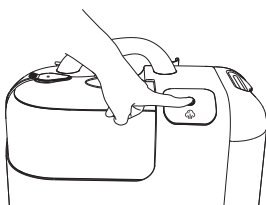

1. Press the mode button to activate steam mode.

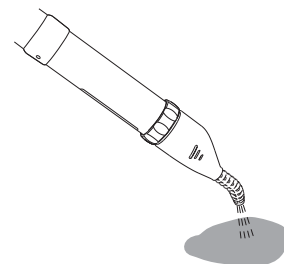

2. Position the steam jet nozzle over the area to be cleaned and press the spray button to begin steaming.


Important

The steam jet nozzle is designed only for emitting water or steam; it does not vacuum




After Use Cleaning and Maintenance

A. Cleaning the Machine

1. Ensure the Solution Tank contains sufficient clean water.
2. Position the multi-functional tool close to a surface such as the ground or a table, and activate the spray trigger.
3. Clean water will flow through the hose, effectively flushing out any remaining dirt and debris.
4. Continue this process for 10–5 seconds, then release the spray trigger and turn off the power switch.

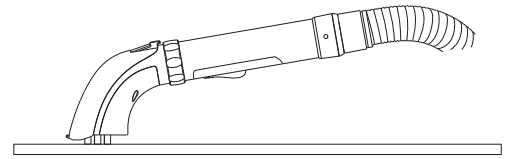

B. Cleaning the Tool

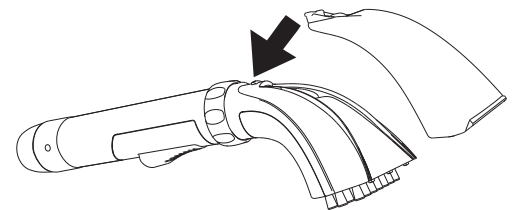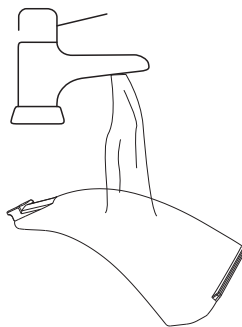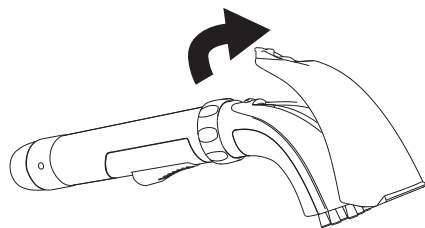


Detach the nozzle cover from the multi-functional tool, clean it separately, and allow it to air dry before reattaching the cover to the tool.

Warning!


The multi-functional tool and hose grip are not waterproof. Do not wash them in water.

C. Cleaning the Dirty Water Tank


The machine's integrated mechanism prevents the dirty water tank from overflowing. When the tank is full, the machine will provide an audible alert and automatically shut down the suction motor, signaling that it is time to empty the dirty water tank.

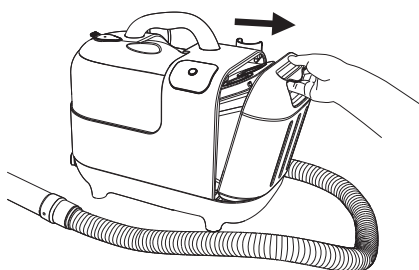


1. Gently pull the dirty water tank out horizontally from the machine.

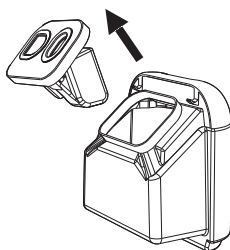


2. Detach the float component from the tank for cleaning.

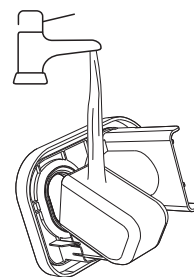


3. Rinse the tank under running water to remove all debris.

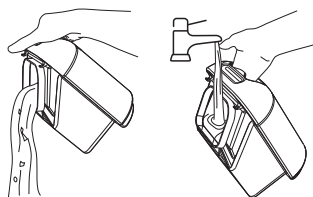

4. Rinse the interior of the tank with water. Avoid using abrasive tools or scrubbing harshly to prevent damage to the tank's protective layer.

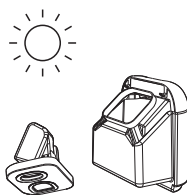


5. Allow the tank and components to air dry completely before reassembly.

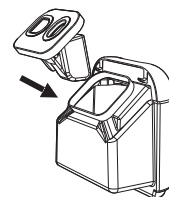

6. Put the float component back into the tank.

7. Slide the tank back into the machine. Push down until you hear a click to ensure it is securely fastened.

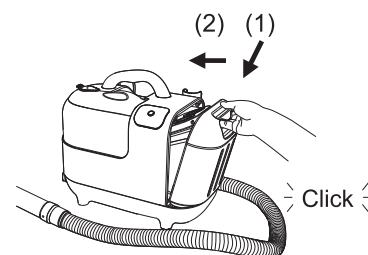

Warning!

To prevent electrical shock, always turn off the power and disconnect the machine from the electrical outlet before cleaning or performing any maintenance.

Heat Protection

The portable carpet cleaner is equipped with an internal thermal protector to safeguard against overheating. If the thermal protector is triggered, the suction motor will stop working. Follow these steps to address the issue:

- 1.** Turn off the machine and disconnect it from the electrical outlet.
- 2.** Examine the hose and the cleaning tool for any blockages. Remove any debris and ensure the float stack is clear of obstructions.

3. Allow the motor to cool for approximately 30 minutes. The thermal protector will reset automatically.
4. After the cool down period, reconnect the power to continue cleaning.

This structured approach ensures your machine operates safely and maintains optimal performance.

Troubleshooting

Problem	Possible Cause	Solution
Reduced spray or no spray	Spray nozzle is clogged.	Unclog the spray nozzle using a straightened paper clip.
	Solution Tank is empty.	Refill the Solution Tank.
	Filter of Solution Tank is clogged.	Inspect the filter and contact customer service if necessary.
	Solution Tank is not fully seated.	Reinstall the Solution Tank properly.
Cleaner does not suck the cleaning solution	Incorrect positioning of the tool.	Adjust the tool's position according to the recommended guidelines.
	Dirty Water Tank is full.	Empty the Dirty Water Tank.
	Use of an incorrect cleaning formula.	Use only the manufacturer-specified cleaning formulas.
	Dirty Water Tank is not properly seated.	Reinstall the Dirty Water Tank.

Note:

Any maintenance other than these specified remedies should be performed by an authorized service technician.

Warning!

To ensure your safety and reduce the risk of electric shock, always turn off the power and unplug the machine from the electrical outlet before attempting any troubleshooting or maintenance.

Specifications

Voltage	230V AC 50Hz
Rated Power	1200W
Suction Power	11kPa
Noise Level	75 dB
Clean Tank Capacity	1300ml
Dirty Tank Capacity	1800ml
Power Cord Length	3M
Hose Length	1.5M
Working Models	Tap Water, Hot Water ($55\pm 5^{\circ}\text{C}$), Steam ($100\pm 5^{\circ}\text{C}$)
Power Plug	UK 3-Pin Plug
Product Net Weight	4.5KG
Gross Weight	6.8KG
Product Dimension	360×237×304 mm

Disposal



Do not dispose of electrical appliances as unsorted municipal waste. Use designated collection facilities instead. Contact your local authority for information about available collection systems. If electrical appliances are discarded in landfills or dumps, hazardous substances may seep into groundwater, potentially entering the food chain and harming health and well-being.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
powerology.me/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology_official**

Facebook: **powerology.ME**