



**Powerology**

**10000mAh MagSafe Power  
Bank with Glass Surface**

SKU: PPBCHA36

 
# Table of Contents

Product Overview	2
Wireless Charging Instructions	3
Features	3
Charging Indicator	3
Charging Other Devices	4
Warnings	5
Precautions	6
Specifications	7
Warranty	8
Contact Us	8

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Product Overview


Thank you for choosing this product. It features high-quality lithium-ion polymer batteries and advanced charge-discharge ICs, ensuring superior safety, efficiency, and compatibility. This device supports both wired and wireless charging and is specifically designed for iPhones with wireless charging capabilities. Please note that the use of third-party protective iPhone cases may impact the charging performance.

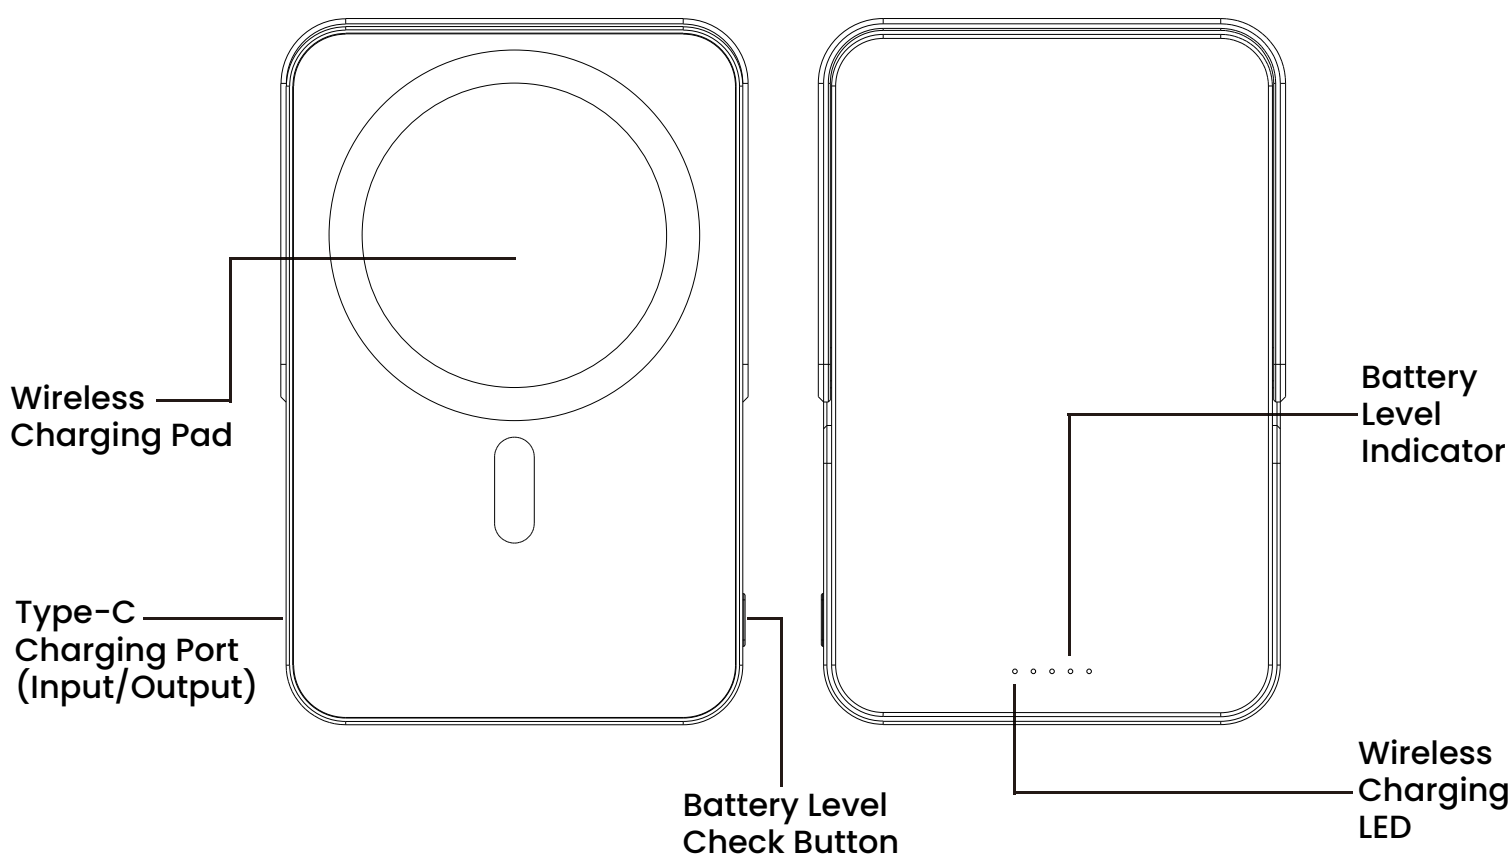

## **Wireless Charging Instructions**

To charge an iPhone that supports wireless charging, place your iPhone on the product as depicted in the accompanying figure. It will automatically align with the wireless charging pad. The power bank is designed to detect the device without manual intervention.

 This product supports wireless discharge that operates without the need for pressing any buttons.

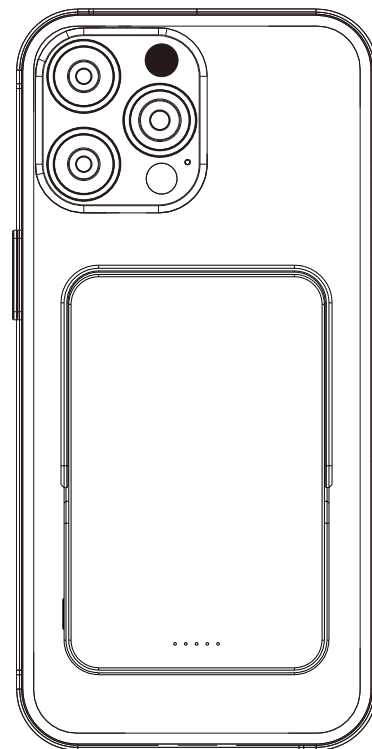


## **Features**

- 1. Safety:** The product features multiple protection mechanisms, ensuring reliable safeguarding against overcharging, overheating, short-circuiting, and other unusual conditions, thus maintaining the integrity of both the digital devices and the power bank itself.
- 2. Compatibility:** Equipped with an integrated intelligent charging controller, this product is compatible with a wide range of mainstream mobile phones and digital devices.
- 3. Quality:** The product is constructed with premium lithium-ion polymer batteries and sophisticated charge-discharge control systems, ensuring superior performance and durability.

## **Charging Indicator**

 The power bank can be charged using the included adapter and charging cable through the Type-C port. During the charging process, the battery level is indicated by the LEDs as follows:

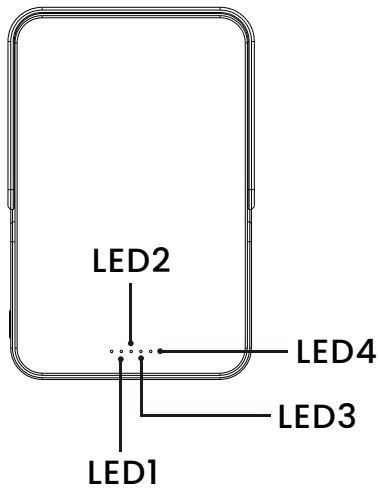

Battery Level	LED1	LED2	LED3	LED4
0-25 %	Blinking	Off	Off	Off
25-50 %	On	Blinking	Off	Off
50-75 %	On	On	Blinking	Off
75-99 %	On	On	On	Blinking
Fully Charged	On	On	On	On
Charging Error	Blinking	Blinking	Blinking	Blinking

## Charging Other Devices

This product supports both wired and wireless charging other devices simultaneously. During the discharging process, the battery level is indicated by the LEDs as follows:

Battery Level	LED1	LED2	LED3	LED4
Undervoltage	Off	Off	Off	Off
0-25 %	On	Off	Off	Off
25-50 %	On	On	Off	Off
50-75 %	On	On	On	Off

When a phone is placed on the wireless charging pad, the wireless charging function is automatically activated. There is no need to press the battery level check button. However, you can press this button or connect the power bank to a charger to enable wireless charging; this will cause the wireless charging LED to light up, indicating that it is in standby mode. The statuses of the wireless charging LED and their descriptions are as follows:

Wireless Charging Status	LED Status
Standby	On
Working	Solid on
Error	Blinking
Off	Off

You can press the battery level check button to activate the wireless charging feature when the power bank is not charging. Wireless charging will automatically deactivate approximately 3 seconds after a phone is removed from the charging pad. If the phone is detached from the charging pad, wireless charging will turn off after about 5 seconds. When the power bank enters sleep mode, it automatically detects whether a device that supports wireless charging is placed on the charging pad. If detected, the power bank automatically enables the wireless charging function to charge the device.

**Sleep Mode:** The wireless charging and battery level LEDs are all off.

## Warnings

Improper use of this product can lead to battery failure, overheating, and even fire or explosion. To prevent personal and property injury, please adhere to the following guidelines:

1. Always charge this product with a charger that conforms to local safety standards to prevent electric shock or damage to the battery.
2. Avoid using the product (both charging and discharging) in poorly ventilated areas, such as inside clothes, under pillows, bedding, or similar items.

- 3. Handling and Storage:** Do not disassemble, squeeze, puncture, or expose this product to water, fire, or heat sources such as stoves or heaters, particularly in environments with temperatures exceeding 140°F (60°C).
- 4. Damage Response:** If the product shows signs of deformation, leaking, overheating, or similar issues, cease usage immediately and dispose of it according to proper safety procedures.
- 5. Disposal:** Dispose of the power bank, battery, and associated accessories in accordance with local regulations. Do not treat these items as regular household waste as improper disposal may lead to battery explosion risks.
- 6. Battery Information:** This product contains an integrated battery that should not be removed. Do not disassemble this product or attempt to replace the battery yourself without professional assistance.
- 7. Safety Precautions:** To prevent accidents, always keep this product out of the reach of children.

## **Precautions**

- 1.** Please fully charge the product before the first use using an adapter and charging cable that comply with the necessary specifications.
- 2.** Utilize the power bank for wired charging as required.
- 3.** Keep the wireless charging pad clean and clear of any foreign objects. If using a protective case on your mobile phone, ensure it is non-metallic and not thicker than 3 mm.
- 4.** Ensure that someone is present during charging and unplug the power supply if you plan to be away for an extended period.
- 5.** Disconnect the charging cable once the product is fully charged or once charging of the mobile phone is complete to avoid damage due to prolonged connection.
- 6.** If the battery level does not display after pressing the button, the power bank may be in a protection state. Charge the power bank

to restore its functionality.

**7.** Maintain the power level of this product at about 50 % when not in use for extended periods, and store it in a cool and dry environment to maximize battery life.

**8.** Keep the power bank away from magnetic cards like ID and bank cards to prevent demagnetization.

**9.** For safety, maintain a distance of at least 20 cm from implanted medical devices such as pacemakers and cochlear implants.

## Specifications

Product Name	Powerology 10000mAh MagSafe Power Bank with Glass Surface
SKU	PPBCHA36
Battery	Li-ion 10000mAh
Type-C Input	5V/3A, 9V/2A, 18W
Type-C Output	5V/3A, 9V/2.22A, 12V/1.67A, 20W
Wireless Output	15W
Simultaneous wired and wireless output	10W Max.
Operating Temperature	-10°C to 45°C
Sensing Distance	≤3mm-6mm
Product Dimension	106.7×71.5×16mm



## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
**powerology.me/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology\_official**

Facebook: **powerology.ME**