



**Powerology**

## **10000mAh Wall Charger MagSafe Power Bank**

SKU: PPBCHA80



# Table of Contents

Overview	2
Specifications	2
Schematic View	3
Instructions for Use	3
Safety Warnings	4
Material Contents	5
Troubleshooting	7
Disposal	7
Warranty	8
Contact Us	8

## Overview

### 1. Indicator Light During Charging:

**1.1** When the charger is connected, the indicator light will flash to show that charging is in progress.

**1.2** If a fast charging input is detected, the first indicator light will turn green.

**1.3** Once fully charged, the green light will remain on for an extended period.

**1.4** Disconnect the charger after the battery is fully charged.

### 2. Indicator Light When Using as a Power Bank:

**2.1** When a device is connected for charging, the indicator light will turn on, showing that power is being supplied.


**2.2** If fast charging output is detected, the fast charging indicator light will turn green.

## Specifications

Battery Type	Lithium Polymer
Battery Capacity	10000mAh (5000mAh x2)
AC Input	AC 240-100V, 60/50Hz
Type-C Input	5V/3A, 9V/3A, 12V/2.9A, 15V/2.33A, 20V/1.75A, 35W Max
Type-C Output	5V/3A, 9V/3A, 12V/2.9A, 15V/2.33A, 20V/1.75A, 35W Max
Lightning Input	5V/9 ,2.4V/3A, 12V/2.9A, 15V/2.33A, 20V/1.75A, 35W Max
Lightning Output	5V/3A, 9V/3A, 12V/2.9A, 15V/2.33A, 20V/1.75A, 35W Max
USB-A Output	5V/3A, 9V/2A, 10V/2.25A, 12V/1.5A, 22.5W Max
Wireless Output	5W/7.5W/ 10W/15W Max

Product Size	29× 63 × 98mm
Model Number	PP080
Standard	GB 2022-4943.1, GB 2022-31241, GB/T2021-9254.1, GB 202-17625.1

## Schematic View

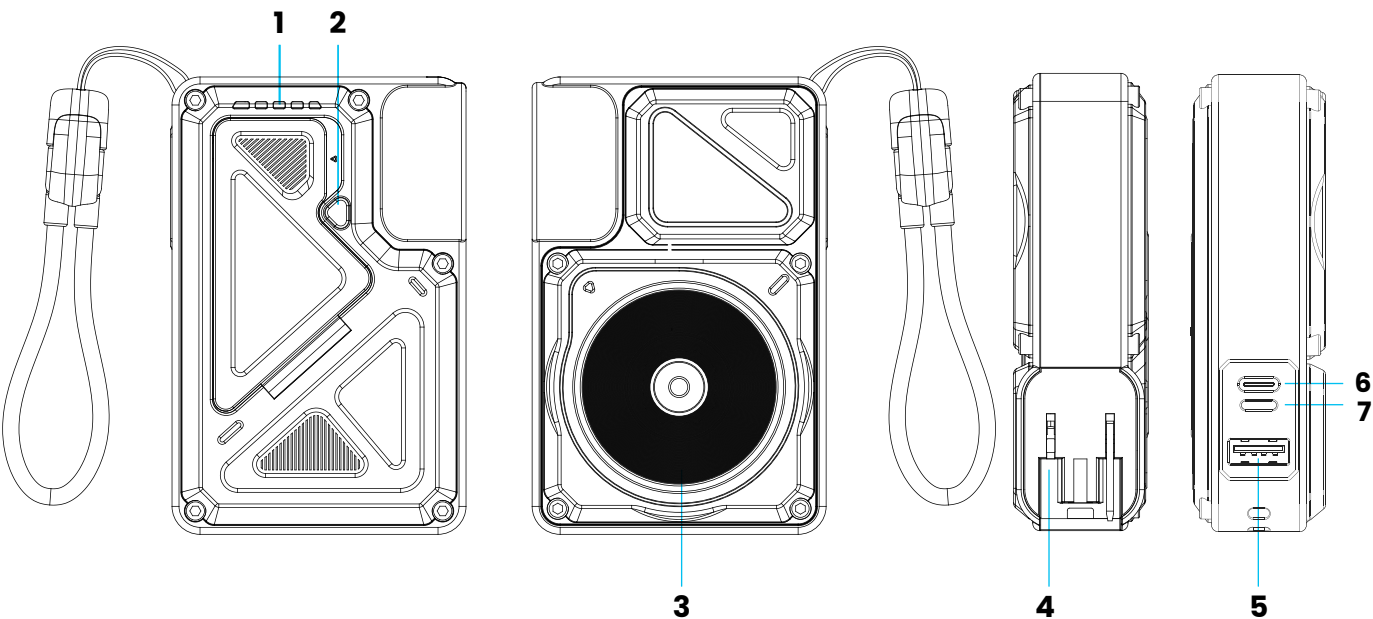

- 1. Indicator Light
- 2. Power Button
- 3. Wireless Output
- 4. AC Input
- 5. USB Output
- 6. USB-C Input/Output
- 7. Lightning Port (Input/Output)

## Instructions for Use

- 1. Use a USB-C cable with a compatible connector to charge various digital devices using the power bank.
- 2. When the battery level is low, recharge the power bank using a compatible charging cable via a USB port on a computer, AC adapter,

or car charger.

**Important Safety Notice:** Due to the weight of the power bank, do not suspend it by the charging cable while charging your phone, as this may cause damage.

### **3. Charging the Power Bank:**

**3.1** Connect the charger to the power bank. The indicator light will flash while charging.

**3.2** If fast charging input is detected, the first indicator light will turn green.

**3.3** Once fully charged, the green light will remain on for an extended period. Disconnect the charger once charging is complete.

### **4. Using the Power Bank to Charge Other Devices:**

**4.1** Connect a device to the power bank for charging. The indicator light will turn on to confirm power output.

**4.2** If fast charging output is detected, the fast charging indicator light will turn green.

## **Safety Warnings**

**1.** Place the product on a stable, flat surface during use. If direct contact with the human body is necessary, limit it to less than 10 seconds.

**2.** The recommended temperature range is 0°C to 35°C. Avoid using the product in environments above 35°C or below 0°C to prevent malfunctions.

**3.** Do not expose the product to water, fire, or extreme heat.

**4.** Do not clean the product with a damp cloth, as this may cause leakage or short circuits.

**5.** Do not use the product if it has been submerged in water.

**6.** Keep the product uncovered and free from obstructions like paper

or fabric to allow proper cooling.

**7.** Do not leave the product unattended while in use.

**8.** Do not disassemble, modify, or attempt repairs—the product contains no user-serviceable parts.

**9.** Handle with care. Avoid dropping, shaking, knocking, or squeezing the product.

**10.** Prevent short circuits by keeping battery terminals away from metal objects.

**11.** Ensure charger compatibility by using a power adapter with the correct output voltage to prevent overload, fire, or damage.

**12.** Unplug the charger once the product is fully charged.

**13.** If the product emits odor, overheats, changes color, deforms, or leaks, stop using it immediately.

**14.** If battery replacement is required, use only the same or an equivalent battery type.

**15.** Battery replacement must be performed only by qualified personnel—do not attempt it yourself.

**16.** Do not expose the battery to direct sunlight, open flames, or extreme heat, as this may cause overheating or explosion.

**17.** Keep the product out of reach of children to prevent accidents or misuse.

## **Material Contents**

When disposing of this product, do not discard it with regular household waste. Instead, take it to a government-designated recycling center to ensure proper disposal and contribute to environmental protection.

Part Name	Pb	Cd	Hg	Cr(VI)	PBBS	PBDES
Shell	○	○	○	○	○	○
PCB	×	○	○	○	○	○
Battery	○	○	○	○	×	×
Screw	○	○	○	○	×	×
Metal Components	○	○	○	○	--	--
Wire	○	○	○	○	○	○

This table is prepared in accordance with the provisions of SJ/T11364.

○ : Indicates that the content of toxic and harmful substances in all homogeneous materials of the component is within the limit requirements specified in GB/T 26572.

× : Components marked with X in the table indicate that the content of toxic and harmful substances exceeds the limit requirements specified in GB/T 26572 in at least one homogeneous material. Due to technical constraints, these substances cannot be replaced at present. However, with technological advancements, future replacements or improvements will be implemented.

-- : According to GB/T 26572, there are no requirements for the content of PBBs (Polybrominated Biphenyls) and PBDEs (Polybrominated Diphenyl Ethers) in metal components.



The environmental protection period of this product under normal use is 5 years.

1. The hazardous substances listed in this table do not pose a risk to human health or the environment under normal product usage.
2. This table provides consumers and recycling professionals with information about the presence of hazardous substances in the product's components. This information supports proper waste disposal and recycling efforts.

## Troubleshooting

Problem	Possible Cause	Solutions
The indicator lights do not show a full charge status even after extended charging.	1. Not enough charging time. 2. Adapter or product malfunction.	1. Charge the product for 12 hours. 2. Contact a service center.
The remaining battery power cannot be detected.	1. No remaining power. 2. Power button or indicator malfunction. 3. Power failure of the product.	1. Charge the product. 2. Contact a service center.
The product is unable to charge other devices.	1. Low power of the product. 2. No power transmission in the USB cable or the adapter. 3. Improper choice of adapters. 4. The power management system of the product prohibits charging for the device.	1. Charge the product. 2. Try a different USB cable or adapter. 3. Use a proper connector compatible with the product's interface. 4. The product may be incompatible with the device.
The product can charge other devices but does not fully charge them.	The battery of the product is used up.	Charge the product.
When charging other devices with the remaining power, the product suddenly stops working or fails to provide any power.	External short circuit or overload of the product leads to an automatic shutdown for self-protection.	Charge to reactivate the product.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
**powerology.me/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology\_official**

Facebook: **powerology.ME**