



**Powerology**

**100" Motorised Projector Screen**

SKU: P100MPS

Important Safety Instructions.....	2
Warning.....	2
Cleaning.....	3
Auto Leveling System.....	3
Package Contents.....	3
Initial Setup.....	3
Remote Controller Instructions.....	5
Warranty.....	6
Contact Us.....	6

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Important Safety Instructions



**WARNING:** Please adhere strictly to the following safety guidelines. Misuse may lead to mechanical damage or personal injury.

**Precautions:**

- 1. Handle with care to prevent damage.
- 2. When unpacking the screen, maintain its horizontal orientation to avoid damage. Do not install on uneven or sloped surfaces.
- 3. Ensure the screen is positioned away from any path to avoid contact with passing objects.
- 4. The product contains a robust spring mechanism; do not attempt to disassemble it on your own.
- 5. Avoid scratching or folding the screen, as this could result in creases that impair usability.
- 6. Attempt to place the screen into its casing after use to prevent it from being exposed to dust which will affect the quality of the projection. Avoid frequent adjustments in short intervals, as this may lead to overheating of the motor system and reduce the motor's lifespan.
- 7. Please read the manual thoroughly before operation.
- 8. Installation and maintenance should be conducted by qualified service personnel.

## Warning



-  Prevent any debris from entering the screen casing, as this could cause damage to the screen.
-  Do not place your hand inside the screen enclosure while it is in operation to avoid the risk of injury.

## Cleaning

Utilize a soft, non-abrasive cloth, isopropyl alcohol, and neutral soapy water to gently cleanse the screen surface and housing. Refrain from employing any chemical or abrasive agents to clean the screen, as this could potentially lead to damage.

## Auto Leveling System

- 1. The screen incorporates an automatic leveling system. As the screen extends to its maximum height, it will automatically descend by 5cm to maintain a flat surface.
- 2. The screen's cable pulling mechanism is composed of a specially formulated material with optimal elasticity and durability, enabling automatic adjustments in response to the tension along the screen's black border.

## Package Contents



Projector Screen



Power Cable



Remote Controller




Projector USB Link

## Initial Setup

- 1. Adjust the screen’s height by following these steps:  
**Note:** Do not perform this action unless it is necessary.  
**1.1** Raise the screen to the maximum height, long press the “Stop button” of the remote control for 5 seconds. The buzzer will emit a quick ring, indicating that the The buzzer will emit a quick ring,

indicating that the factory-set upper limit has been successfully cleared.

**1.2** After positioning the screen to the desired height, simultaneously press the “Stop button” and “Up button” of the remote controller at the same time. Subsequently the buzzer emits a ring that lasts for 1 second. Repeat the process, immediately. Afterwards the new height is set successfully

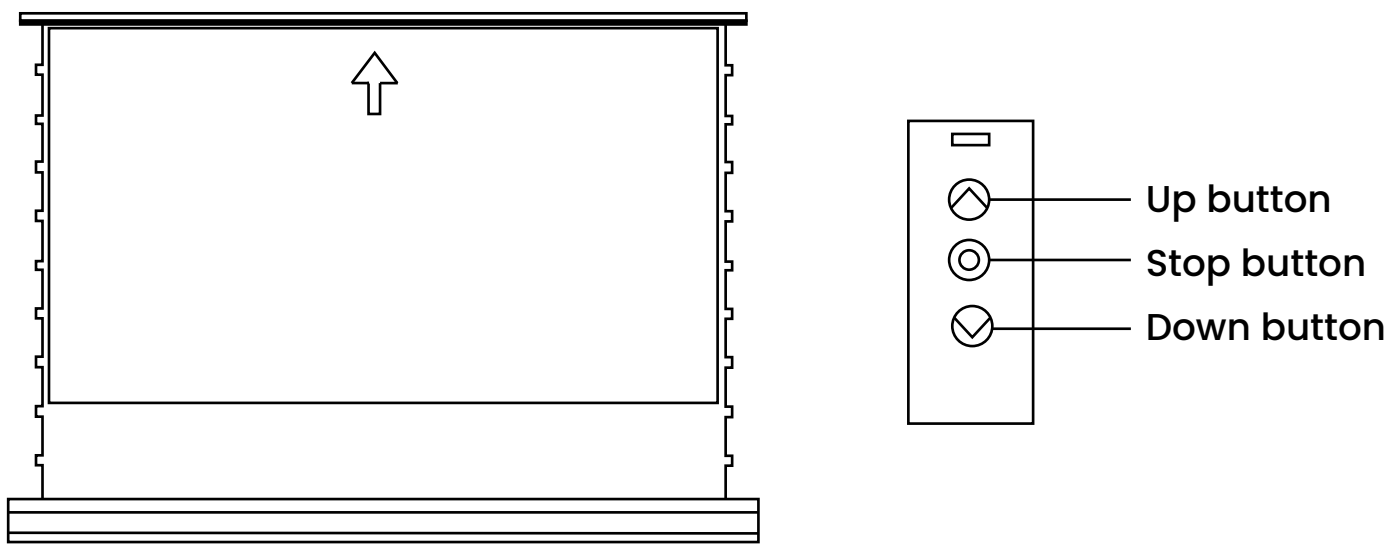

- 2.** Turn on the projector and insert the USB connector into the projector's rear USB port.
- 3.** Switch off the projector's screen for about 5 seconds, then turn it back on.
- 4.** Press and hold the USB connector setting button for more than 5 seconds. Once the screen beeps, indicating successful pairing, unplug the USB and reconnect it to the projector's port. Turning off the projector will lower the screen, and turning it on will raise the screen.



**Note:** The screen is calibrated before leaving the factory. After receiving the product, please do not disassemble or recalibrate this product on your own.

## Remote Controller Instructions



**A.** Up Button: Pressing this key will raise the screen to the pre-set height.

**B.** Stop Button: By pressing this button, the screen will halt at any chosen position.

**C.** Down Button: Pressing this button will cause the screen to automatically retract into its housing.

Up button  
Down button



## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **[powerology.me/warranty](https://powerology.me/warranty)** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
**[powerology.me/warranty](https://powerology.me/warranty)**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **[hey@powerology.me](mailto:hey@powerology.me)**  
Website: **[powerology.me](https://powerology.me)**  
Instagram: **[powerology\\_official](https://www.instagram.com/powerology_official)**  
Facebook: **[powerology.ME](https://www.facebook.com/powerology.ME)**