

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**Multi-Function Slushie Maker**

SKU: PD-LFST143

# Table of Contents

Precautions	2
Product Components	5
Specifications	6
Before First Use	6
Using the Control Panel	6
Temperature Control Setting	7
Troubleshooting Tips	8
Preset Values	9
Required Sugar Content	9
Tips and Tricks	10
Using the Frozen Drink Maker	11
Care and Maintenance	14
Resetting the Motor	15
Correct Disposal	16
Warranty	17
Contact Us	17

## Precautions

Read and review the instructions for operation and use.



Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning associated with this symbol is ignored.



Combustible material: May burst if heated. (Indicated by a flame symbol with a white background, surrounded by a red diamond.)





Flammable material: (Indicated by a flame symbol with a yellow background, surrounded by a black triangle.)



For indoor and household use only.

When using electrical appliances, basic safety precautions should always be followed, including the following:

 **Danger:** Risk of fire or explosion. Flammable refrigerant used. Do not puncture refrigerant tubing. Dispose of the product properly in accordance with applicable federal or local regulations pertaining to flammable refrigerants.

 **Warning:** To reduce the risk of injury, fire, electrical shock, or property damage, basic safety precautions must always be followed, including the following warnings and instructions. Do not use the appliance for anything other than its intended use.

1. Read all instructions prior to using the appliance and its accessories.
2. Carefully follow all warnings and instructions. This unit contains electrical connections and moving parts that may present a risk to the user.
3. Take inventory of all parts to ensure you have all necessary components to safely operate the appliance.

- 4.** Turn the appliance off and unplug it from the outlet when not in use, before assembling or disassembling parts, and before cleaning. Always grasp the plug by the body to unplug it, never pull on the flexible cord.
- 5.** Before use, wash all parts that may contact food. Follow the washing instructions provided in the manual.
- 6.** Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions, has been dropped, or is damaged in any way. This appliance has no user-serviceable parts. If damaged, contact customer service.
- 7.** This appliance has important markings on the plug. The entire supply cord is not replaceable. If damaged, please contact service.
- 8.** Do not use extension cords with this appliance.
- 9.** To protect against the risk of electric shock, do not submerge the appliance or allow the power cord to contact any liquid.
- 10.** Do not allow the cord to hang over the edges of tables or counters, as it may become snagged and pull the appliance off the surface.
- 11.** Do not allow the unit or the cord to contact hot surfaces, such as stoves or other heating appliances.
- 12.** Always use the appliance on a dry, level surface.
- 13.** Do not allow children to operate this appliance or use it as a toy. Close supervision is necessary when the appliance is near children.
- 14.** This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction regarding safe use by a responsible person.
- 15.** Only use attachments and accessories that are provided with the product or recommended by the manufacturer. The use of unauthorized attachments may cause fire, electric shock, or injury.
- 16.** Keep hands, hair, and clothing away from the container during loading and operation.
- 17.** Avoid contact with moving parts during operation and handling of the appliance.

- 18.** Always ensure that ventilation openings in the appliance or built-in structure remain unobstructed.
- 19.** Do not use mechanical devices or other methods to accelerate the defrosting process, unless recommended by the manufacturer.
- 20.** Do not damage the refrigerant circuit. This warning applies only to appliances with accessible refrigerant circuits.
- 21.** Do not use electrical appliances inside the food storage compartments of the appliance unless they are of the type recommended by the manufacturer.
- 22.** Do not add frozen fruit, frozen vegetables, or ice to the unit.
- 23.** Do not add hot ingredients to the unit.
- 24.** Do not submerge the motor base or control panel in water or any other liquids.
- 25.** Do not fill the vessel past the MAX FILL line.
- 26.** Never leave the appliance unattended while in use.
- 27.** Before operation, ensure all utensils are removed from the containers. Failure to do so may cause containers to shatter, resulting in potential injury or property damage.
- 28.** Do not carry the unit by the bail handle. Always grasp both sides of the unit under the motor base for lifting.
- 29.** Do not process hard, loose ingredients or ice. This appliance is not intended for processing loose frozen fruit, solid ice blocks, or ice cubes.
- 30.** Always keep the unit upright.
- 31.** After unboxing the unit for the first time, keep it upright for at least 2 hours before operating to allow refrigerant oils to settle in the air conditioning system for optimal performance.
- 32.** This appliance is not intended for use by persons, including children, with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised or instructed by a responsible person. Children should be supervised to ensure they do not play with the appliance.
- 33.** The supply cord cannot be replaced. If damaged, the appliance should be discarded.

- 34.** Keep the rear and sides of the unit open to ensure the compressor operates properly and does not overheat.
- 35.** Ensure both sides and the back of the appliance are at least four inches away from walls during use.
- 36.** Children should be supervised to ensure they do not play with the appliance.
- 37.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Note:** The temperature displayed is the temperature detected by the temperature control probe and may differ slightly from the actual temperature of the food.

## Product Components



## Specifications

Rated Power	200W
Rated Voltage	220-240V
Rated Frequency	50Hz
Capacity	2.6L
Power Cord	UK 3-Pin Plug
Flammable Refrigerant	R290
Net Weight	10.5kg
Product Size	17.6×40.7× 40.9cm
Model Number	LFS143

## Before First Use








**Important:** Please review all warnings at the beginning of this guide before proceeding.

1. Remove all packaging materials from the unit.
2. Wash all parts with warm, soapy water.
3. Rinse all parts thoroughly and allow them to air-dry completely.
4. Wipe the control panel, motor base, and evaporator with a soft cloth. Allow these components to dry completely before use.
5. Place the unit on a countertop and allow it to sit for at least 2 hours before operating. This step ensures the refrigerant settles in the condenser for optimal and safe performance.

**Note:** All attachments are BPA-free. Accessories are dishwasher safe, but should NOT be cleaned with a heated dry cycle.

## Using the Control Panel

Assemble the unit, add the appropriate ingredients into the tank, and plug the wire into the correct power source.

1. The LED light screen will display "OFF," indicating that the machine is in the shutdown state.
2. Press and hold the (  ) key for 3 seconds to enter standby mode. The LED light screen will display "--".
3. Press the (  ) key to cycle through the available functions. Each function corresponds to different temperature settings. After 3 seconds, the machine will automatically enter the selected mode and begin operation.
4. In working mode, you can adjust the temperature by pressing the add or subtract keys.
5. In working mode, press the (  ) key to exit and return to standby mode.
6. The (  ) key can only be used in standby mode. In this mode, only the motor will operate, and the compressor will remain inactive. The maximum runtime in this mode is 180 seconds.
7. In standby mode, pressing the (  ) key allows you to set the function and reservation time. The reservation time can be set to a minimum of 1 hour and a maximum of 12 hours. Once the reservation time is reached, the machine will automatically start working.
8. In working mode, press and hold the (  ) key to enter standby mode. In standby mode, press and hold the (  ) key to turn the machine off ("OFF").
9. If no operation is performed in standby mode, the machine will automatically shut down after 15 seconds.
10. The machine features 6 unique preset functions: Chilled Juice, Milkshake, Frappe, Spiked Slush, Slush, and Ice Cream. These presets determine the optimal temperature for creating the perfect frozen drink.

## Temperature Control Setting

Each preset starts at a default/optimal temperature to achieve the ideal texture. If desired, adjust the temperature to achieve the perfect frozen drink texture.

**1.** For frozen drinks, decrease the temperature by pressing the minus (⊖) button on the control panel.

**2.** For thicker, colder frozen drinks, increase the temperature by pressing the plus (⊕) button on the control panel.

**Attention:** Temperature settings can only be adjusted while the program is active. The temperature setting can be increased by one lamp display at a time, and reduced to a single lamp display. Each lamp display represents approximately 1°C.

## Troubleshooting Tips

Why is my drink not freezing?

If your recipe hasn't reached the desired texture after 60 minutes, try increasing the temperature by one level. Wait for 10 to 15 minutes and then check the texture again to see if it has improved.

Why is there a problem with the texture of the drink?

For the best dispensing experience, ensure that the unit is filled to the maximum fill line and is running properly. If the slush is not dispensing smoothly, decrease the temperature by pressing the minus (-) button on the control panel. A lower temperature will help the frozen drinks dispense more smoothly.

What do the error codes mean?

If the display shows an error code, here's what they mean:

**E0:** The safety switch is not closed. Reassemble the vessel, or seek professional assistance to open the rear cover for repair.

**E1:** The temperature probe has become disconnected due to poor contact. Professional repair is required, and the rear cover must be opened.

**E2:** The temperature probe is short-circuited. Professional repair is needed by opening the rear cover.

## Preset Values

Each preset is set to a default or optimal temperature for achieving the ideal texture. If needed, you can adjust the temperature to suit your preferences and achieve the perfect texture for your frozen drink.

Drink	Default Temperature	Designed For	Ingredients
Chilled Juice	6°C	Naturally sweetened beverages	Orange juice, apple cider
Milkshake	-3°C	Dairy - and cream - based beverages	Chocolate milk, blended milkshake
Frappe	-4°C	Coffee shop enthusiasts who enjoy making frozen treats	Store - bought frappe
Slushie	-2°C	Transforming your everyday drinks into frozen delights	Soda, lemonade
Ice Cream	-6°C	Creating soft ice cream	240g cream + 80g sugar + 480g whole milk

## Required Sugar Content

Too little sugar or too much alcohol will prevent the slush from freezing properly. Follow the guidelines below to ensure perfect results every time. All ingredients must contain at least 4% sugar.

**Note:** Pre-frozen ingredients tend to taste sweeter. Don't worry if you think your drink might be too sweet; it won't taste as sweet once frozen and slushed into a frozen drink.

Refer to the drink or liquid nutrition label to ensure the sugar content meets the recommended minimums listed below:

Sugar Guidelines	
Serving Size	Minimum Total Sugar Amount:
0.5L (17 oz)	20g
1.6L (54 oz)	65g

**Note:** Sugar-free substitutes or artificial sweeteners will not contribute to meeting the required minimum or maximum sugar content.

## **Tips and Tricks**

- 1.** Ensure the unit is kept upright for at least 2 hours before its first use.
- 2.** Do not add hot ingredients.
- 3.** Do not add ice or solid ingredients, such as fruit, ice cream, or frozen fruit.
- 4.** Pre-frozen ingredients tend to taste sweeter. If concerned your drink may be too sweet, rest assured it will not taste as sweet once frozen and slushed.
- 5.** All ingredients must contain a minimum of 4% sugar.
- 6.** For optimal results, chill liquids or blended ingredients before adding them to the unit.
- 7.** For the frostiest results, chill serving glasses prior to dispensing the frozen drink.
- 8.** Adjust the temperature control setting to achieve your preferred frozen drink texture.
- 9.** When using the Milkshake or Frappe preset, dispense the contents within 30 minutes of the preset's completion to avoid a foamy output.
- 10.** For the best dispensing experience, fill the unit up to the maximum fill line (1.6L).
- 11.** The unit can operate continuously for up to 12 hours.
- 12.** All parts, except the motor base (including the evaporator), are dishwasher safe but should not be cleaned with a heated dry cycle.
- 13.** Input Guidelines: Minimum input: 0.5L (approx. 17 oz), Maximum input: 1.6L (approx. 54 oz)
- 14.** Important Notes:
  - 14.1** This unit is not a blender.
  - 14.2** Do not process solid blocks of ice or ice cubes.
  - 14.3** Do not make smoothies or process hard, loose ingredients.
  - 14.4** Do not attempt to blend or macerate non-liquid ingredients.


## Using the Frozen Drink Maker




**Important:** Please review all warnings at the beginning of this Owner's Guide before proceeding.

**Note:**


- a. A minimum of 0.5L input is required to operate the unit.
  - b. The maximum liquid capacity is 1.6L.
  - c. Do not add ice or solid ingredients, such as fruit, ice cream, or frozen fruit.
  - d. Do not add hot ingredients.
- 
1. Ensure all parts are fully cleaned, and place the motor on a flat, solid surface to ensure it is level.
  2. Install the condensation catch under the evaporator by sliding it into the rail grooves.

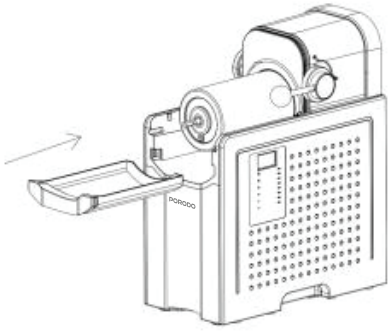


**3.** Install the auger by sliding it over the evaporator and rotating it until it securely fits onto the pin.

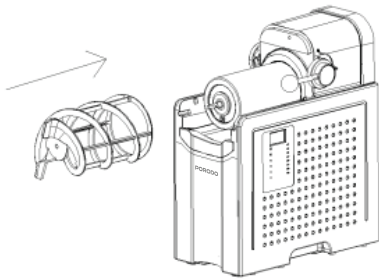


**4.** With the handle positioned upwards, slide the vessel over the installed auger and evaporator.

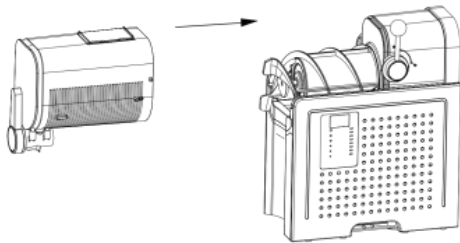

**5.** Lock the vessel in place by pushing the ball handle forward to seal the vessel.

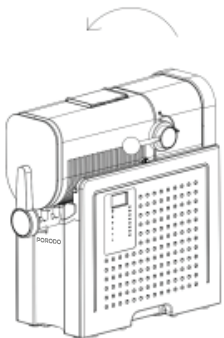

**6.** Insert the drip tray (with the mesh inside) in front of the motor base until it clicks into place.

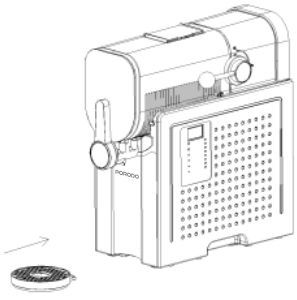

**Note:** Make sure the unit has been sitting upright on the countertop for at least 2 hours before its first use, allowing the refrigerant to settle in the condenser for optimal and safe operation.

**7.** Plug the unit into a power source.

**8.** Open the cover on top of the vessel.

**9.** Add liquids and/or blended ingredients through the charge door and close the cover securely.

**10.** Press and hold the menu key button for 3 seconds to enter standby mode.

**11.** Select your desired preset.

**12.** The preset will start at the default/optimal temperature for the ideal texture. If needed, adjust the temperature to achieve your perfect frozen drink texture.

**Note:**

**a.** The temperature control setting LED will light up and flash slowly while the frozen drink is freezing to your set temperature. Once the drink reaches the desired temperature, the LED light will stay steady, and the unit will continue running to maintain the ideal temperature, keeping the drink ready for dispensing.

**b.** Creating drinks may take 15 to 60 minutes depending on ingredients, volume, and starting temperature.

**c.** Pre-frozen ingredients tend to taste sweeter. If you're concerned your drink might be too sweet, don't worry—it won't taste as sweet once frozen and slushed into a frozen drink.

**13.** Place a cup on the drip tray, under the handle.

**14.** To dispense, turn the handle clockwise 90 degrees to the right. When the ingredients are finished, rotate the handle counterclockwise to close the discharge hole.

**15.** Enjoy your freshly created frozen drink.

**16.** The unit can operate continuously for up to 12 hours.

## Care and Maintenance

### 1. Using the Rinse Cycle

**Note:** Liquids from rinsing will dispense quickly from the vessel's pour spout. Ensure you use a large cup or bowl to collect this liquid.

**1.1** The rinse cycle agitates without cooling, allowing the unit to be rinsed effectively. After completing the rinse cycle, wash all parts by hand or in the dishwasher to ensure the unit is thoroughly cleaned after each use.

**1.2** Dispense any remaining frozen drink.

**1.3** Stop the current preset by pressing the CLEAN button.

**1.4** Add warm water (not exceeding 60°C) up to the vessel's maximum fill line (1.6L).

**1.5** Slowly dispense the water from the unit immediately after filling.

**1.6** Stop the cleaning cycle by pressing the CLEAN button again.

**1.7** Press the MENU KEY button to turn the unit off.

**Note:** If necessary, repeat the rinse cycle until all frozen drink residue is removed from the evaporator.

### 2. Disassembly and Cleaning

**2.1** For optimal cleaning results, it is recommended to perform the CLEAN cycle before disassembling and cleaning the unit.

**2.2** Unlock the bail handle by pulling it backward, and remove the vessel by gently pulling it off the unit. Ensure the vessel is tilted downward to prevent any remaining liquid from spilling out the back. Set the vessel aside.

**2.3** Slide the auger off the evaporator and set it aside.

**2.4** Wipe the evaporator with a sanitized or warm, damp cloth.

**2.5** Gently slide the condensation catch out of the unit, as there may be residual liquid inside. Set it aside.

**2.6** Wipe down the area underneath the evaporator with a sanitized or warm, damp cloth.

**2.7** If necessary, remove the drip tray and/or spout shroud.

**Note:** The drip tray cover can be removed for easy cleaning.

**2.8** Hand wash all parts in warm, soapy water, or place them in the dishwasher. If necessary, repeat this process until all parts are thoroughly cleaned.

**Note:** All parts, except the motor base and evaporator, are dishwasher safe and should be placed on the bottom rack. These parts should not be cleaned using the heated dry cycle.

**2.9** Wipe down the motor base with a sanitized or warm, damp cloth.

**2.10** Allow all parts to dry completely before reassembling and storing the unit.

### **3. Storing**

**3.1** Store the unit upright, ensuring all parts remain assembled. When moving the unit, always lift from the bottom of the motor base. Store the unit in a dry, well-ventilated area, out of reach of children.

**3.2** Do not store ingredients inside the vessel

## **Resetting the Motor**

This unit is equipped with a unique safety system designed to prevent damage to the motor and drive system in the event of an overload. If the unit becomes overloaded, the motor will be temporarily disabled. If this occurs, please follow the reset procedure outlined below:

**1.** Allow the unit to cool for approximately 15 minutes.

**2.** Remove all parts and accessories, ensuring that no ingredients are obstructing or jamming the auger.

**Important:** Ensure that the unit's maximum capacity is not exceeded, as this is the most common cause of appliance overload.

**3.** Do not process solid blocks of ice or ice cubes.

**4.** Do not make smoothies or process hard, loose ingredients.

## Correct Disposal



Directive 96/2002/EC

To help preserve the environment and protect human health, waste electrical and electronic equipment must be disposed of in accordance with specific regulations, involving both suppliers and users. Therefore, as indicated by the symbol on the rating label or packaging, your appliance should not be disposed of as unsorted municipal waste.

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**