



Powerology


VOIX ENC Neckband

SKU: PWA23WNKB

Table of Contents

| | |
|--------------------------|---|
| Schematic View | 2 |
| Specifications | 2 |
| Indicator Description | 3 |
| Pairing with Two Devices | 3 |
| Touch Control Operation | 3 |
| Key Operations | 3 |
| Disposal | 4 |
| Warranty | 5 |
| Contact Us | 5 |

Schematic View

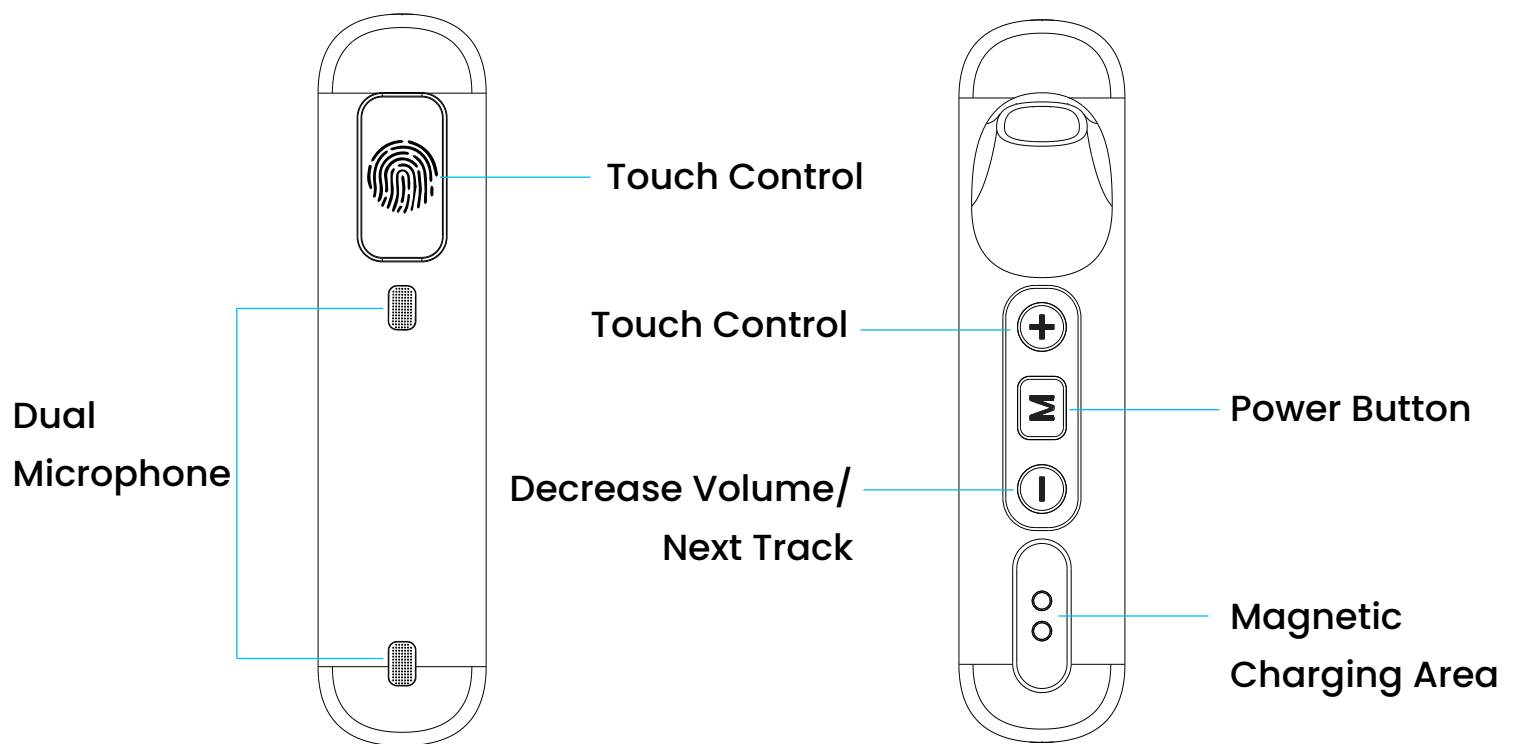

Specifications

| | |
|---------------------|-------------------|
| Battery Capacity | 500mAh |
| Music Playtime | 60H |
| Talking Time | 60H |
| Charging Interface | Magnetic Charging |
| Speaker Size | 10mm |
| Bluetooth | V6.0 |
| Bluetooth Range | >15M |
| Bluetooth Frequency | 2.4-2.480GHz |
| Working Temperature | -10°C to 60°C |
| Working Current | 5 to 15mA |
| Impedance | 32Ω |
| Charging | 5V 450mA |

Indicator Description

Power On: The blue light flashes three times.

Pairing: The red and blue lights alternate flashing.

Working: The light is turned off.

Charging: The red light is steady on.

Power Off: The red light flashes three times.

Fully Charged: The red light turns off.

Pairing with Two Devices

1. Complete the pairing process with the first mobile phone using the method outlined above, then disable Bluetooth on the first phone.
2. Pair the second mobile phone in the same manner. Once paired, re-enable Bluetooth on the first phone and select the "Pow_Voix" device to connect.
3. If the headset is not connected within 3 minutes while powered on, it will automatically shut down.

Touch Control Operation

Game/Music Mode: Double-click the power button.

Key Operations

Power On: Press and hold the power button for 2 seconds.

Power Off: Press and hold the power button for 4 seconds.

Answer the Phone: Press the power button when an incoming call is received.

Hang Up: Press the power button during a call to hang up.

Play/Pause Music: Press the power button while listening to music to toggle between play and pause.

Last Number Redial: Double-click the power button while the device is active.

Reject Calls: Press and hold the power button when an incoming call is received to reject it.

Call the Voice Assistant: Press and hold the power button for 2 seconds.

Previous Track: Press and hold the + button.


Increase Volume: Click the + button.

Next Track: Press and hold the – button.

Decrease Volume: Click the – button.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

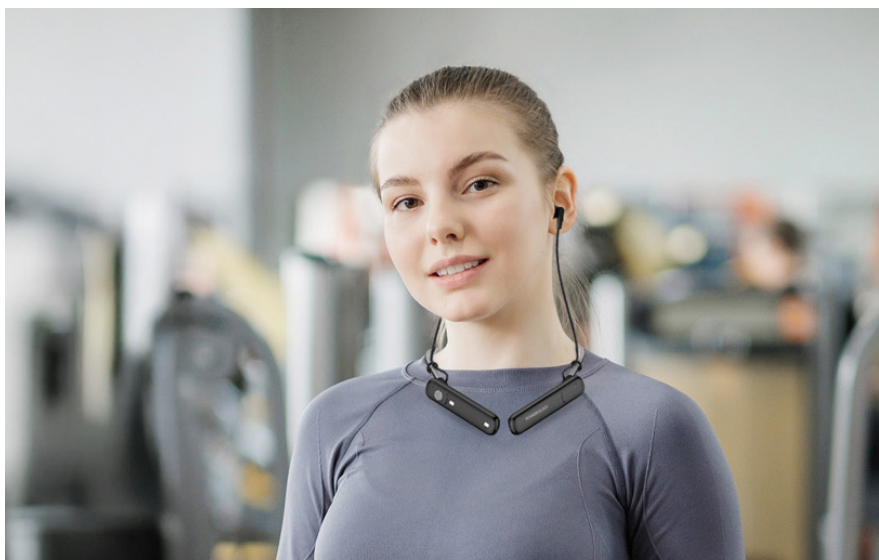

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
powerology.me/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology_official**

Facebook: **powerology.ME**