



**Powerology**

## **High Thrust Turbo Fan Blower**

 
SKU: PPBCHA84

# Table of Contents


Schematic View	2
Instructions for Use	2
Indicator Light Guide	4
Charging Instructions	5
Specifications	5
Safety Precautions	6
Important Notes	7
Care and Maintenance	7
Battery Disposal	8
Disclaimer	8
Disposal	8
Warranty	9
Contact Us	9

## Schematic View

- 1. Air Outlet
- 2. Air Inlet
- 3. Multi-function Button
- 4. Multi-function Indicator Light
- 5. DC Charging Port
- 6. Power Switch
- 7. DC Charger

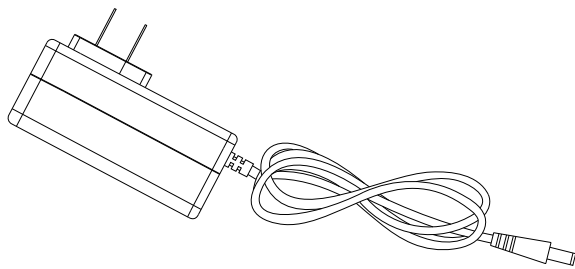

7

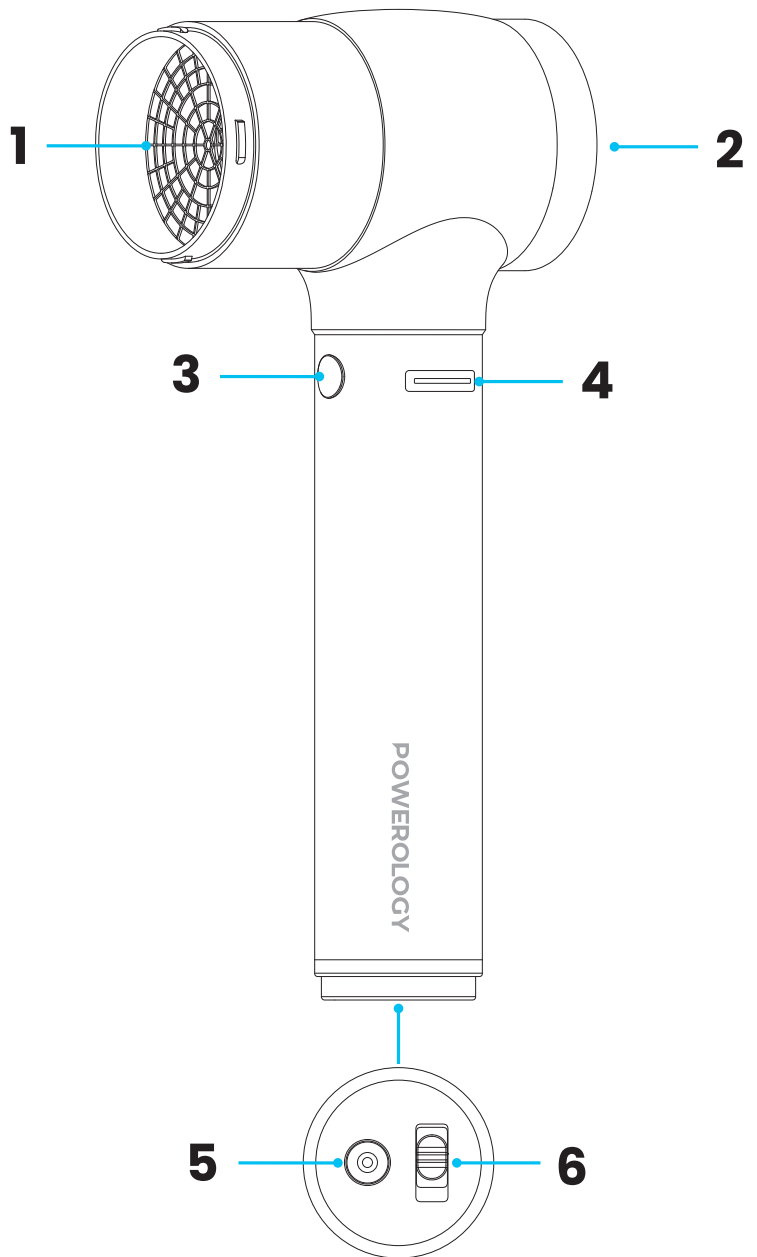 



## Instructions for Use

### 1. Power Activation:


**On:** Turn the power button to ON to activate standby mode.

**Off:** Turn it to OFF to shut down the machine. Displays battery level in standby mode.

  - 2.** Briefly press the multi-function button to cycle through the gears: 1st Gear, 2nd Gear, 3rd Gear, and Standby. These cycles occur in sequence.
- 3.** Press and hold the multi-function button to engage Turbo gear, which uses the energy progress bar.
- 4.** Release the button to exit Turbo gear and return to original settings.
- 5.** The energy progress bar shows consumption. If fully depleted, Turbo gear will disengage and the device will require recharging.
- 6.** The device can be used at any time during recharging, but continuing to use Turbo gear will consume more energy.

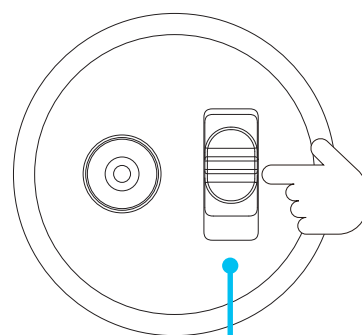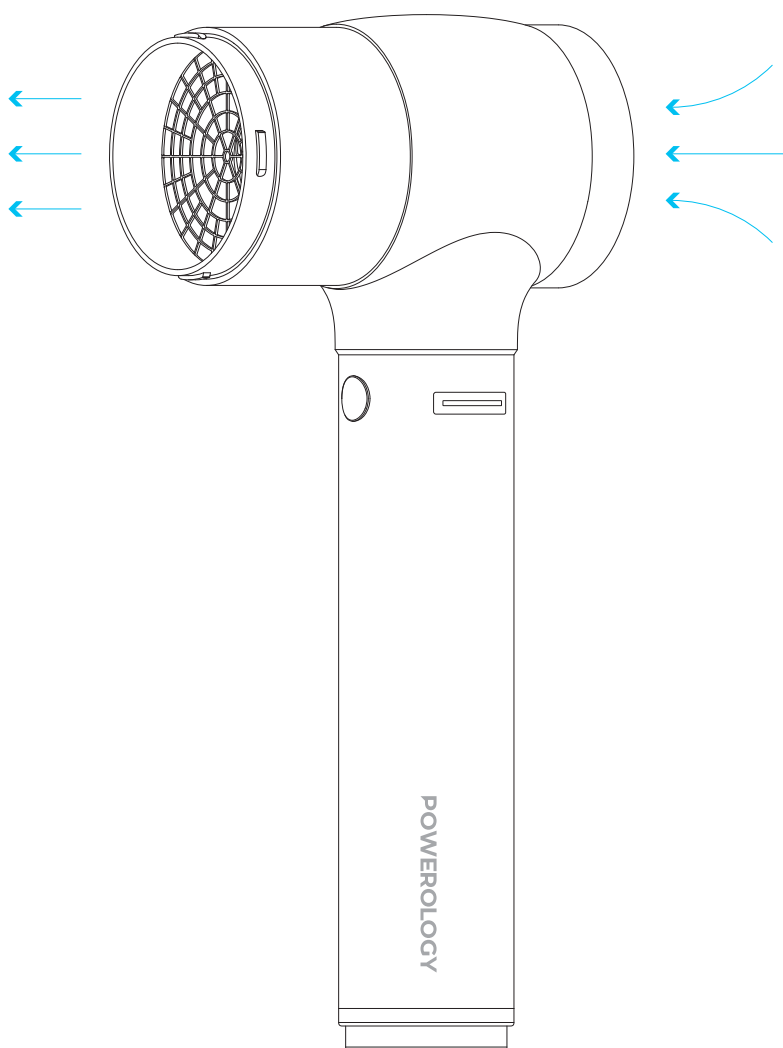


**Power switch**

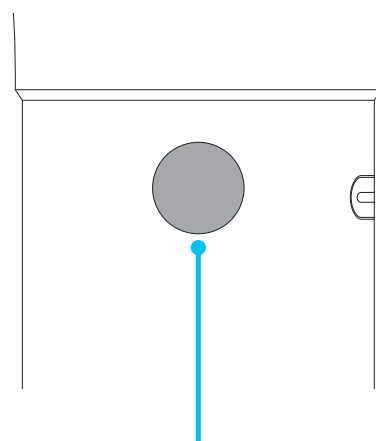

**Multi-function button**

 Indicator Light Guide

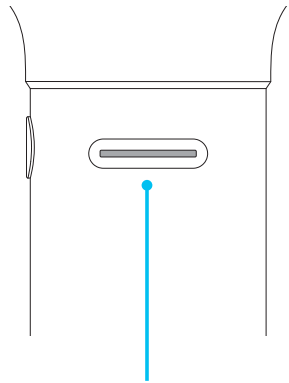


Multi-Function  
Indicator Light

Indicator Status		Descriptions	
Two blue lights are on.	<div></div>	The device operates in first gear.	
Four blue lights are on.	<div></div>	The device operates in second gear.	
Six blue lights are on.	<div></div>	The device operates in third gear.	
Six cyan lights are on.	<div></div>	The device operates in turbo gear.	
Battery Level Indicator Lights		Description	
Six green lights are always on indicating full charge.	<div></div>	80% to 100%	
Five green lights are always on indicating high charge.	<div></div>	60% to 80%	
Four yellow lights are always on indicating moderate charge.	<div></div>	40% to 60%	
Three yellow lights are always on indicating medium-low charge.	<div></div>	20% to 40%	
Two red lights are always on indicating low charge.	<div></div>	15% to 20%	
A red light flashes indicating critical battery level.	<div></div>	0% to 5%	

## Charging Instructions

1. Before the first use, ensure the battery is fully charged to optimize battery performance.
2. Make sure the power is turned off while charging, as this product does not support charging while in use.
3. During charging, the indicator lights will flash sequentially; when fully charged, all six lights will remain on.

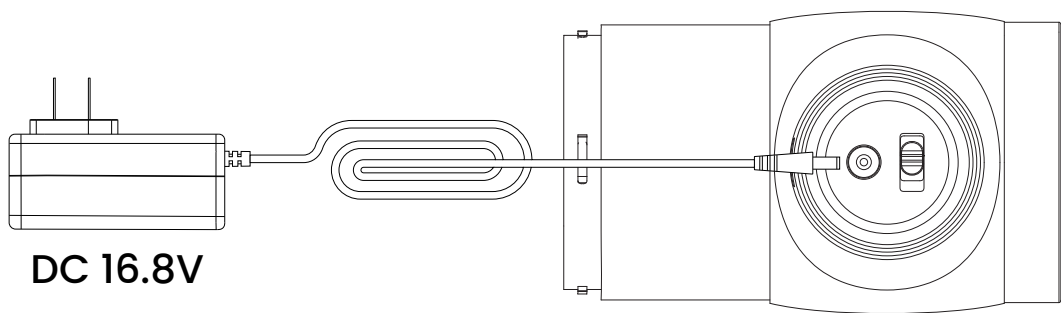

## Specifications

Battery Capacity	4000mAh, 16.8V
Input	16.8V/2A
Charging Time	2.5H
Power Cord	UK Plug
Motor Speed	50000 RPM
Motor Power	750W
Working Time	Up to 80 min
Product Weight	1000g
Operating Temperature	0°C to 40°C
Storage Temperature	-20°C to 60°C



## Safety Precautions

- 1.** Please carefully read this manual before using the product and store it safely to avoid fire, property damage, and personal injury.
- 2.** Avoid using the product with wet hands.
- 3.** Do not expose this product to splashing water or submerge it in water.
- 4.** Ensure the air inlet and outlet are not blocked during operation.
- 5.** Refrain from inserting foreign objects into the air blower or air inlet.
- 6.** Keep the product away from heat sources such as stoves, heaters, or inside a vehicle on a hot day.
- 7.** Avoid using near flammable substances such as petroleum gas, volatile agents, paint thinners, or sprays, to prevent explosions or fires.
- 8.** Do not drop or subject the product to impacts, as this can cause damage and abnormal operation.
- 9.** Handle the charging cable gently; do not pull, twist, squeeze, or modify it. Discontinue use immediately if the cable becomes hot or damaged.
- 10.** Stop using the product immediately if it emits abnormal noises, odors, operates at a high temperature, or if the fan blades rotate irregularly.
- 11.** Do not disassemble the product. If it has been accidentally disassembled and malfunctions, contact a service center for assistance.

## Important Notes

1. The air emitted from this product is cold. When using, keep your hair clear of the blower and air inlet to prevent hair from being sucked in.
2. Avoid directing the airflow towards your eyes, ears, mouth, or other sensitive areas during use.
3. Ensure the product is securely placed and does not move during operation.
4. Do not store this product within reach of children or pets.
5. Avoid storing this product in humid environments or locations prone to water splashes, such as near bathtubs or showers.
6. Operate this product only in environments where the temperature is neither too high nor too low.
7. Store the product in a well-ventilated, dry area away from direct sunlight.

## Care and Maintenance

**Danger:** This product is not waterproof.

1. Avoid using cleaning solutions such as alcohol, nail polish remover, or detergents. Instead, use a clean, soft cloth for cleaning.
2. Regularly detach and clean any attachments from the air blower and air inlet to ensure optimal performance.
3. Avoid pressing or rubbing the blower and air inlet with nails or any sharp objects to prevent damage.
4. Do not overcharge or excessively discharge the battery, as this can lead to damage to the battery core.



## **Battery Disposal**

The battery in this product is a recyclable resource. Please ensure it is handed over to a professional recycling organization. Before disposing of the appliance, ensure it is de-energized and the battery is removed for safe disposal.

### **Battery Removal Steps:**

1. Utilize professional tools to open the switch cover.
2. Detach the battery lead terminal from the motherboard.
3. Employ professional iron scissors to cut open the casing and extract the battery.

## **Disclaimer**

Thank you for choosing this product. The content of this document is crucial for your safety, legal rights, and responsibilities. Please read it carefully and adhere to the instructions for setting up and using the product correctly. Failure to follow these instructions and precautions may result in injury to you or others and may cause damage to this product or surrounding items. Illegal use of this product by any user is strictly prohibited. Users will be responsible for all actions related to the purchase and use of this product, and the company disclaims all liability for any risks or responsibilities, including direct or indirect third-party losses, during the product's debugging and use by the end customer.

## **Disposal**

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **[powerology.me/warranty](https://powerology.me/warranty)** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

**[powerology.me/warranty](https://powerology.me/warranty)**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **[hey@powerology.me](mailto:hey@powerology.me)**

Website: **[powerology.me](https://powerology.me)**

Instagram: **[powerology\\_official](https://www.instagram.com/powerology_official)**

Facebook: **[powerology.ME](https://www.facebook.com/powerology.ME)**