



Powerology

MAGBLEND PORTABLE BLENDER

SKU: PRPBB8301

Table of Contents

Product Overview	2
Specifications	2
Product Sections	3
Safety Precautions	3
Setup Guide	5
Light Display Setting	11
Processing Guide	12
Disposal	12
Warranty	13
Contact Us	13

Product Overview


The Powerology MagBlend Portable Blender is a compact, portable blending solution designed for convenience. With a 470ml capacity and a powerful 180W motor, it features a 6-blade design that ensures efficient blending, including powerful ice crushing. The blender is USB-C rechargeable, offering flexibility and portability, and it comes with a magnetic phone mount, allowing you to blend and follow recipes hands-free.

Specifications

Model	PRPBB8301
Input	5V/2A
Capacity	470mL
Motor Speed	18000RPM
Rated Power	180W
Battery Capacity	2000mAh
Charging Interface	Type-C
Material	ABS (Body), PCTG (Cup)
Product Size	84 x 84 x 300mm
Product Weight	885g

D Product sections

1. Cup lid handle with magnetic
2. Cup lid
3. Cup release button
4. Plastic juice cup
5. Function button
6. Main body
7. Switch button
8. Type-C charging port

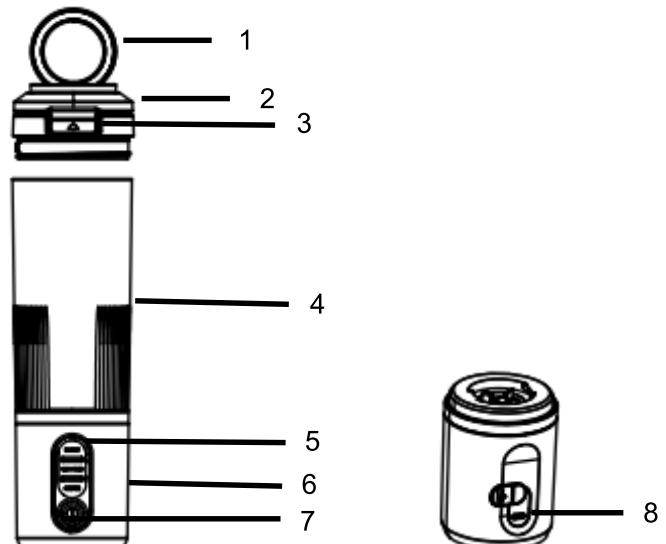

D Safety Precautions



(1)



(2)



(3)

Your safety and the safety of others is very important.

We have included critical safety information in this manual. Always read and follow these safety messages.

(1) This symbol warns of hazards that could result in severe injury or death.

(2) Immediate risk of death or serious injury if instructions are not followed.

(3) Potential for serious injury if instructions are not followed.

All safety messages indicate a potential hazard, explain how to reduce the risk, and outline what could happen if instructions are ignored.

When using electrical appliances, follow these basic safety precautions: Read all instructions carefully.

Switch off the appliance and disconnect from power before changing accessories or approaching moving parts.

Avoid contact with water or liquids when handling electrical parts.

Ensure the appliance is kept out of reach of children.

Remove adapter before assembling or disassembling parts and before cleaning. Always unplug the charger by grasping the plug, not the power cord.

Avoid contact with moving parts to prevent injury.

Do not operate any appliance or charger adapter with a damaged cord or plug.

Do not use attachments not recommended by the manufacturer as they may cause injury or malfunction.

Avoid using the appliance outdoors.

Keep hands and utensils out of the container while blending to prevent injury. A scraper may be used, but only when the unit is off.

When mixing hot liquids, use a tall container or mix in small batches to prevent spillage.

Use a legitimate TYPE C charger for appliances.

Do not incinerate damaged appliances. Batteries can explode in a fire.

Refer to the 'Care and Cleaning' section for instructions on cleaning surfaces that come in contact with food.

Be careful when liquid is poured into the food processor or blender, as hot liquids can be ejected due to sudden steaming.

Remove adapter before disassembling parts and always unplug by grasping the plug. Never pull by the cord.

Appliances may be used by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, provided they receive proper supervision or instructions on how to safely operate the appliance and understand the associated hazards.

Children must not play with the appliance.

This appliance is designed for use in households and similar environments, including:

Staff areas in shops, offices, and other workplaces

Farmhouses

Hotels, motels, and similar residential settings



Bed and breakfast establishments

The supply terminals must not be short-circuited.


Setup Guide

A. Product Charging and Assembly


Charging the Product

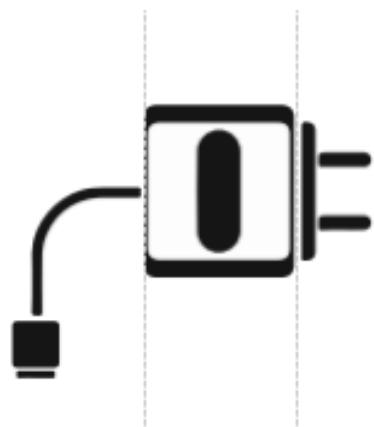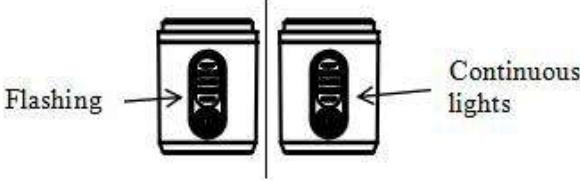	
<p>1. Open the charging cover on the back panel of the device.</p>	<p>2. Insert the Type-C charging cable into the charging port of the device.</p>
	
<p>3. Ensure the adapter used is a legal Type-C adapter connected to the correct voltage for charging.</p>	<p>4. The charging status light will pulse while charging. Once fully charged, the lights will remain on.</p>


B. Steps for Installing Juice Cups

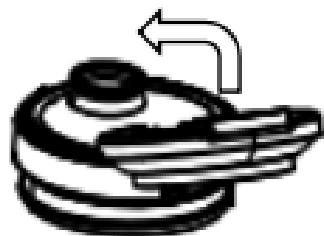


1. Pull down the cup lid and close it.

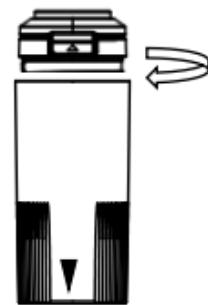

2. Grasp the cup body and rotate the cup lid clockwise to align the lid release button with the cup alignment arrow.


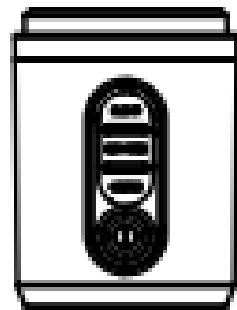


3. Place the device on a flat surface with the buttons facing upwards.

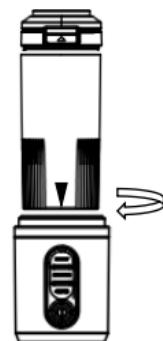



4. Rotate the cup lid clockwise to align the lid release button with the indicator arrow on the cup body.

C. Product Usage

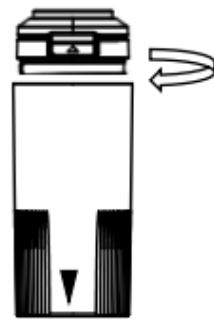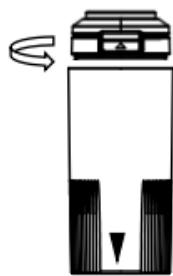


1. Rotate the cup lid counterclockwise to open it and place the ingredients into the juice cup according to the instructions.

2. Rotate the cup lid clockwise to align the lid release button with the indicator arrow on the cup body.

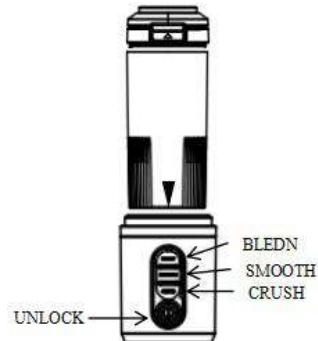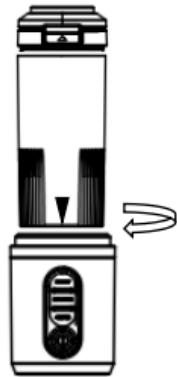


3. Rotate the cup lid clockwise to align the lid release button with the indicator arrow on the cup body.

4. Press the unlock button first, then select the corresponding button based on the ingredient recipe and press it once to start the machine.

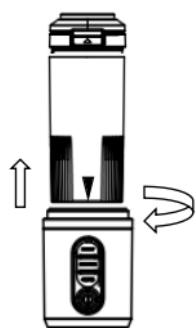

5. Rotate the cup counterclockwise and lift it upwards to remove the juice cup from the main unit.




6. Press the lid release button, and the lid will pop open, allowing you to drink the juice.

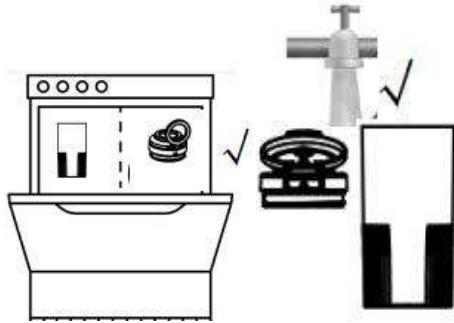

7. The cup lid and cup can be rinsed under the water valve or cleaned in the dishwasher.

8. The host cannot be rinsed under the water valve or cleaned in the dishwasher.

D. Magnetic Attraction of Lifting Ring

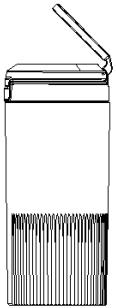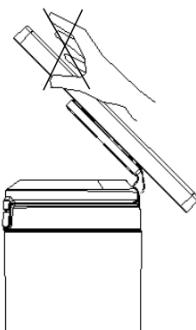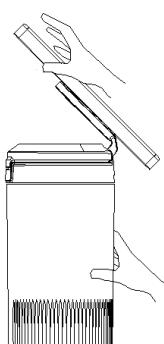	
<p>1. If you have chosen a cup lid with a magnetic suction ring, please understand the following instructions for using the magnetic suction cup. The cup lid is used in conjunction with the cup body.</p>	<p>2. When the phone with back magnetic suction function is placed close to the lifting ring, it can naturally adhere to the magnetic suction lifting ring. Can rotate up and down to adjust the appropriate angle.</p>
	
<p>3. When you want to move your location elsewhere, please do not take your phone directly to avoid it falling off in mid-air and damaging the machine.</p>	<p>4. When you want to take away your phone, it's best to hold it with one hand and the cup with the other to prevent the machine from tipping over.</p>

Light Display Setting

A. The correspondence between battery level and light display when charging

Battery level	Light display	Remark
Less than 30%	1 Red	
31%-55%	2 White	
56%-80%	3 White	
81%-100%	4 White	

B. Corresponding relationship between battery level and light display when the machine is working

Battery level	Light Display	Remark
81%-100%	4 White	Keep light
56%-80%	3 White	Keep light
31%-55%	2 White	Keep light
Less than 30%	1 Red	Keep light
Less than 20%	1 Red	Flicker

C. Working status and light display instructions

Working mode	Light display	Operation method
Standby	The switch light and battery light are on. The battery light will turn off for more than 10 seconds without any operation.	Press switch once
Running	The switch light, battery light, and function light are on.	Press switch once and press function button once
Pause	The switch light and battery light are on.	Press function button once
Off	All lights are off.	Press switch once

D. Protection instructions

Light display	Fault Description	How to solve it
1 light flashes red and enters standby mode	Charging current exceeds the limit	Use a legitimate TYPE-C charger
1 light flashes red and enters standby mode	Discharge current exceeds the limit	Shaking the juice cup or reduce the food
1 light flashes red and enters standby mode. The switch light will turn red and remain on	Motor temperature exceeds the limit or battery temperature exceeds the limit	Cool the machine for more than 30 minutes or blow the machine with a fan for more than 10 minutes

Processing Guide

(for 470ML Plastic Juice Cup and Stainless Steel Juice Cup)

Processing Guide (for 470ML plastic juice cup and Stainless steel juice cup)

Recipe name	Food	Maximum	Operation time	Speed	preparation
vegetable soup	uncooked carrots	60g	60 seconds	BLEND	1-2cm
	potatoes	60g			1-2cm
	onions	60g			1-2cm
	parsley leaves	1g			/
	water	120g			/
Carrot soup	carrots	188g	60 seconds	BLEND	1.5CM*1.5CM
	water	282g			/
Mayonnaise	egg	1piece	60 seconds	BLEND	/
	Camellia oil	150g			/
	biscuits	14g			/
Pineapple Honey Juice	Pineapple	80g	30 -60 seconds	SMOOTHIE	1-2cm(No skin, no pit)
	Apple	80g			1-2cmNo skin, no pit)
	Pure honey	80g			/
	water	200g			/
Pineapple passion fruit honey	pear	200g	30 -60 seconds	SMOOTHIE	1-2cm(No skin, no pit)
	Passion fruit	80g			No skin
	Pure honey	80g			/
	water	100g			/
Banana Strawberry Coconut Water Cream	Frozen strawberries	50g	30 -60 seconds	SMOOTHIE	/
	Banana	50g			4CM
	ICE	4 pieces			/
	coconut water	150			
Banana milkshake	Banana	100g	30 -60 seconds	SMOOTHIE	
	milk	150ML			4cm
	Pure honey	100g			
	ICE	4 pieces			2*2*2CM
Ice cubes that have been frozen for 48 hours below -16 degrees	ICE	6 pieces	30-60	CRUSH	2*2*2CM

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website [**powerology.me/warranty**](http://powerology.me/warranty) and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
[**powerology.me/warranty**](http://powerology.me/warranty)

Contact Us

If you have any questions about this Privacy Policy, please contact us at: [**hey@powerology.me**](mailto:hey@powerology.me)

Website: [**powerology.me**](http://powerology.me)

Instagram: [**powerology_official**](https://www.instagram.com/powerology_official)

Facebook: [**powerology.ME**](https://www.facebook.com/powerology.ME)