



Powerology

LEGACY 10000mAh POWER BANK

SKU: PPBCHA102

Table of Contents

Product Overview	2
Specifications	2
Package Contents	3
Product Components	3
Operation Guide	4
Button Functions	4
LED Indicator	4
Safety Precautions	5
Troubleshooting	7
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Powerology Legacy 10000mAh Power Bank offers a portable and efficient charging solution with a sleek design that includes a flexible charging lanyard, making it ideal for outdoor use. It features both USB-C and Lightning ports for versatile compatibility with a wide range of devices. Equipped with fast charging capabilities and a 20W power delivery (PD) output, it ensures your devices are powered up quickly. The power bank includes a digital display, providing real-time battery percentage, while also supporting simultaneous charging for added convenience. The compact design is perfect for travel, offering portability without sacrificing power. Additionally, it comes with a 30cm USB-C to USB-C lanyard cable, adding extra ease for everyday use.

Specifications


Material	ABS + PC
Battery Capacity	10000mAh, 38.5Wh
USB-C Input	5V/3A, 9V/2A, 12V/1.5A, 18W Max
Lightning Input	5V/3A, 9V/2.22A, 12V/1.67A, 20W Max
USB-C Output	5V/3A, 9V/2.23A, 10V/2.25A, 12V/1.67A, 22.5W Max

Lightning Output	5V/3A, 9V/2.22A, 12V/1.67A, 20W Max
Total Output	5V/3A, 15W Max
Product Weight	164g
Product Size	27.5 x 59.5 x 72.5mm
Model Number	PPBCHA102

Package Contents

Mobile power supply x1 USB-C Cable x1

Product Components

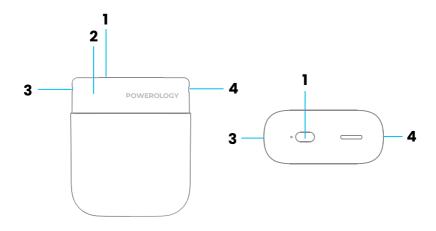

- 1. Power switch
- 2. Battery light

- 3. Type-C input/output
- 4. Lightning input/output

Operation Guide

- 1. Use up the existing charge of the power bank completely and turn it off once it reaches 0% (do not charge it before it's fully drained).
- 2. Fully charge the power bank until it reaches 100% (avoid using it while charging).
- 3. Repeat steps 1 and 2 for 1-2 cycles to allow the digital display chip to learn and adapt to the battery level, ensuring more accurate battery readings. This will also help activate the power bank's battery cells, allowing them to perform optimally.
- **4.** If these steps are not followed, the power bank may display inaccurate battery levels, experience rapid power loss, or exhibit other issues.

Button Functions

- 1. Press shortly to activate the power output and the power display.
- 2. Double-click to turn off the power output and the indicator light.

LED Indicator

The power bank uses an LED digital display for accurate power indication, with a precision of $\pm 1\%$ for every increase or decrease in battery level.

Important Notice:

Due to the weight of the power bank, do not use the built-in cable to suspend the power bank while charging your phone. If the built-in cable becomes damaged or fails to charge due to improper use, it is covered under a 6-month warranty from the date of purchase. After 6 months, repairs will be at your own expense. We apologize for any inconvenience caused.

Precautions

- 1. If not used for an extended period, charge the battery at least once every three months.
- 2. During use, the device may become slightly warm, but it should not become so hot that you cannot touch it.
- 3. Keep the product dry and avoid cleaning it with chemical agents.
- **4.** The power bank can be charged using the same discharge, mobile phone, and charging bank for a quick full charge.
- 5. Dispose of the product responsibly by recycling it at the designated location, and avoid improper disposal.
- **6.** Keep the device out of the reach of children or individuals who cannot use it safely on their own. Always use under adult supervision.
- 7. Do not collide, disassemble, submerge, or apply excessive pressure to the equipment.
- 8. Ensure the output DC power supply matches the required parameters. Using improper power can cause device failure or fire.

- 9. Failure to follow safety instructions may result in electric shock, damage, or injury.
- 10. Do not expose the battery to excessive heat.
- 11. The mobile power supply uses high-quality lithium polymer batteries, ensuring safe usage.
- 12. Do not disassemble or puncture the mobile power supply. Avoid exposing it to fire, high temperatures, or water.
- 13. Use a certified 5V DC power adapter that meets safety standards for charging.
- 14. If the mobile power supply shows signs of bulging or other abnormal behavior, or if the device being charged shows similar symptoms, stop using the power bank immediately.
- **15.** Do not place the battery pack in a fire or heating furnace, or mechanically squeeze or cut the battery pack, as this may cause an explosion.
- **16.** Avoid placing the battery pack in extremely high-temperature environments, as this may lead to explosions or the leakage of flammable liquids or gases.
- 17. The battery pack should not be exposed to extremely low air pressure, as this may also cause explosions or leakage of flammable liquids or gases.
- **18.** The product should be used on a flat surface, such as a desktop. If it needs to be in contact with the human body, the contact time should be limited to less than 10 seconds. It is prohibited to use the product after immersion in water.
- 19. When using power adapters for charging, ensure they are certified with CCC approval and meet standard requirements.
- 20. This product is designed for use only in non-tropical climates, with a maximum operating temperature of 25°C.

Troubleshooting

- 1. What should I do if the power bank cannot be charged?
- **a.** Check whether the mobile power adapter is suitable, and ensure the connecting cable and adapter are functioning properly.
- **b.** It is recommended to use a reputable brand power adapter to charge the power bank.
- **c.** Do not attempt to disassemble or pierce the power bank. Avoid exposing it to fire, high temperatures, or water.
- 2. What should I do if the power bank cannot charge other devices?
- a. The power bank may be too low on charge; please charge it.
- **b.** Ensure the voltage of the device being charged is compatible with the output of the power bank. Check the charging voltage of the device being charged.
- c. Verify that the connection method between the charged device and the power bank is correct, and that the connecting cable and adapter are functioning properly.
- **d.** If the issue persists, please contact the after-sales service department of your local dealer to address potential internal circuit failure of the power bank.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **https://www.powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

https://www.powerology.me/warranty



Contact Us

If you have any questions about this Privacy Policy, please contact

us at: hey@powerology.me

Website: https://www.powerology.me/

Instagram: powerology_official

Facebook: powerology.ME