



Powerology

**Astro 10000mAh
Power Bank**

SKU : PPBCHA94BK

Table of Contents

Product Overview	2
Specifications	2
Package Contents	3
Product Components Overview	3
Charging Instructions	4
Display & Indicators Guide	4
Troubleshooting	5
Care & Maintenance	5
Caution & Warning	6
FCC Statement	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Powerology Astro 10000mAh Power Bank offers efficient charging with a 45W PD output, supporting multiple devices simultaneously. It features an integrated watch charger, a retractable Type-C cable, and a smart power display for easy monitoring. With built-in safeguards for safety, this compact power bank is designed for reliable and convenient charging on the go.

Specifications

Model	PP094
Battery Capacity	10000mAh
Rated Capacity	5500mAh
Type-C1/C2 Output	5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/2.25A, 45W
Type-C1/C2 Input	5V/3A, 9V/3A, 12V/2.5A, 15V/2A, 20V/1.5A
Watch Output	2.5W
USB-C1 + USB-C2 Output	5V/3A
Retractable Cable Length	80 cm
Product Dimension	127 × 58 × 22 mm
Product Weight	272 g

Package Contents

- a. PD45W 10000mAh Power Bank × 1
- b. USB-A to USB-C Charging Cable × 1
- c. Soft Pouch × 1


Product Components Overview



Charging Instructions

1. Connect your power bank to a USB adapter using the built-in USB-C charging cable or another compatible fast-charging cable.
2. Ensure the power bank is fully charged before its first use to optimize battery performance.
3. To recharge the power bank, plug it into a USB adapter with the cable, ensuring the connection is secure.
4. Use a fast-charging cable for quicker and more efficient charging.
5. For long-term battery health, periodically recharge the power bank, especially if not in use for extended periods.
6. Avoid letting the power bank completely discharge when it is not in use for better longevity.

Display & Indicators Guide

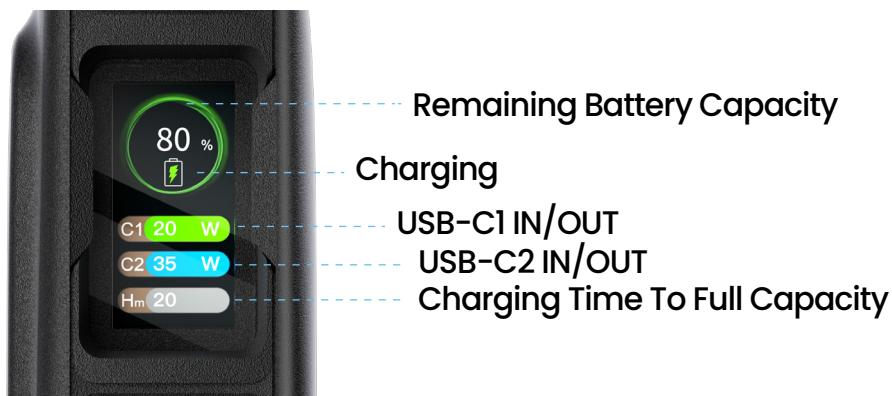

Note: Charge the power bank fully before first use to ensure optimal performance and battery life. Recharge it every three months if not in use for extended periods.

LED Indicator: The charging status is indicated by an upward light flow, while a downward light flow signals that the power bank is fully charged.

Troubleshooting

NO.	Issue	Problem	Solution
1	Power bank cannot charge your mobile device	Power bank battery is empty	Fully charge the power bank before using it to charge your device
2	Power bank drains quickly	Multiple applications running on your mobile device	Close all running applications on your device and allow it to charge fully. Note: Energy consumption may increase due to heat generated while charging.
3	Unable to charge (power indicator not flashing)	Low voltage from the power adapter	Use a 5V supply with at least 800mAh for charging.
		Faulty cable	Ensure the cable is properly connected or replace it if damaged.

Care & Maintenance

- a.** Do not place the product in water or expose it to fire, extreme heat, or cold.
- b.** Keep the product and its accessories out of reach of children.
- c.** Do not open or modify the product, as this may damage the safety features and cause overheating, fire, or explosion.
- d.** Avoid dropping, hitting, or applying pressure to the product, as this can cause damage. If any issues occur, stop using the product immediately.
- e.** Clean the product with a dry, soft cloth. Do not use chemicals, soaps, or harsh cleaners.

f. If the power bank is not in use for a long time, store it with about 50 % charge. Storing it fully charged or empty may harm the battery.

Caution & Warning

- 1.** Read all instructions and warnings before using this product.
- 2.** Keep the product away from water and liquids to prevent damage and avoid the risk of electric shock.
- 3.** Do not expose the product to extreme temperatures or fire, as it may cause damage or malfunction.
- 4.** Only use the recommended power source or charging accessories specified for this product to avoid potential hazards.
- 5.** Do not disassemble, modify, or repair the product yourself.
- 6.** Keep the product away from children and pets to prevent accidental ingestion or misuse.
- 7.** Avoid using the product in dusty or dirty environments, as this may affect its performance and cause overheating.
- 8.** Do not hit or drop the product, as this may damage it.
- 9.** If you notice any unusual smells, smoke, or excessive heat from the product, stop using it immediately and contact us.
- 10.** Unplug the product from the power source when not in use, especially during thunderstorms, to prevent damage from power surges.
- 11.** Follow all applicable safety regulations and guidelines specific to your region when using the product.

FCC Statement

- 1.** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1)** This device may not cause harmful interference; and
 - (2)** This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **<https://www.powerology.me/warranty>** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.powerology.me/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **<https://www.powerology.me/>**

Instagram: **[powerology_official](#)**

Facebook: **[powerology.ME](#)**