



Powerology

Pater II Portable Power Station

SKU: PWGC700GY

Table of Contents

Important Reminder	2
Schematic View	2
Display Guide	3
Application Scenarios	3
Power On/Off	5
LED Light Operation	6
USB Output	7
DC and Lighter Output	8
Wireless Charging	9
AC Output	9
Charging the Power Station	10
Specifications	11
Troubleshooting	12
FAQs	13
Package Contents	13
Warning	14
Disposal	14
Warranty	15
Contact Us	15

Thank you for choosing our product! We kindly ask that you take a moment to read through this user manual. By following the instructions provided, you will ensure the optimal use of your product and quickly become familiar with its features.


Important Reminder

This product is intended for emergency situations and is not a substitute for the standard AC power supply used by household appliances or digital products.


Schematic View

①	Display screen
②	Lighter output port
③	AC button
④	DC output port
⑤	USB1 output port
⑥	AC output port
⑦	USB2 output port
⑧	Type-C1 output port
⑨	AC input port
⑩	LED light button
⑪	XT60 port
⑫	Type-C2 input port
⑬	AC output port 2
⑭	DC button
⑮	Power on/off
⑯	USB button
⑰	LED light
⑱	Fan hole


Front View

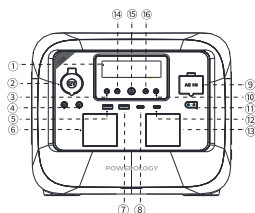

Side View

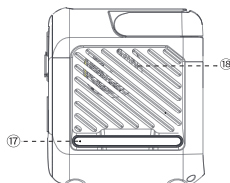

Display Guide

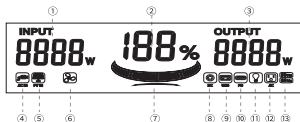

Description	
①	Charging Power Display
②	Battery Percentage Display
③	Output Power Display
④	AC Charging Icon: Lights up when the AC charging process is active.
⑤	Solar Charging Icon: Lights up when the solar charging process is active.
⑥	Fan Icon
⑦	4-Level Battery Display
⑧	DC 12V Output Icon: Lights up when the DC 12V output is active.
⑨	USB Output Icon: Lights up when the USB output is active.
⑩	PD Output Icon: Lights up when the PD output is active.
⑪	LED Light Icon: Lights up when the LED light is turned on.
⑫	AC Output Icon: Lights up when the AC output is active.
⑬	AC Output Frequency: Displays the current AC output frequency.

Application Scenarios

1. The product offers a high-capacity battery, compact size, and lightweight design, making it highly portable and versatile for various usage scenarios.



Long-distance Travel



Camping and Picnicking



Wilderness Exploration

2. The product features both AC input and output functions, allowing for quick recharging of the device itself and providing emergency power to various devices such as fans, mini refrigerators, light bulbs, mini rice cookers, and more.



Small Fan



Mini Rice Cooker



Light Bulb

3. The product features a DC output function that provides emergency charging for devices such as smartphones, tablets, digital cameras, laptops, and more. It also includes multiple DC output interfaces, allowing you to charge several digital devices simultaneously.



Laptop



Tablet



Smartphone

4. The product features an LED lighting function with high-brightness LEDs, designed for durability and ideal for outdoor activities. The LED light offers multiple modes, including high-brightness lighting, brightness adjustment, strobe, and an SOS distress signal.



Safe to Use




Emergency Lighting



Outdoor Energy
Storage


Power On/Off

Press and hold the "Power On/Off Button" for 2 seconds to power on the product. The display screen will light up, showing the current battery level. The fan will perform a self-check and light up the fan icon, then automatically turn off after 3 seconds.

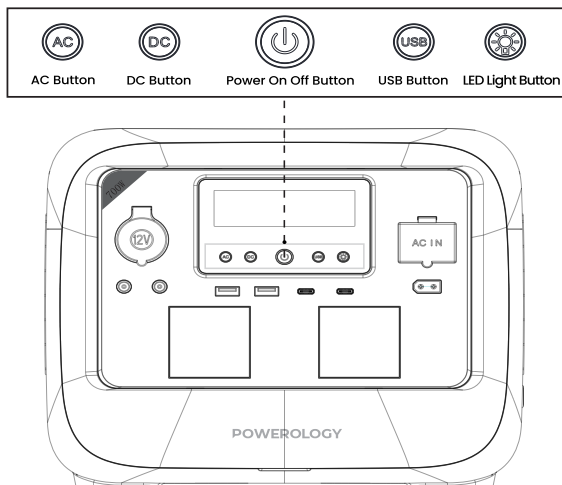


LED Light Operation

After powering on the product, press the "LED Light Control Button" briefly to activate the LED light in a constant-on mode, which will illuminate the LED light icon. While in this mode, press and hold the "LED Light Control Button" to adjust the brightness. To cycle through the light modes (constant-on, low brightness, SOS, flashing, off), press the button briefly.

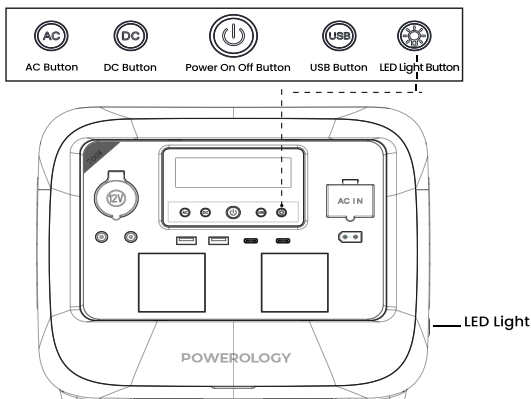


USB Output

1. After turning on the product, briefly press the "USB On/Off Button" to activate the USB output function. The Type-C icon, USB icon, and output power icon will appear on the display.
2. Connect your digital device to the product using the appropriate cable. Once connected, the device will begin charging, and the corresponding power value will be displayed on the screen.
3. When charging multiple devices simultaneously through various output ports, the total output power will be shown on the display.

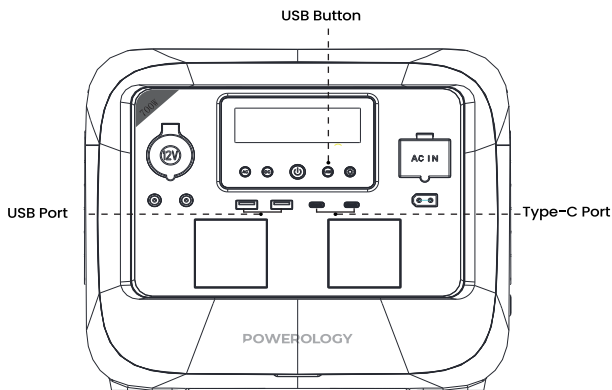


DC and Lighter Output

1. After powering on the product, briefly press the "DC On/Off Button" to activate the DC output function. The DC 12V icon and DC output power icon will illuminate on the screen.
2. Connect your digital device to the product using the appropriate connector to begin charging.

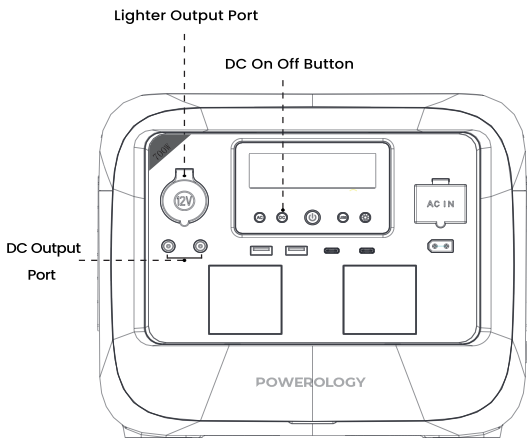


Wireless Charging

1. After powering on the product, briefly press the "DC On/Off Button" to activate the DC output function. The DC 12V icon and DC output power icon will appear on the display.
2. Place your digital device in the center of the product to charge it wirelessly, with a maximum output of 15W.

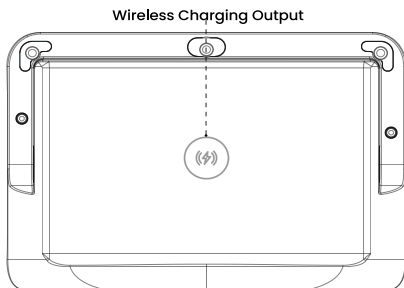

AC Output

1. After turning on the product, press the "AC On/Off Button" briefly to activate the AC output function. The AC output power icon and AC frequency icon will be displayed.
2. Connect the device requiring power into the AC output port. The corresponding power value will be displayed.

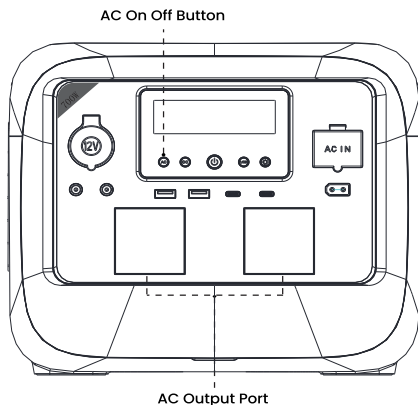

Charging the Power Station


1. Charging via the AC Input Port

1.1 To charge the product, connect the included AC power cord to the AC input port and plug it into the mains. The maximum charging power is 500W. The display will show the current charging power, and the fan will start, displaying the fan icon.

1.2 Silent Charging Mode: While charging, double-click the AC button to activate silent charging mode, which limits the charging power to about 150W. This mode reduces fan noise to its lowest level.

2. Charging via the XT60 Input Port

This product features an XT60 solar input port that supports charging at 12-60V, with a maximum charging power of 350W.

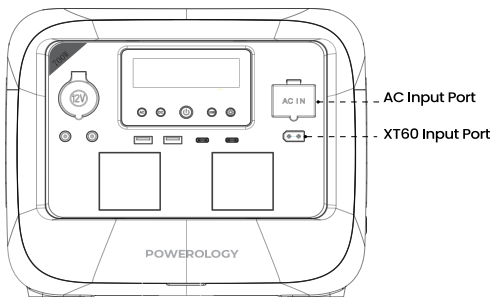

Specifications

Model	PWGC700
Battery Capacity	472.5Wh
Voltage	230V
Frequency	50Hz
MPPT Solar Input	350W max (12-60V)
AC Input	500W
AC Output	700W Rated Power - 1400W Peak Power
USB-A Output	5V/3A, 9V/2A, 12V/1.5A, 18W
USB -A2 Output	5V/2A
USB-C1 Output	5-15V/3A, 20V/5A, PD100W Max
USB-C2 Output	5V/2A, 15W Max
Wireless Output	5W, 7.5W, 10W, 15W
Car Port Output	12V/10A, 120W Max
x5521 2 DC Output	12V/10A
Uninterruptible Power Supply	500W max, 20ms Response Time
LED Light	4W LED Light, with SOS Function
Operating Temperature	-10°C to 50°C (Discharge), 0°C to 40°C (Charge)
Humidity	0-95 % (Non-condensing)
Weight	7kg
Product Dimension	222× 187 × 266mm

Troubleshooting

Error Code	Description	Instructions
E01	DC/Car Charger Output Overcurrent/Short Circuit	Unplug the load and press the DC button again to resume output
E03	AC Output Overload/Short Circuit	Unplug the load and press the AC button again to resume output
E04	AC Discharge High Temperature Protection	The code will be automatically cleared when the temperature returns to normal
E05	PD Overcurrent/Short Circuit	Unplug the load and press the USB button again to resume output
E06	Charging High Temperature Protection	The code will be automatically cleared when the temperature returns to normal
E07	Charging Low Temperature Protection	It will automatically resume when the temperature returns to normal
E08	USB Output Overcurrent/Short Circuit	Unplug the load and press the USB button again to resume output
E11	Mainboard Discharge High Temperature Protection	The code will be automatically cleared when the temperature returns to normal
E12	Mainboard Discharge Low Temperature Protection	The code will be automatically cleared when the temperature returns to normal
E13	AC Charging Undervoltage Protection	It will automatically resume when the voltage returns to the specified range
E14	AC Charging Overvoltage Protection	It will automatically resume when the voltage returns to the specified range
E17	AC Charging Frequency Abnormality	It will automatically resume when the frequency returns to the specified range
E18	MPPT Input Undervoltage Protection	It will automatically resume when the voltage returns to the specified range
E19	MPPT Input Overvoltage Protection	It will automatically resume when the voltage returns to the specified range
E26	Total Output Power Overload Protection	Unplug the load and press the AC button again to resume output
E27	Communication Error Between Mainboard and Inverter Board	Please reset or power cycle the device to resume
E36	MPPT Overpower Protection	It will automatically resume after unplugging the charging source
E40	Battery Cell Low Temperature Protection	The code will be automatically cleared when the temperature returns to normal
E63	Battery Voltage Difference Greater Than 300mV	Return to factory for repair
%0	Battery Over-discharge	It will automatically resume after charging

FAQs

Q1: Will the product shut down automatically when idle?

A1: Yes. After the product is powered on, it will automatically enter sleep mode and shut down after 3 minutes if no outputs are activated. If any output is activated, the product will shut down after 4 hours without output power. To cancel this auto-shutdown function for a single session, press and hold the AC + Power On/Off button for 5 seconds.

Q2: Does the product support screen-off operation?

A2: Yes, it supports screen-off operation. To turn off the screen, double-click the "Power On/Off Button," then click again to turn it back on.

Q3: Does the product support charging and discharging simultaneously?

A3: Yes, the product supports charging and discharging at the same time. When charging via AC, the AC output functions as a bypass.

Q4: Does the product support simultaneous AC and DC charging?

A4: Yes, it supports simultaneous charging from both AC and DC sources. When charging both simultaneously, the AC power output is fixed at 150W.

Q5: How does the fan operate?

A5: The fan automatically adjusts its speed based on the internal temperature and the charging/discharging power. No manual operation is required to activate the fan.

Package Contents



Car charger



AC Power Cord



Portable Power Station

Warning

1. When not in use for extended periods, it is recommended to maintain a certain level of battery charge and recharge the product at least once every three months.
2. Slight heating of the device during use or charging is normal and not indicative of a malfunction.
3. It is advised to use the product in a normal temperature environment and keep it away from dampness, high temperatures, and ignition sources.
4. Store the product in a dry place, away from dampness and corrosive materials.
5. Avoid cleaning the product with harsh chemicals, such as soap or cleaning agents.
6. If you notice battery swelling, leakage, or an unusual odor, stop using the product immediately.
7. Be cautious to prevent the product from falling during use.
8. Keep the product out of reach of children and pets. If children need to use the portable power station, parents should operate it according to the user manual.
9. Do not dispose of or burn the used portable power station indiscriminately. Please protect the environment.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
powerology.me/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology_official**

Facebook: **powerology.ME**



Powerology

محطة الطاقة المحمولة Pater II

SKU: PWGC700GY

٢	تذكير هام
٢	منظر تخطيطي
٣	دليل العرض
٣	سيناريوهات التطبيق
٥	تشغيل/ إيقاف التشغيل
٦	تشغيل مصباح LED
٧	مخرج USB
٨	مخرج التيار المستمر والولاعة
٩	الشحن اللاسلكي
٩	مخرج التيار المتردد
١٠	شحن محطة الطاقة
١١	المواصفات
١٢	استكشاف الأخطاء وإصلاحها
١٣	الأسئلة الشائعة
١٣	محتويات العبوة
١٤	تحذير
١٤	التخلص من المنتج
١٥	الضمان
١٥	اتصل بنا

شكرًا لاختياركم منتجنا! نرجو منكم قراءة دليل المستخدم هذا بعناية. باتباعكم التعليمات المرفقة، ستضمنون الاستخدام الأمثل لمنتجكم وتتعرفون على ميزاته بسرعة.


تذكير هام

هذا المنتج مخصص لحالات الطوارئ، ولا يُعد بديلًا عن مصدر الطاقة التقليدي المستخدم في الأجهزة المنزلية أو المنتجات الرقمية.


العرض التخطيطي


١	شاشة العرض
٢	منفذ إخراج الطاقة
٣	زر التيار المتردد
٤	منفذ إخراج التيار المستمر
٥	منفذ إخراج USB
٦	منفذ إخراج التيار المتردد
٧	منفذ إخراج USB
٨	منفذ إخراج النوع C
٩	منفذ إدخال التيار المتردد
١٠	زر إضاءة LED
١١	منفذ XT60
١٢	منفذ إدخال النوع C
١٣	منفذ إخراج التيار المتردد
١٤	زر التيار المستمر
١٥	تشغيل / إيقاف التشغيل
١٦	زر USB
١٧	إضاءة LED
١٨	فتحة المروحة

المنظر الأمامي

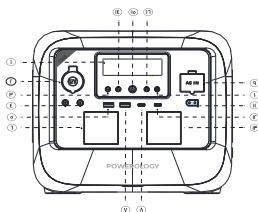

منظر جانبي

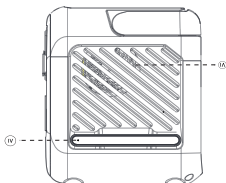

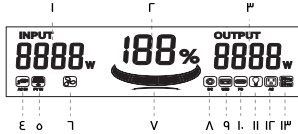

الوصف	
١	شاشة طاقة الشحن
٢	شاشة نسبة البطارية
٣	شاشة طاقة الخرج
٤	رمز شحن التيار المتردد: يضيء عند تفعيل عملية شحن التيار المتردد.
٥	رمز الشحن الشمسي: يضيء عند تفعيل عملية شحن الطاقة الشمسية.
٦	رمز المروحة
٧	شاشة بطارية رباعية المستويات
٨	رمز خرج التيار المستمر ١٢ فولت: يضيء عند تفعيل خرج التيار المستمر ١٢ فولت.
٩	رمز مخرج USB: يضيء عند تفعيل مخرج USB.
١٠	رمز مخرج PD: يضيء عند تفعيل مخرج PD.
١١	رمز ضوء LED: يضيء عند تشغيل ضوء LED.
١٢	رمز خرج التيار المتردد: يضيء عند تفعيل خرج التيار المتردد.
١٣	تردد خرج التيار المتردد: يعرض تردد خرج التيار المتردد الحالي.

سيناريوهات التطبيق

١. يتميز المنتج ببطارية عالية السعة، وحجم صغير، وتصميم خفيف الوزن، مما يجعله سهل الحمل ومتعدد الاستخدامات لمختلف سيناريوهات الاستخدام.



مستوى المسافة الطويلة



التخييم والتنزه



استكشاف البرية

٢. يتميز المنتج بوظائف إدخال وإخراج التيار المتردد، مما يسمح بإعادة شحن الجهاز نفسه بسرعة وتوفير الطاقة في حالات الطوارئ لمختلف الأجهزة مثل المراوح والثلاجات الصغيرة والمصابيح الكهربائية وأجهزة طهي الأرز الصغيرة والمزيد.



مروحة صغيرة



طباخ أرز صغير



مصباح كهربائي

٣. يتميز المنتج بخاصية إخراج تيار مستمر، مما يوفر شحنًا طارئًا للأجهزة مثل الهواتف الذكية، والأجهزة اللوحية، والكاميرات الرقمية، وأجهزة الحاسوب المحمولة، وغيرها. كما يتضمن منافذ إخراج تيار مستمر متعددة، مما يتيح لك شحن عدة أجهزة رقمية في وقت واحد.



حاسوب محمول



جهاز لوحي



هاتف ذكي

٤. يتميز المنتج بإضاءة LED عالية السطوع، مصممة لضمان المتانة ومثالية للأنشطة الخارجية. يوفر ضوء LED أوضاعًا متعددة، بما في ذلك إضاءة عالية السطوع، وتعديل السطوع، وإضاءة ستروب، وإشارة استغاثة SOS.



آمن للاستخدام




إضاءة الطوارئ



تخزين الطاقة الخارجية


تشغيل/إيقاف

اضغط مع الاستمرار على زر "تشغيل/إيقاف" لمدة ثانيتين لتشغيل المنتج. ستضيء شاشة العرض، موضحة مستوى البطارية الحالي. ستجري المروحة فحصًا ذاتيًا، وستضيء أيقونة المروحة، ثم تتوقف تلقائيًا بعد ٣ ثوانٍ.

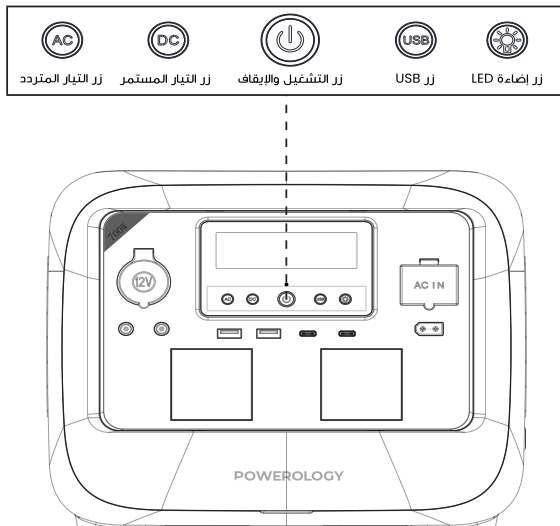

تشغيل إضاءة LED

بعد تشغيل المنتج، اضغط على زر "التحكم في إضاءة LED" لفترة وجيزة لتشغيل إضاءة LED في وضع التشغيل المستمر، مما يُضيء رمز إضاءة LED. أثناء هذا الوضع، اضغط مع الاستمرار على زر "التحكم في إضاءة LED" لضبط السطوع. للتبديل بين أوضاع الإضاءة (التشغيل المستمر، السطوع المنخفض، إشارة استغاثة، الوميض، الإيقاف)، اضغط على الزر لفترة وجيزة.

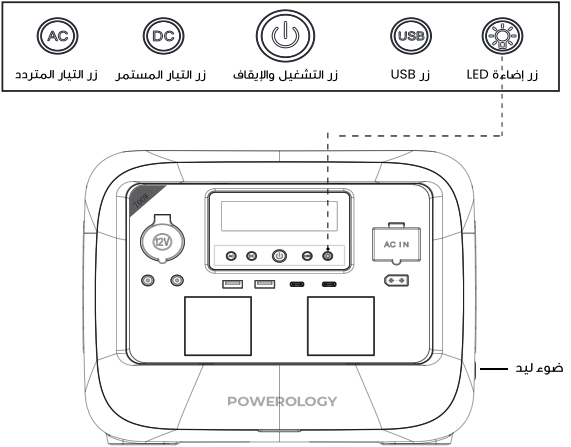


مخرج USB

١. بعد تشغيل المنتج، اضغط لفترة وجيزة على زر "تشغيل/إيقاف USB" لتفعيل وظيفة مخرج USB. ستظهر أيقونة Type-C، وأيقونة USB، وأيقونة طاقة الخرج على الشاشة.
٢. وُصِّل جهازك الرقمي بالمنتج باستخدام الكابل المناسب. بمجرد التوصيل، سيبدأ الجهاز بالشحن، وستظهر قيمة الطاقة المقابلة على الشاشة.
٣. عند شحن عدة أجهزة في وقت واحد عبر منافذ إخراج مختلفة، ستظهر قيمة طاقة الخرج الإجمالية على الشاشة.

زر USB

منفذ USB

منفذ Type-C

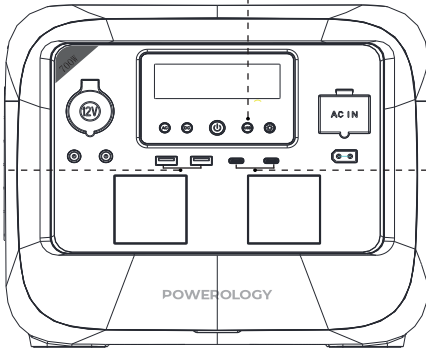


مخرج التيار المستمر والولاعة

١. بعد تشغيل المنتج، اضغط لفترة وجيزة على زر "تشغيل/إيقاف التيار المستمر" لتفعيل وظيفة مخرج التيار المستمر. سيضيء رمز ١٢ فولت تيار مستمر وأيقونة طاقة مخرج التيار المستمر على الشاشة.
٢. وُصِّل جهازك الرقمي بالمنتج باستخدام الموصل المناسب لبدء الشحن.

زر تشغيل وإيقاف التيار المستمر

منفذ إخراج الولاعة


منفذ إخراج
التيار المستمر

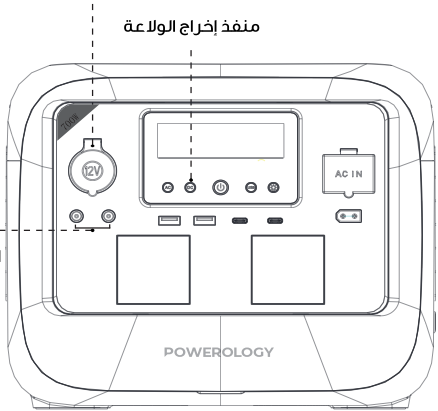

الشحن اللاسلكي

١. بعد تشغيل المنتج، اضغط لفترة وجيزة على زر "تشغيل/إيقاف التيار المستمر" لتفعيل وظيفة خرج التيار المستمر. سيظهر رمز ١٢ فولت تيار مستمر وأيقونة طاقة خرج التيار المستمر على الشاشة.
٢. ضع جهازك الرقمي في منتصف المنتج لشحنه لاسلكيًا، بحد أقصى ١٥ واط.


مخرج الشحن اللاسلكي

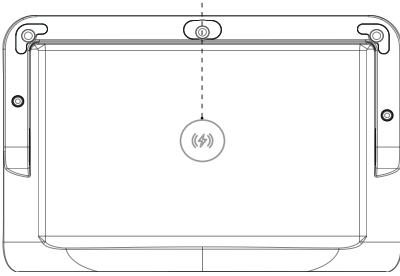

مخرج التيار المتردد

١. بعد تشغيل المنتج، اضغط على زر "تشغيل/إيقاف التيار المتردد" لفترة وجيزة لتفعيل وظيفة مخرج التيار المتردد. سيظهر رمز طاقة مخرج التيار المتردد ورمز تردد التيار المتردد.
٢. وُصل الجهاز الذي يحتاج إلى طاقة بمنفذ مخرج التيار المتردد. ستظهر قيمة الطاقة المقابلة.

زر تشغيل وإيقاف التيار المتردد

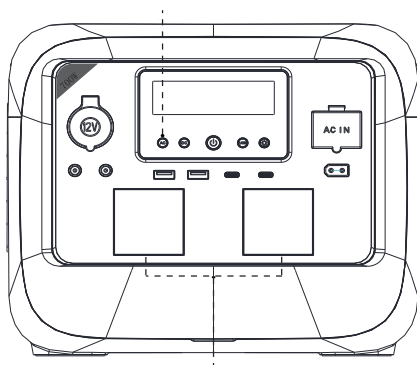

منفذ إخراج التيار المتردد

شحن محطة الطاقة


١. الشحن عبر منفذ إدخال التيار المتردد

١.١ للشحن المنتج، وصّل سلك طاقة التيار المتردد المرفق بمنفذ إدخال التيار المتردد، ثم وصله بالتيار الكهربائي. أقصى طاقة شحن هي ٥٠٠ واط. ستعرض الشاشة طاقة الشحن الحالية، وستبدأ المروحة بالعمل، مع عرض رمز المروحة.

١.٢ وضع الشحن الصامت: أثناء الشحن، انقر نقرًا مزدوجًا على زر التيار المتردد لتنشيط وضع الشحن الصامت، الذي يحد من طاقة الشحن إلى حوالي ١٥٠ واط. يُخفّض هذا الوضع ضوضاء المروحة إلى أدنى مستوى لها.

٢. الشحن عبر منفذ الإدخال XT٦٠

يتميز هذا المنتج بمنفذ إدخال XT٦٠ للطاقة الشمسية، يدعم الشحن بجهد ١٢-٦٠ فولت، مع طاقة شحن قصوى تبلغ ٣٥٠ واط.

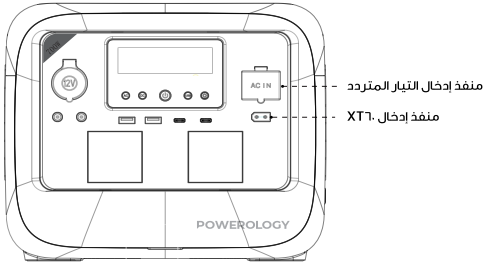

مواصفات

الطراز	PWGC7000
سعة البطارية	٤٧٢,٥ واط/ساعة
الجهد	٢٣ فولت
التردد	٥٠ هرتز
مدخل طاقة شمسية MPPT	٣٥٠ واط كحد أقصى (١٢-٦٠ فولت)
مدخل تيار متردد	٥٠٠ واط
مخرج تيار متردد	٧٠٠ واط الطاقة المقدرة - ١٤٠٠ واط الطاقة القصوى
مخرج USB-A	٥ فولت/٣ أمبير، ٩ فولت/٢ أمبير، ١٢ فولت/١,٥ أمبير، ١٨ واط
مخرج USB-A٢	٥ فولت/٢ أمبير
مخرج USB-C١	٥-١٥ فولت/٣ أمبير، ٢٠ فولت/٥ أمبير، PDI١٠٠ واط كحد أقصى
مخرج USB-C٢	٥ فولت/٢ أمبير، ١٥ واط كحد أقصى
مخرج لاسلكي	٥ واط، ٧,٥ واط، ١٠ واط، ١٥ واط
مخرج منفذ السيارة	١٢ فولت/١ أمبير، ١٢٠ واط كحد أقصى
٢٠x٥٢١ مخرج تيار مستمر	١٢ فولت/١ أمبير
مزود طاقة غير منقطع	٥٠٠ واط كحد أقصى، زمن استجابة ٢٠ ميلي ثانية
إضاءة LED	مصباح LED ٤ واط، مع وظيفة SOS
درجة حرارة التشغيل	٠-٤٠ درجة مئوية إلى ٥٠ درجة مئوية (التفريغ)، ٠ درجة مئوية إلى ٤٠ درجة مئوية (الشحن)
الرطوبة	٩٥%- (بدون تكاثف)
الوزن	٧ كجم
أبعاد المنتج	٢٢٢ x ١٨٧ x ٢٦٦ مم

رمز الخطأ	الوصف	التعليمات
E01	زيادة التيار/قصر الدائرة في خرج شاحن DC/السيارة	افصل الحمل واضغط زر DC مرة أخرى لاستئناف الإخراج
E03	حمل زائد/قصر الدائرة في خرج AC	افصل الحمل واضغط زر AC مرة أخرى لاستئناف الإخراج
E04	حماية من ارتفاع درجة الحرارة أثناء تفريغ AC	سيتم مسح الرمز تلقائيًا عند عودة درجة الحرارة إلى وضعها الطبيعي
E05	زيادة التيار/قصر الدائرة في PD	افصل الحمل واضغط زر USB مرة أخرى لاستئناف الإخراج
E06	حماية من ارتفاع درجة الحرارة أثناء الشحن	سيتم مسح الرمز تلقائيًا عند عودة درجة الحرارة إلى وضعها الطبيعي
E07	حماية من انخفاض درجة الحرارة أثناء الشحن	سيستأنف التشغيل تلقائيًا عند عودة درجة الحرارة إلى وضعها الطبيعي
E08	زيادة التيار/قصر الدائرة في خرج USB	افصل الحمل واضغط زر USB مرة أخرى لاستئناف الإخراج
E11	حماية اللوحة الرئيسية من ارتفاع درجة الحرارة أثناء التفريغ	سيتم مسح الرمز تلقائيًا عند عودة درجة الحرارة إلى وضعها الطبيعي
E12	حماية اللوحة الرئيسية من انخفاض درجة الحرارة أثناء التفريغ	سيتم مسح الرمز تلقائيًا عند عودة درجة الحرارة إلى وضعها الطبيعي
E13	حماية من انخفاض جهد شحن AC	سيستأنف التشغيل تلقائيًا عند عودة الجهد إلى النطاق المحدد
E14	حماية من ارتفاع جهد شحن AC	سيستأنف التشغيل تلقائيًا عند عودة الجهد إلى النطاق المحدد
E17	خلل في تردد شحن AC	سيستأنف التشغيل تلقائيًا عند عودة التردد إلى النطاق المحدد
E18	حماية من انخفاض جهد دخل MPPT	سيستأنف التشغيل تلقائيًا عند عودة الجهد إلى النطاق المحدد
E19	حماية من ارتفاع جهد دخل MPPT	سيستأنف التشغيل تلقائيًا عند عودة الجهد إلى النطاق المحدد
E26	حماية من الحمل الزائد لقدرة الخرج الكلية	افصل الحمل واضغط زر AC مرة أخرى لاستئناف الإخراج
E27	خطأ اتصال بين اللوحة الرئيسية و لوحة العاكس	يرجى إعادة ضبط الجهاز أو إيقاف تشغيله وتشغيله لاستئناف العمل
E36	حماية MPPT من القدرة الزائدة	سيستأنف التشغيل تلقائيًا بعد فصل مصدر الشحن
E40	حماية خلايا البطارية من انخفاض درجة الحرارة	سيتم مسح الرمز تلقائيًا عند عودة درجة الحرارة إلى وضعها الطبيعي
E63	فرق جهد البطارية أكبر من 300mV	أعد الجهاز إلى المصنع للإصلاح
%0	تفريغ البطارية الزائد	سيستأنف التشغيل تلقائيًا بعد الشحن

الأسئلة الشائعة

س١: هل سيتوقف المنتج تلقائيًا عند عدم استخدامه؟

ج١: نعم. بعد تشغيل المنتج، سيدخل تلقائيًا في وضع السكون ويتوقف بعد ٣ دقائق إذا لم تكن هناك أي منافذ طاقة مُفعّلة. في حال تفعيل أي منفذ طاقة، سيتوقف المنتج بعد ٤ ساعات بدون طاقة طاقة. لإلغاء وظيفة الإيقاف التلقائي هذه لجلسة واحدة، اضغط مع الاستمرار على زر التشغيل/الإيقاف (التيار المتردد) لمدة ٥ ثوانٍ.

س٢: هل يدعم المنتج خاصية إيقاف تشغيل الشاشة؟

ج٢: نعم، يدعم خاصية إيقاف تشغيل الشاشة. لإيقاف تشغيل الشاشة، انقر نقرًا مزدوجًا على زر التشغيل/الإيقاف، ثم انقر مرة أخرى لإعادة تشغيلها.

س٣: هل يدعم المنتج الشحن والتفريغ في آن واحد؟

ج٣: نعم، يدعم المنتج الشحن والتفريغ في آن واحد. عند الشحن عبر التيار المتردد، يعمل منفذ التيار المتردد كتجاوز.

س٤: هل يدعم المنتج الشحن المتزامن بالتيار المتردد والتيار المستمر؟

ج٤: نعم، يدعم الشحن المتزامن من مصدري التيار المتردد والتيار المستمر. عند شحنهما معًا، يكون خرج طاقة التيار المتردد ثابتًا عند ٥٠ واط.

س٥: كيف تعمل المروحة؟

ج٥: تضبط المروحة سرعتها تلقائيًا بناءً على درجة الحرارة الداخلية وقوة الشحن/التفريغ. لا يتطلب تشغيلها يدويًا.


محتويات العبوة



شاحن السيارة



سلك طاقة تيار متردد



محطة طاقة محمولة

تحذير

١. عند عدم الاستخدام لفترات طويلة، يُنصح بالحفاظ على مستوى معين من شحن البطارية وإعادة شحن المنتج مرة واحدة على الأقل كل ثلاثة أشهر.
٢. يُعدّ ارتفاع درجة حرارة الجهاز قليلاً أثناء الاستخدام أو الشحن أمرًا طبيعيًا، ولا يُشير إلى وجود عطل.
٣. يُنصح باستخدام المنتج في بيئة ذات درجة حرارة عادية، وإبعاده عن الرطوبة ودرجات الحرارة المرتفعة ومصادر الاشتعال.
٤. خزن المنتج في مكان جاف، بعيدًا عن الرطوبة والمواد المسببة للتآكل.
٥. تجنّب تنظيف المنتج بمواد كيميائية قاسية، مثل الصابون أو مواد التنظيف.
٦. إذا لاحظت انتفاخًا في البطارية، أو تسريبًا، أو رائحة غير عادية، فتوقف عن استخدام المنتج فورًا.
٧. توخّ الحذر لمنع سقوط المنتج أثناء الاستخدام.
٨. أبقِ المنتج بعيدًا عن متناول الأطفال والحيوانات الأليفة. إذا احتاج الأطفال إلى استخدام محطة الطاقة المحمولة، فيجب على الوالدين تشغيلها وفقًا لدليل المستخدم.
٩. لا تتخلص من محطة الطاقة المحمولة المستخدمة أو تحرقها عشوائيًا. يرجى حماية البيئة.

التخلص

لا يجوز التخلص من هذا المنتج كنفایات منزلية غير مصنفة. ومن المهم فصل هذه النفایات من أجل معالجتها وإعادة تدويرها بشكل صحيح، بما يتوافق مع لوائح إدارة النفایات المحلية.

الضمان

المنتجات التي تشتريها مباشرة من موقعنا الإلكتروني أو متجر **Powerology** تأتي مع ضمان لمدة ٢٤ شهرًا.

ينطبق الضمان لمدة ٢٤ شهرًا على المنتجات التي تم شراؤها مباشرة من موقعنا الإلكتروني أو متجر **Powerology**. إذا تم شراء منتجات **Powerology** من أي من بائعي التجزئة المعتمدين لدينا، فسيكون المنتج مؤهلاً للحصول على ضمان لمدة ١٢ شهرًا فقط. لتمديد ضمان منتجك، تفضل بزيارة موقعنا الإلكتروني **powerology.me/warranty** واملأ بياناتك في النموذج المقدم بالإضافة إلى صورة تم تحميلها للمنتج لمعالجة طلبك. بمجرد الموافقة، ستتلقى رسالة تأكيد عبر البريد الإلكتروني بشأن ضمان المنتج الممتد. قم بتحميل المعلومات المطلوبة خلال ٤٨ ساعة من الشراء لتكون مؤهلاً لمدة ٢٤ شهرًا من فترة الضمان.

لمزيد من المعلومات، يرجى التحقق من:

powerology.me/warranty

اتصل بنا

إذا كانت لديك أي أسئلة حول سياسة الخصوصية هذه، فيرجى الاتصال بنا على:

hey@powerology.me

الموقع الإلكتروني: **powerology.me**

انستغرام: **powerology.me**

فيسبوك: **powerology.ME**