



Powerology

PARAMONT

Portable Touchscreen Smart Monitor

SKU: PWH27BFBG



Table of Contents

Product Overview	2
Specifications	2
Precautions	4
Important Tips	5
Accessories	6
Product Component	6
Touch Function	7
Operation Instruction	8
Remote Control Instruction	9
Install Remote Control Batteries	12
Material Contents	12
Disposal	13
Warranty	14
Contact Us	14

Product Overview

The Powerology Paramount Portable Touchscreen Smart Monitor is a 27-inch portable touchscreen smart TV powered by Android 15, designed for both home and on-the-go use. It features a Full HD 1920x1080 display with a 10-point capacitive touchscreen, a powerful octa-core processor, and 6G of RAM and 128GB of storage. With a built-in 27,000mAh battery, dual 10W stereo speakers, and support for Wi-Fi, Bluetooth 5.0, and wireless screen projection, it delivers a premium entertainment experience anywhere. Multiple connectivity options including HDMI, USB, and Type-C ports make it compatible with a wide range of devices, while the included remote control adds extra convenience for everyday use.

Specifications

Input	AC 100-240V
DC Output	19V/3.42A
Rated Power	65W Max
Battery Capacity	27000mAh
Display Size	27"
Screen Resolution	1920 x 1080P
Brightness	250-300cd/m ²
Contrast Ratio	1000:1 (Typ)
Screen Ratio	16:9

Refresh Rate	60Hz
Viewing Angles	89
Color Gamut	100%sRGB
Display Color	16.7M (8-bit)
Bluetooth Version	5.0
WiFi	2.4G/5G
Built-in Speakers	10Wx2 ,8Ω
Operating System	Android 15
CPU	2xARM Cortex A2.0@75GHz, 6xARM Cortex A1.8@55GHz
GPU	ARM Mali G2 52EE MC820 2MHz
RAM	6G
ROM	128G
Working Time	7 Hours
Charging Time	4 Hours
Touch Points	10-Point Multi-Touch
Touch Tools	Finger & Stylus Support
Interfaces	HDMI, USB-C, USB 2.0, DC Port
Working Temperature	0°C to 40°C
Product Material	ABS + Metal + Fabric

Product Weight	6.5 ± 0.3kg
Product Size	616.5 x 420 x 99mm
Model Number	PWH27BF

Precautions

1.When cleaning the screen of a portable touchscreen smart TV, always unplug the power cord and turn off the power switch. Do not use liquid cleaning solutions or spray cleaners; wipe the screen with a soft, damp cloth. If the screen is still not clean, please use an LCD screen cleaner.

2.When unplugging the power adapter from your portable touchscreen smart TV, hold the power plug and then unplug the cord. Do not pull the power cord directly with your hands.

3.If the following situations occur, please unplug the power plug of the power adapter and inform the authorized dealer.

a.The power cord or power plug is damaged or worn.

b.The portable touchscreen smart TV falls or the casing is damaged.

c.When the screen is obviously abnormal, it indicates that it needs to be repaired.

4.Please place it in a well-ventilated environment away from strong light, high temperature or humidity.

5.Please store it at room temperature of 0°C~40°C and below 5000 meters above sea level. If it exceeds this range, it may affect normal use.


Important Tips

1. The gaps and openings on the machine are used for ventilation and heat dissipation. Do not block or cover these gaps and openings.
2. When the machine fails, do not disassemble and repair it by yourself. You need to contact the original manufacturer or dealer to solve it.
3. Avoid stepping on the power supply or power adapter to avoid dangers such as leakage. If the wire of the power adapter is damaged, do not continue to use it, otherwise it may be dangerous.
4. Please unplug the power cord during thunderstorms or when the machine is not used for a long time.
5. Do not squeeze the display screen hard during transportation, and do not hit the display screen with sharp tools or hard objects to avoid screen damage.
6. Make sure children understand the dangers of climbing this product. This product falling or tipping over can cause serious personal injury. Do not place the product in an unstable or tilted position.
7. Be sure to organize the cables connected to the product in time to avoid tripping, pulling or grabbing.

Note: If consumers use a power adapter to charge, they should purchase a power adapter that is Local certified and meets standard requirements.

Accessories

- 1.Portable Touchscreen Smart TV x 1
- 2.Remote Control x 1
- 3.Power Adaptor x 1
- 4.Power Cord x 1
- 5.USB-C to DC Cable x 1



Portable Touchscreen
Smart TV x1




Remote Control x1



Power Adapter x1



Power Cord x1
(different plugs are available for
different countries)



USB-C to DC Cable X 1


If the above accessories are missing, please contact the product distributor in time.

Note:The specific accessories are subject to the actual configuration. The manufacturer reserves the right to upgrade. Please properly store the packaging materials for future use.

Product Component

1.Button & Interface Functions:


Display power button: Press and hold to power on/off; Rotate the volume down button to the left, and rotate it to the right to increase the volume up button.

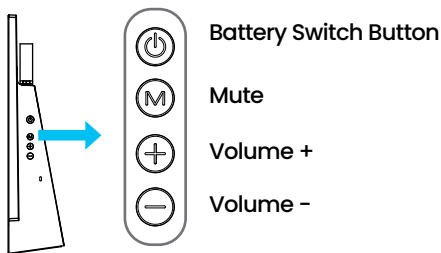

2.DC Charging Port: Connect the power adapter to charge the device.

Interface: HDMI Interface / USB Interface / Type-C Interface.

NOTE: If the device fails to power on due to low battery, please charge it using the power adapter.

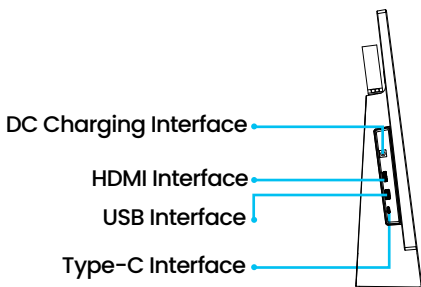


Touch Function

1.Adopt capacitive touch screen (G+G) full lamination.

2.Support 10-point touch.

3.Support writing with fingers, active stylus and other conductive objects

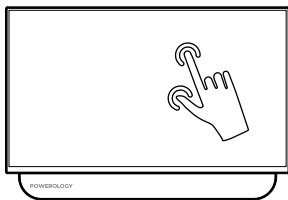


Operation Introduction

1. Battery: This device contains a built-in battery, providing cordless operation. The battery level (as a percentage) and charging status are displayed in the top-right corner of the screen.

Note: Power-on: Turn on battery switch first → red power indicator confirms power on → press screen button to start. (Red light turns off automatically after ~3 mins when powered down.)

1. It takes about 4 hours from a low battery to a full battery, and about 10 hours to charge while using.
2. In standby mode, the remaining battery power will gradually decrease.
3. As the product usage time and frequency increase, the battery life and life will decrease proportionally.
4. To extend the battery life, it is recommended to charge the battery after using it for a period of time, rather than keeping the battery fully charged.
5. Keeping the battery power at 50 % helps to extend the battery life. The standard usage time in this manual is based on laboratory data, so the actual usage time varies depending on usage.

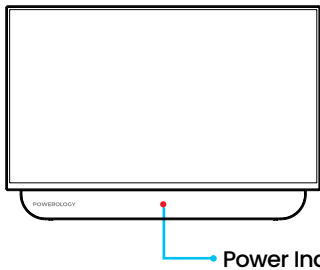

- The red LED indicator will illuminate when the power adapter is connected or the battery switch is turned on
- White light illuminates when powered on

NOTE: Users are strictly prohibited from replacing or disassembling the battery pack without permission to avoid the risk of damage to the entire device or safety accidents caused by improper installation or use of unsuitable batteries. If necessary, please contact the authorized dealer

Remote Control Instruction

1. POWER

Turn the device on or to standby mode.

2. Air Mouse

Turn the mouse function on or off.

3. Application Buttons

Access specific applications quickly and directly.

4. MENU

Settings on main page.

5. HOME

Access the home screen.

6.BACK

Return to upper-level content, or exit the current screen or operation.

7.OK

Confirm, enter or execute the selected item, or show the list of Quick Button.

8.Navigation Buttons (UP/DOWN/LEFT/RIGHT) Navigate the menu to select the content you need.

9.Google Chrome Quickly open Google Chrome.

10.Dashboard

Access the settings dashboard of your Google Display.

11.MIC

Start using the near field voice function.


- Short press MIC button to wake up the Google Assistant.
- Long press MIC button to start receiving your voice command. After your voice command, release MIC button to initiate voice function.

12.Volume Up/Down (+/-) Adjust the sound volume.

13.Page Up / Down


14.MUTE

Mute or restore the device sound.

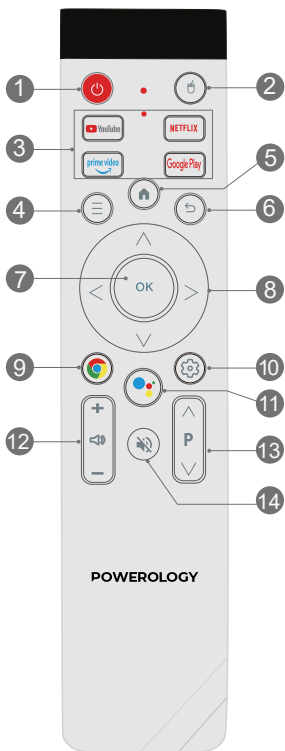

Note:

1. Pair the remote with TV: Long press + [Red LED blinks 4x → off]
2. Cursor Navigation: Tap on to move cursor; tap again to turn off the cursor
3. Voice Control: Long press to activate voice search

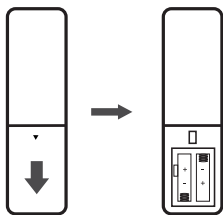

USB Receiver

Note: Plug the USB receiver into the device before using it.

Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.

Material Component

Part No	Toxic and Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁶⁺)	PBBs (PBB)	Polybrominated Diphenyl ethers (PBDE)
Accessory	×	○	○	○	○	○
Plastic Case	○	○	○	○	○	○
Metal Parts	○	○	○	○	○	○
PCB Board	○	○	○	○	○	○
LCD Screen Display	○	○	○	○	○	○
Lithium Polymer Battery	○	○	○	○	○	○
Touch Screen	○	○	○	○	○	○
Speaker	○	○	○	○	○	○
Package	○	○	○	○	○	○

o : Indicates that the content of the toxic and hazardous substance in all homogeneous materials of the part is within the limit requirements specified.

X: Indicates that the content of the toxic and hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified.

Notes:

1.This product is produced according to environmental protection design and lead-free production process, and complies with EU RoHS requirements.

2.The toxic and hazardous substances marked with "x" in the table are mainly due to the current technical level development restrictions and no irreplaceable products This product contains a rechargeable lithium battery. It is strictly forbidden to disassemble, hit, squeeze or throw it into fire.

3.Circuit board components: including printed circuit boards and their components, electronic components, solder joints, etc.

4.Depending on the product model, the product you purchased may not contain all of the above components.

The environmental protection use period of the product is 10 years, and the logo is shown on the left.



Some replaceable parts will have a different environmental use date stamped on it This environmental protection use period only applies to the product working under normal use.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
powerology.me/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology_official**

Facebook: **powerology.ME**



Powerology

PARAMONT

شاشة ذكية محمولة تعمل باللمس

SKU: PWH27BFBG

٢	نظرة عامة على المنتج
٢	المواصفات
٤	الاحتياجات
٥	نصائح هامة
٦	الملحقات
٦	مكونات المنتج
٧	وظيفة اللمس
٨	تعليمات التشغيل
٩	تعليمات جهاز التحكم عن بُعد
١٢	تركيب بطاريات جهاز التحكم عن بُعد
١٢	محتويات المواد
١٣	التخلص من المنتج
١٤	الضمان
١٤	اتصل بنا

شاشة Powerology Paramont الذكية المحمولة التي تعمل باللمس هي تلفزيون ذكي محمول بشاشة لمس مقاس ٢٧ بوصة يعمل بنظام Android ١٥، مصمم للاستخدام المنزلي وأثناء التنقل. يتميز بشاشة Full HD ١٩٢٠x١٠٨٠ مع شاشة لمس سعوية بعشر نقاط، ومعالج ثماني النواة قوي، وذاكرة وصول عشوائي (RAM) سعة ٦ جيجابايت، وذاكرة تخزين داخلية سعة ١٢٨ جيجابايت. مع بطارية مدمجة بسعة ٢٧٠٠٠ ملي أمبير، ومكبري صوت ستيريو بقوة ١٠ واط، ودعم لتقنية Wi-Fi و Bluetooth ٥.٠، وعرض الشاشة لاسلكيًا، يوفر تجربة ترفيهية مميزة في أي مكان. خيارات اتصال متعددة تشمل HDMI و USB و Type-C تجعله متوافقًا مع مجموعة واسعة من الأجهزة، بينما يضيف جهاز التحكم عن بُعد المرفق مزيدًا من الراحة للاستخدام اليومي.

المواصفات

المدخلات	تيار متردد ١٠٠-٢٤٠ فولت
مخرجات التيار المستمر	١٩ فولت/٣,٤٢ أمبير
القدرة المقدرة	٦٥ واط كحد أقصى
سعة البطارية	٢٧٠٠٠ ملي أمبير/ساعة
حجم الشاشة	٢٧ بوصة
دقة الشاشة	١٩٢٠ x ١٠٨٠ بكسل
السطوع	٢٥٠-٣٠٠ شمعة/م²
نسبة التباين	١:١٠٠٠ (نموذجي)
نسبة الشاشة	١٦:٩

وزن المنتج	٦,٥ ± ٠,٣ كجم
حجم المنتج	٦١٦,٥ × ٤٢٠ × ٩٩ مم
رقم الموديل	PWH٢٧BF

احتياطات

١. عند تنظيف شاشة التلفزيون الذكي المحمول الذي يعمل باللمس، افصل سلك الطاقة وأطفئ الجهاز دائماً. لا تستخدم محاليل التنظيف السائلة أو بخاخات التنظيف؛ امسح الشاشة بقطعة قماش ناعمة ورطبة. إذا لم تكن الشاشة نظيفة، استخدم منظف شاشات LCD.

٢. عند فصل محول الطاقة من التلفزيون الذكي المحمول الذي يعمل باللمس، امسك قابس الطاقة ثم افصل السلك. لا تسحب سلك الطاقة مباشرة بيدك.

٣. في حال حدوث أي من الحالات التالية، افصل قابس الطاقة من محول الطاقة وأبلغ الوكيل المعتمد.

أ. تلف سلك الطاقة أو قابس الطاقة أو اهترائهما.

ب. سقوط التلفزيون الذكي المحمول الذي يعمل باللمس أو تلف غلافه.

ج. إذا كانت الشاشة غير طبيعية بشكل واضح، فهذا يشير إلى أنها بحاجة إلى إصلاح.

٤. ضع الجهاز في بيئة جيدة التهوية بعيداً عن الضوء القوي ودرجات الحرارة العالية والرطوبة.

٥. يُرجى تخزينه في درجة حرارة الغرفة من ٠ إلى ٤٠ درجة مئوية، وعلى ارتفاع أقل من ٥٠٠ متر فوق مستوى سطح البحر. إذا تجاوزت درجة الحرارة هذا النطاق، فقد يؤثر ذلك على الاستخدام الطبيعي.

١. تُستخدم الفتحات والشقوق الموجودة على الجهاز للتهوية وتبديد الحرارة. لا تقم بسد أو تغطية هذه الفتحات والشقوق.

٢. عند تعطل الجهاز، لا تقم بتفكيكه وإصلاحه بنفسك. يجب عليك الاتصال بالشركة المصنعة الأصلية أو الموزع لحل المشكلة.

٣. تجنب الدوس على مصدر الطاقة أو محول الطاقة لتجنب مخاطر مثل التسرب. إذا كان سلك محول الطاقة تالفاً، لا تستمر في استخدامه، وإلا فقد يكون خطيراً.

٤. يرجى فصل سلك الطاقة أثناء العواصف الرعدية أو عندما لا يتم استخدام الجهاز لفترة طويلة.

٥. لا تضغط على شاشة العرض بقوة أثناء النقل، ولا تضرب شاشة العرض بأدوات حادة أو أجسام صلبة لتجنب تلف الشاشة.

٦. تأكد من أن الأطفال يفهمون مخاطر تسلق هذا المنتج. قد يؤدي سقوط هذا المنتج أو انقلابه إلى إصابات شخصية خطيرة. لا تضع المنتج في وضع غير مستقر أو مائل.

٧. احرص على تنظيم الكابلات المتصلة بالمنتج في الوقت المناسب لتجنب التعثر أو السحب أو الإمساك.

ملاحظة: إذا استخدم المستهلكون محول طاقة للشحن، فعليهم شراء محول طاقة معتمد محلياً ويلبي المتطلبات القياسية.

الملحقات


١. تلفزيون ذكي محمول بشاشة لمس x ١

٢. جهاز تحكم عن بعد x ١

٣. محول طاقة x ١

٤. سلك طاقة x ١

٥. كابل USB-C إلى تيار مستمر x ١



شاشة لمس محمولة
تلفزيون ذكي



جهاز تحكم عن بعد




محول طاقة



سلك طاقة

(تتوفر مقابس كهربائية مختلفة
تناسب مختلف البلدان)



كابل USB-C إلى تيار مستمر

في حال فقدان أي من الملحقات المذكورة أعلاه، يُرجى التواصل مع موزع المنتج في أقرب وقت.


ملاحظة: قد تختلف الملحقات المحددة حسب التكوين الفعلي.

يحتفظ المصنّع بحقه في التحديث. يُرجى حفظ مواد التغليف بشكل صحيح لاستخدامها لاحقاً.

مكونات المنتج

١. وظائف الأزرار والواجهة:


زر تشغيل/إيقاف الشاشة: اضغط مع الاستمرار لتشغيل/إيقاف الجهاز؛ أدر زر خفض الصوت إلى اليسار، وأدره إلى اليمين لرفع الصوت.

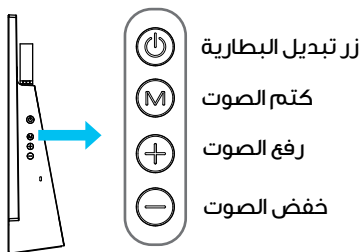

٢. منفذ الشحن بالتيار المستمر: قم بتوصيل محول الطاقة لشحن الجهاز.

الواجهة: واجهة HDMI / واجهة USB / واجهة Type-C.

ملاحظة: إذا لم يعمل الجهاز بسبب انخفاض مستوى البطارية، يُرجى شحنه باستخدام محول الطاقة.

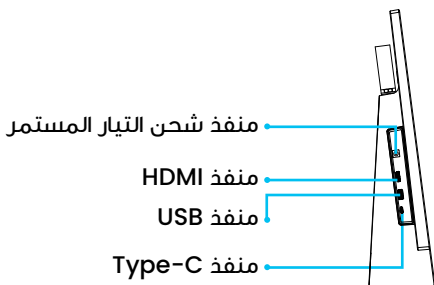


وظيفة اللمس

١. شاشة لمس سعوية بتقنية التغليف الكامل (G+G).

٢. تدعم اللمس المتعدد (١٠ نقاط).

٣. تدعم الكتابة بالأصابع، والقلم النشط، وغيرها من الأجهزة الموصلة.

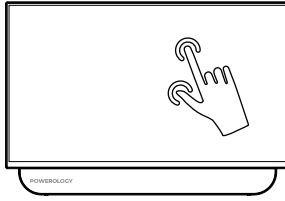

مقدمة عن طريقة التشغيل

١. البطارية: يحتوي هذا الجهاز على بطارية مدمجة، مما يتيح التشغيل اللاسلكي. يتم عرض مستوى شحن البطارية (كنسبة مئوية) وحالة الشحن في الزاوية العلوية اليمنى من الشاشة.

ملاحظة: التشغيل: قم بتشغيل مفتاح البطارية أولاً ← مؤشر الطاقة الأحمر يؤكد التشغيل ← اضغط على زر الشاشة للبدء. (ينطفئ الضوء الأحمر تلقائيًا بعد حوالي ٣ دقائق عند إيقاف التشغيل).

١. يستغرق شحن البطارية من مستوى منخفض إلى مستوى كامل حوالي ٤ ساعات، وحوالي ١٠ ساعات للشحن أثناء الاستخدام.


٢. في وضع الاستعداد، سينخفض مستوى شحن البطارية تدريجيًا.

٣. مع زيادة وقت استخدام المنتج وتكراره، سينخفض عمر البطارية بشكل متناسب.

٤. لإطالة عمر البطارية، يُنصح بشحنها بعد استخدامها لفترة من الوقت، بدلاً من تركها مشحونة بالكامل.

٥. يساعد الحفاظ على مستوى شحن البطارية عند ٥٠٪ على إطالة عمرها.

يستند وقت الاستخدام القياسي المذكور في هذا الدليل إلى بيانات المختبر، لذا يختلف وقت الاستخدام الفعلي تبعًا لطريقة الاستخدام.

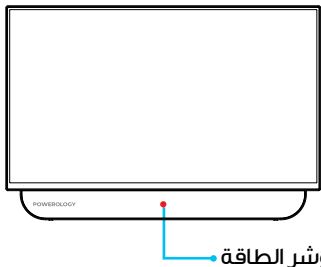

- سيضيء مؤشر LED الأحمر عند توصيل محول الطاقة أو عند تشغيل مفتاح البطارية
- يضيء ضوء أبيض عند تشغيل الجهاز تشغيل الطاقة

ملاحظة: يُمنع منعا باتا على المستخدمين استبدال أو تفكيك حزمة البطارية دون إذن لتجنب خطر تلف الجهاز بالكامل أو وقوع حوادث تتعلق بالسلامة نتيجة التركيب غير الصحيح أو استخدام بطاريات غير مناسبة. في حال الضرورة، يُرجى الاتصال بالموزع المعتمد.

تعليمات استخدام جهاز التحكم عن بُعد

١. زر التشغيل:
لتشغيل الجهاز أو وضعه في وضع الاستعداد.

٢. زر الماوس الهوائي:
لتشغيل أو إيقاف وظيفة الماوس.

٣. أزرار التطبيقات:
للوصول السريع والمباشر إلى تطبيقات محددة.

٤. القائمة:
الإعدادات على الصفحة الرئيسية.

٥. الشاشة الرئيسية:
للوصول إلى الشاشة الرئيسية.

٦. رجوع

العودة إلى المحتوى السابق، أو الخروج من الشاشة أو العملية الحالية.

٧. موافق

تأكيد أو إدخال أو تنفيذ العنصر المحدد، أو عرض قائمة الأزرار السريعة.

٨. أزرار التنقل (أعلى/أسفل/يسار/يمين)

التنقل في القائمة لاختيار المحتوى المطلوب.

٩. جوجل كروم

فتح جوجل كروم بسرعة.

١٠. لوحة التحكم

الوصول إلى لوحة تحكم إعدادات شاشة جوجل.

١١. الميكروفون

بدء استخدام ميزة الصوت عن بُعد.

• اضغط ضغطة قصيرة على زر الميكروفون لتنشيط مساعد جوجل.

• اضغط ضغطة طويلة على زر الميكروفون لبدء استقبال أوامرك الصوتية.

بعد الأمر الصوتي، ارفع إصبعك عن زر الميكروفون لتفعيل ميزة الصوت.


١٢. رفع/خفض مستوى الصوت (+/-)

ضبط مستوى الصوت.

١٣. صفحة لأعلى/لأسفل


١٤. كتم الصوت

كتم صوت الجهاز أو إعادة تشغيله.

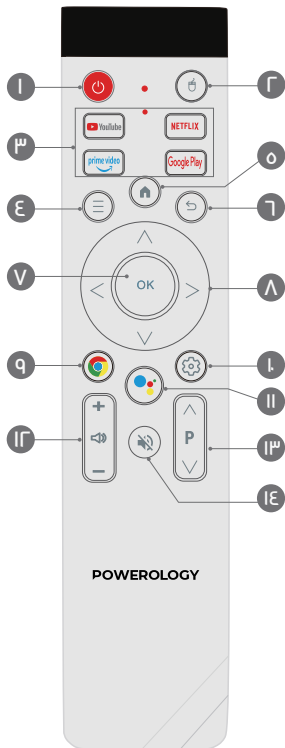

ملاحظة:

١. إقران جهاز التحكم بالتلفزيون: اضغط مطولاً $\ominus$ + $\oplus$ [يومض مؤشر LED الأحمر ٤ مرات $\leftarrow$ ينطفئ]
٢. تحريك المؤشر: انقر لتحريك المؤشر؛ انقر Home مرة أخرى لإيقاف تشغيله
٣. التحكم الصوتي: اضغط مطولاً Voice Search لتفعيل البحث الصوتي

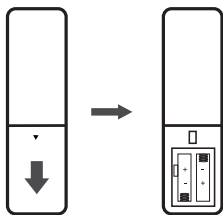

مستقبل USB

ملاحظة: قم بتوصيل مستقبل USB بالجهاز قبل استخدامه.

تركيب بطاريات جهاز التحكم عن بعد

ضع بطاريتين من نوع AAA في حجرة البطاريات بجهاز التحكم عن بعد، مع التأكد من مطابقة علامات القطبية داخل الحجرة.

المكون المادي

رقم القطعة	المواد أو العناصر السامة والخطرة					
	الخصائص	الزئبق	الكاديوم	الكروم سداسي التكافؤ	ثنائي فينيل الإيثر متعدد البروم	متعدد البروم إيثرات ثنائي الفينيل
ملحق	X	○	○	○	○	○
علبة بلاستيكية	○	○	○	○	○	○
أجزاء معدنية	○	○	○	○	○	○
لوحة دوائر مطبوعة	○	○	○	○	○	○
شاشة عرض LCD	○	○	○	○	○	○
بطارية ليثيوم بوليمر	○	○	○	○	○	○
شاشة لمس	○	○	○	○	○	○
مكبر صوت	○	○	○	○	○	○
عبوة	○	○	○	○	○	○

- O:** يشير إلى أن محتوى المادة السامة والخطرة في جميع المواد المتجانسة للجزء يقع ضمن الحدود المسموح بها.
- X:** يشير إلى أن محتوى المادة السامة والخطرة في مادة متجانسة واحدة على الأقل للجزء يتجاوز الحد المسموح به.

ملاحظات:

1. هذا المنتج مُصنَّع وفقاً لتصميم صديق للبيئة وعملية إنتاج خالية من الرصاص، ويتوافق مع متطلبات توجيه RoHS للاتحاد الأوروبي.
 2. المواد السامة والخطرة التي تحمل علامة "x" في الجدول تعود بشكل أساسي إلى قيود التطور التقني الحالية ولأن هذا المنتج لا يمكن استبداله. يحتوي هذا المنتج على بطارية ليثيوم قابلة لإعادة الشحن. يُمنع منعاً باتاً فكها أو ضربها أو عصرها أو إلقاؤها في النار.
 3. مكونات لوحة الدوائر: بما في ذلك لوحات الدوائر المطبوعة ومكوناتها والمكونات الإلكترونية، ووصلات اللحام، إلخ.
 4. اعتماداً على طراز المنتج، قد لا يحتوي المنتج الذي اشتريته على جميع المكونات المذكورة أعلاه. مدة صلاحية المنتج لحماية البيئة هي ١٠ سنوات، ويظهر الشعار على اليسار.
- قد تحمل بعض الأجزاء القابلة للاستبدال تاريخ صلاحية بيئية مختلفاً. تُطبق مدة الصلاحية هذه لحماية البيئة فقط على المنتج أثناء استخدامه في الظروف العادية.

التخلص من المنتج

لا يجوز التخلص من هذا المنتج كنفائات منزلية غير مصنفة. ومن المهم فصل هذه النفائات من أجل معالجتها وإعادة تدويرها بشكل صحيح، بما يتوافق مع لوائح إدارة النفائات المحلية.

المنتجات التي تشتريها مباشرة من موقعنا الإلكتروني أو متجر **Powerology** تأتي مع ضمان لمدة ٢٤ شهراً.

ينطبق الضمان لمدة ٢٤ شهراً على المنتجات التي تم شراؤها مباشرة من موقعنا الإلكتروني أو متجر **Powerology**. إذا تم شراء منتجات **Powerology** من أي من بائعي التجزئة المعتمدين لدينا، فسيكون المنتج مؤهلاً للحصول على ضمان لمدة ١٢ شهراً فقط. لتمديد ضمان منتجك، تفضل بزيارة موقعنا الإلكتروني **powerology.me/warranty** واملأ بياناتك في النموذج المقدم بالإضافة إلى صورة تم تحميلها للمنتج لمعالجة طلبك. بمجرد الموافقة، ستتلقى رسالة تأكيد عبر البريد الإلكتروني بشأن ضمان المنتج الممتد. قم بتحميل المعلومات المطلوبة خلال ٤٨ ساعة من الشراء لتكون مؤهلاً لمدة ٢٤ شهراً من فترة الضمان.

لمزيد من المعلومات، يرجى التحقق من:

powerology.me/warranty

اتصل بنا

إذا كانت لديك أي أسئلة حول سياسة الخصوصية هذه، فيرجى الاتصال بنا على:

hey@powerology.me

الموقع الإلكتروني: **powerology.me**

انستغرام: **powerology.me**

فيسبوك: **powerology.ME**