



USER MANUAL


Model: PPBCHA21GY



10000mAh
MAGSAFE COMBO
POWER BANK + CHARGING STAND

PD
20W

1. Illustration

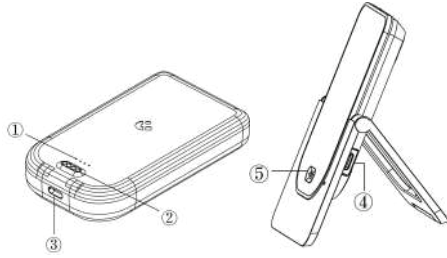

1. LED Indicators
2. Magnetic thimble charging port
3. Type-C PD Input & Output
4. Type-C PD Input
5. Magnetic thimble charging port

2. Product specifications

MagSafe Power Bank Specifications:

- Battery: 9460mAh Li-Polymer
- USB-C Input: 18W DC 5V/3A, 9V/2A, 12V/1.5A
- USB-C PD Output: 20W DC 5V/3A, 9V/2.22A, 12V/1.67A
- Wireless Output: 5W/7.5W/10W/15W

MagSafe Dock Station Specifications:

- USB-C Input: 18W DC 5V/3A, 9V/2A
- Wireless Output: 5W/7.5W/10W/15W

3. Usage

Recharge your power bank

To recharge your power bank, using the Type-C cable to connect it to a computer, car-charger or wall-charger or using the assorted Magsafe dock station and then the power bank would get charged automatically, when start charging, the number indicator will flash, indicating remaining power.

Charge your device

1. Charged from Magsafe power bank output port:
Using your device's charging cable (not included) and connect to the power bank Type-C output port, it will start charging your device, the LCD indicator will indicate your power bank's remaining charge. After finished the charging, it would be turned off automatically without working after 35 seconds.

2. Magsafe power bank wireless charging: First sharking up the power bank, the LED light indicator would be on, and then put your wireless charging phone on the product surface precisely, it would started the charging, during the charging process, the led lights would be keep on and show the current Power.

Magsafe Dock Station with wireless output:

When connected the Type-C cable to the station with a computer, car charger or wall-charger, the blue light (Wireless charging light) on the right corner would flash 3s and entry the standby model, then using your device to put on the surface of the power bank precisely, (Magnet phone can be sticked on the product directly). It will be get charged automatically, and the blue light indicator will keep flashing continuously during charging process.

How to use Magsafe power bank with Magsafe Dock station together?

Using the Type-C cable to connect the dock station with a computer, car charger or wall-charger, and then stick the power bank on the surface of station, the power bank would be get charged directly through the magnetic thimble charging port between of them. At the same time, if you stick your magnet wireless phone on the surface of power bank, the station will give priority to the power supply of your charging device. When your device is fully charged, it will automatically cut off the power supply and switch to charging the power bank, which realizes the function of pass through.



4. Features

With 4 LED lights Indicator

Vibration switch, Precise magnetic attraction alignment
Double-sided magnetic suction can realize filling and discharging at the same time Type-C port can reach PD 20W fast charging and wireless 15W max fast charging Equipped with 360° foldable magnetic suction quick-charging bracket Compatible with charging protocols of various fast charging products on the market Rubberized coating
High transfer efficiency

High density Li-polymer battery cell with high safety and stability

Low self-discharge; Long time standby

High compatibility fits for different mobile phones

Intelligent protect program to avoid overcharging / discharging, short circuit, etc Private and compact design, easy operation

5. Warnings

1. Never leave a charging battery unattended.
2. Do not expose the power bank to excess humidity or liquids. It should be stored in a cool, dry place when not in use.
3. Do not damage or puncture the casing of the power bank. This may cause over-heating, fire or an explosion.
4. Do not expose the power bank to sources of heat, including radiators, stoves, or fires. Do not expose to ambient temperatures above 40°C, such as in a car on hot day, or in direct sunlight. Failure to do so may cause over-heating, fire, or explosion.
5. Do not use in a strong electrostatic or electromagnetic environment, including near microwaves as this may shorten the device's life.
6. If the power bank emits an odour, excessive heat or becomes discoloured or distorted, please discontinue use immediately.
7. Refer all servicing to qualified service personnel, which is required if power bank is damaged in any ways exposed to liquid or does not operate normally. Please do not attempt to service or open the device. This may cause over-heating, fire or an explosion.
8. At the end of the device's life, please dispose of this product at a battery recycling station. It is not suitable for domestic waste disposal.
9. If a new power bank is not used for a period of three months or more, its battery capacity will be reduced, but will restore to normal capacity after 3-4 charge and discharge cycles.

Designed and produced by Teqtronix International Inc.
All rights reserved 2023. Made in China

For more information, please contact our support team
hey@powerology.me



hey@powerology.me | www.powerology.me
powerology powerology.me

٤. المميزات

مع ٤ أضواء LED مؤشر
مفتاح الاهتزاز. محاذة جاذبية مغناطيسية دقيقة
يمكن للشحن المغناطيسي على الوجهين لتحقيق الترابط والتفريع في نفس الوقت. يمكن أن يصل منفذ تليب-سي إلى بي دي - كوابل للشحن السريع والشحن اللاسلكي داوط
أقصى شحن سريع مزود بنشاط مغناطيسي قابل للطي ٣٦٠ درجة
حامل سريع الشحن متوافق مع بروتوكولات الشحن المختلفة
منتجات الشحن السريع
كفاءة نقل عالية
خلية بطارية ليثيوم بوليمر عالية الكثافة مع أمان واستقرار عاليين
انخفاض التفريع الذاتي وقت طويل في وضع الاستعداد
التوافق العالي للهواتف المحمولة المختلفة
برنامج حماية ذكي لتجنب الشحن الزائد/ التفريع، قصير الدوائر. إلخ تصميم خاص ومضغوط. عملية سهلة

٥. تنبيه

١. لا تترك بطارية شحن دون رقابة.
٢. لا تعرض باور بانك للرطوبة أو السوائل الزائدة يجب تخزينها في مكان بارد وجاف عندما لا تكون قيد الاستخدام.
٣. لا تتلف أو تنقب غلاف الباور بانك، قد يتسبب ذلك في ارتفاع درجة الحرارة أو حدوث انفجار.
٤. لا تعرض باور بانك لمصادر الحرارة، بما في ذلك المشعات أو المواقد أو الحقة. لا تعرض لدرجات حرارة محظوة تزيد عن ٤٠ درجة مئوية، كما هو الحال في السيارة في يوم حار أو في ضوء الشمس المباشر. قد يؤدي عدم القيام بذلك إلى ارتفاع درجة الحرارة أو حدوث انفجار أو حدوث انفجار.
٥. لا تستخدم في بيئة الكهروستاتيكية أو كهرومغناطيسية قوية، بما في ذلك أجهزة الميكروويف القريبة لأن هذا قد يضر من عمر الجهاز.
٦. إذا ابتعت من باور بانك راحة أو حرارة زائدة أو تغير لونها أو تشوهها، فيرجى التوقف عن الاستخدام على الفور.
٧. قم بإزالة جميع أعمال الصيانة إلى موظفي الخدمة المؤهلين، وهو أمر مطلوب في حالة تلف بانك الطاقة بأي شكل من الأشكال. أو تعرضه للسوائل أو لا يعمل بشكل طبيعي. يرجى عدم محاولة صيانة الجهاز أو فتحه. فقد يتسبب ذلك في زيادة السخونة أو حدوث انفجار أو حدوث انفجار.
٨. في نهاية عمر الجهاز، يرجى التخلص من هذا المنتج في محطة إعادة تدوير البطاريات، إنه غير مناسب للتخلص من النفايات المنزلية.
٩. إذا لم يتم استخدام باور بانك جديد لمدة ثلاثة أشهر أو أكثر، فسيتم تقليل سعة بطاريته، ولكنها ستستعيد سعتها الطبيعية بعد ٤-٣ دورات شحن وتفريع.

٣. الاستخدام

اشحن باور بانك الخاص بك
لإعادة شحن بانك الطاقة الخاص بك، استخدم كبل تايب-سي لتوصيله بجهاز كمبيوتر أو شاحن سيارة أو شاحن حائط أو باستخدام محطة ماجيسيف المتنوعة ومن ثم سيتم شحن بانك الطاقة تلقائيًا. عند بدء الشحن، مؤشر الرقم سوف ORS المراد، مما يشير إلى القوة المتبقية.

اشحن جهازك

١. مشحونة من منفذ إخراج باور بانك ماجيسيف؛
باستخدام كابل شحن جهازك (غير متضمن) والاتصال بمنفذ إخراج باور بانك تايب-سي، سيبدأ شحن جهازك، وسيشير مؤشر LED إلى الشحن المتبقي لبانك الطاقة لجرك، بعد الانتهاء من الشحن، سيتم إيقاف تشغيله تلقائيًا دون العمل بعد ٣٥ ثانية.


٢-ماجيسيف باور بانك الشحن اللاسلكي؛ أولاً مشاركة باور بانك، سيكون مؤشر ضوء LED قيد التشغيل، ثم ضع هاتف الشحن اللاسلكي على سطح المنتج بدقة، سيبدأ الشحن، أثناء عملية الشحن، أضواء LED ستظل تعمل وتظهر القوة الحالية.

قاعدة ماجيسيف مع خرج لاسلكي:

عند توصيل كابل تايب-سي بقاعدة جهاز كمبيوتر، سيارة الشاحن أو الشاحن الحائط، والضوء الأزرق (ضوء الشحن اللاسلكي) على الزاوية اليمنى سوف يزداد ٣s ودخول طراز الاستعداد، ثم استخدام جهازك لوضع سطح بانك الطاقة بدقة (هاتف المغناطيسي يمكن الالتصاق بالمنتج مباشرة). سيتم شحنه تلقائيًا، وسيبقى مؤشر الضوء الأزرق على الاستمرار أثناء عملية الشحن.

كيفية استخدام باور بانك ماجيسيف مع قاعدة ماجيسيف معًا؟
شاحن أو شاحن حائط، ثم قم بلمس بانك الطاقة على سطح المحطة، سيتم شحن بانك الطاقة مباشرة من خلال منفذ الشحن الكشيتاني المغناطيسي بينهما في الوقت نفسه. إذا قمت بلمس هاتفك اللاسلكي المغناطيسي على سطح بانك الطاقة، فستعطي المحطة الأولوية لمصدر الطاقة لجهاز الشحن الخاص بك، عندما يكون جهازك مشحونًا بالكامل، فسيتم إيقاف تشغيل مصدر الطاقة والتحول إلى شحن الباور بانك، والذي يدرك وظيفة المرور.

١. التوضيح

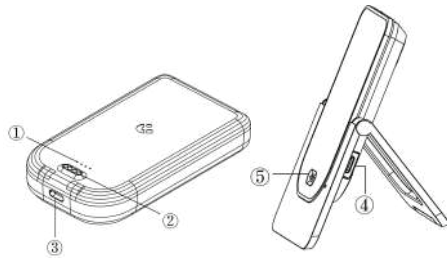

١. مؤشرات LED
٢. منفذ شحن مغناطيسي
٣. إدخال وإخراج بي دي تايب-سي
٤. إدخال تايب-سي بي دي
٥. منفذ شحن مغناطيسي

٢. مواصفات المنتج

مواصفات باور بانك ماجيسيف:
البطارية: ٩٤٦٠ مللي أمبير ليثيوم بوليمر
مدخل يواس بي-سي: ١٨ واط تيار مستمر ٥ فولت/ ٣ أمبير،
٩ فولت/ ٢ أمبير، ١٢ فولت/ ١.٥ أمبير
خرج يواس بي-سي بي دي: ٢٠ واط تيار مستمر ٥ فولت/ ٣ أمبير،
٩ فولت/ ٢.٢٢ أمبير، ١٢ فولت/ ١.٦٧ أمبير
الإخراج اللاسلكي: ٥ واط/ ٧.٥ واط/ ١٠ واط/ ١٠ واط
مواصفات قاعدة الماجيسيف:
مدخل يواس بي-سي: ١٨ واط تيار مستمر ٥ فولت/ ٣ أمبير، ٩ فولت/ ٢ أمبير
الإخراج اللاسلكي: ٥ واط/ ٧.٥ واط/ ١٠ واط/ ١٠ واط



دليل الاستخدام

Model: PPBCHA21GY



١٠٠٠٠ مللي أمبير
ماجيسيف كومبو
باور بانك + قاعدة شحن

PD
20W

تم تصميمها وتصنيعها بواسطة شركة Teqtronix Inc
جميع الحقوق محفوظة © ٢٠٢٣.
للمزيد من المعلومات، يرجى الاتصال بفريق الدعم لدينا
support@porodo.net



hey@powerology.me | www.powerology.me
powerology powerology.me