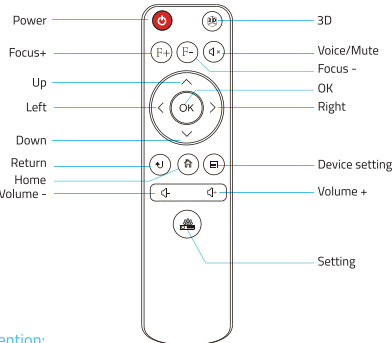
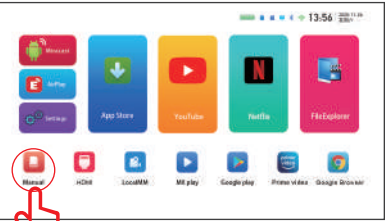
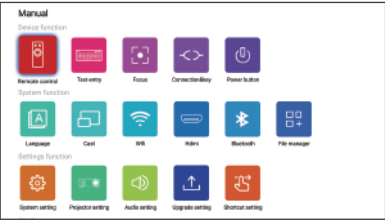
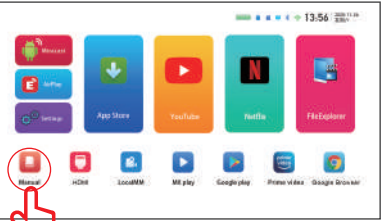
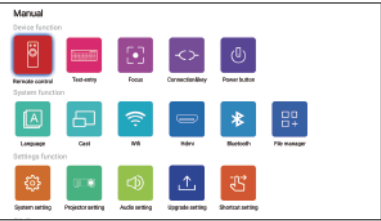
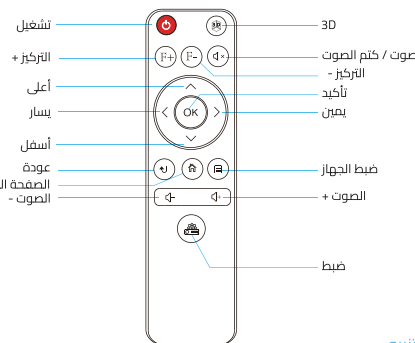


POWERLOGY FULL HD PORTABLE PROJECTOR Portable Projector Instructions  User-Manual Model: BT-PWPROJ70 RoHS compliant 100% Recycle Made in China	Please read the instructions carefully before using the product Thank you for purchasing powerology portable projector. Please read the product manual carefully, we will not be held responsible for any non-standard operation. There is Electronic-Directions app in the product system 1. Select how to turn on the projector Turning on the projector: • Plug in the power cable, the light on the projector light up in red. • Click the power button of the projector one second or turn on the projector by press the power button on remote control, The light on the projector turn to blue light. Focusing and zooming: • Quick FOCUS: long press F+/F- on the body or F+/F- on the remote control, and the FOCUS icon will appear on the projection interface for rapid rotation. • Accurate FOCUS: continuously click F+/F- on the body or F+/F- on the remote control, and the FOCUS icon on the screen will change according to the frequency of clicking	2. Remote control key description  Attention: • Please aim at the projection screen when you use the remote control. • Please pull out of the batteries if you did not use the remote control for a long time. Lens maintenance: • If the lens is dirty, gently wipe it with a soft dust-free cloth or with some alcohol. If the care is not done properly, the glass lens will be easily scratched, which will affect the visual effect Attention: • Before maintaining the lens, disconnect the projector power and make sure the lens has cooled down. Do not touch the lens with your hands. Do not use benzene, thinners, chemical sprayers and other chemicals. (Please maintain the lens in strict accordance with the instructions)	3. Click the "Manual" app, and you can scan the product manual.  Enter app and browse electronic instructions 	Product after-sales warranty service the product provides 2-year free warranty service. Promise: Product performance failure caused by non-human damage within 1 year from the day you received the product, you have the service which the product is repair for free. Not covered by the Warranty (but not limited to the following) • Any repair carried out without prior authorization, mis usage, impact, carelessness, abuse, fluid intake, accident; product quality problems because the improper installation software system; tear up or alter the product table, product series number, false proof mark and the seals. • There is no effective "warranty card" or has been out of the warranty time. (Except the situation which can prove the product is in warranty period). • Alter the warranty card without authorization. • Damages because of natural disaster such as fire accident, water accident and lightning stroke etc. • Product function damage because of man-made reason. • Damages because using the non-original parts or because of the improper use the device's parts. • Usage, maintenance, safekeeping is not following the product manual, then caused the damage.	User information △ Written by the user Customer Name : Telephone No. : Address : Model No. : Serial No. : Date Of Purchase : Remark :
معلومات المستخدم △ تم كتابتها من قبل المستخدم اسم الزبون : رقم الهاتف : العنوان : رقم النموذج : الرقم التسلسلي : تاريخ الشراء: ملاحظة :	خدمة ضمان المنتج بعد البيع يوفر المنتج خدمة ضمان مجانية لمدة عامين. الوعد: فشل أداء المنتج بسبب ضرر غير بشري في غضون عامين من يوم استلام المنتج , لذلك الخدمة بإصلاح المنتج مجاناً. لا يغطيها الضمان (على سبيل المثال لا الحصر ما يلي) • أي إصلاح تم إجراؤه دون إذن مسبق , أو سوء استخدام , أو تأثير , أو إهمال , أو استخدام السوائل , أو حادث ؛ مشاكل جودة المنتج بسبب نظام برنامج التثبيت غير الصحيح ; تمزيق أو تغير جدول المنتج ورقم التسلسلي للمنتج وعلامة الإثبات الكاذب والأختام. • لا توجد "بطاقة ضمان" فعالة أو انتهت فترة الضمان. (باستثناء الحالة التي يمكن أن تثبت أن المنتج في فترة الضمان). • تعديل بطاقة الضمان بدون تصريح. • الأضرار الناجمة عن الكوارث الطبيعية مثل حوادث الحريق وحوادث المياه والصواعق وما إلى ذلك. • تلف وظيفة المنتج لسبب من صنع الإنسان. • الأضرار بسبب استخدام الأجزاء غير الأصلية أو بسبب الاستخدام غير السليم لأجزاء الجهاز. • الاستخدام والصيانة والحفظ الآمن لا يتبع دليل المنتج , ثم تسبب في الضرر.	3. انقر فوق التطبيق "يدوي" , ويمكنك مسح دليل المنتج ضوئياً.  أدخل التطبيق وتصفح التعليمات الإلكترونية 	2. مواصفات مفتاح التحكم عن بعد  تنبيه: • يرجى توجيه شاشة العرض عند استخدام جهاز التحكم عن بعد. • يرجى سحب البطاريات إذا لم تستخدم جهاز التحكم عن بعد لفترة طويلة. صيانة العدسة: • إذا كانت العدسة متسخة , امسحها برفق بقطعة قماش ناعمة خالية من الغبار أو بعض الكحول. إذا لم يتم إجراء العناية بشكل صحيح , فسيتم خدش العدسة الزجاجية بسهولة , مما سيؤثر على التأثير البصري تنبيه: • قبل صيانة العدسة , افصل طاقة جهاز العرض وتأكد من تبريد العدسة. لا تلمس العدسة بيدك. لا تستخدم البازين والمرشحات الكيميائية والمواد الكيميائية الأخرى. • (يرجى الحفاظ على العدسة وفقاً للتعليمات بدقة)	يرجى قراءة التعليمات بعناية قبل استخدام المنتج شكراً لك على شراء جهاز عرض محمول. يرجى قراءة دليل المنتج بعناية , ولن نتحمل المسؤولية عن أي عملية غير قياسية. يوجد تطبيق الاتجاهات الإلكترونية في نظام المنتج 1. حدد كيفية تشغيل جهاز العرض تشغيل جهاز العرض: • قم بتوصيل كابل الطاقة , وسيضيء ضوء جهاز العرض باللون الأحمر. • انقر فوق زر الطاقة الخاص بجهاز العرض لمدة ثانية واحدة أو قم بتشغيل جهاز العرض بالضغط على زر الطاقة الموجود بجهاز التحكم عن بعد , ويتحول الضوء الموجود بجهاز العرض إلى الضوء الأزرق. التركيز والتكبير: • تركيز سريع: اضغط مطولاً على F-/F+ على الجسم أو F-/F+ على جهاز التحكم عن بعد , وستظهر أيقونة FOCUS على واجهة العرض للدوران السريع. • تركيز دقيق: انقر باستمرار على F-/F+ على الجسم أو F-/F+ على جهاز التحكم عن بعد , وسوف تتغير أيقونة FOCUS على الشاشة وفقاً لتكرار النقر	POWERLOGY جهاز عرض محمول عالي الدقة تعليمات جهاز العرض المحمول  دليل الاستخدام Model: BT-PWPROJ70 RoHS compliant 100% Recycle Made in China