



Smart Baby Camera

MODEL: PSWBCWH

- 1x Smart Baby Camera
- 1x Power adapter
- 1x Type-C charging cable
- 1x Reset
- 1x Flexible bracket
(for camera stand mounting or crib mounting)

*Note: micro SD card not included

Figure 1 consists of two schematic diagrams, (a) and (b), showing the top view of circular experimental apparatuses. Diagram (a) shows a circular device with concentric rings. Labels 1 through 7 point to various components: 1 is the outermost ring, 2 is a small circle on the outer ring, 3 is the space between the outer ring and the next ring, 4 is a small circle on the next ring, 5 is the space between the next ring and the center, 6 is a small circle on the innermost ring, and 7 is a small circle on the outermost ring. Diagram (b) shows a circular device with a central hole and a radial array of small holes. Labels 8 through 10 point to various components: 8 is a small circle on the outer edge, 9 is the central hole, and 10 is one of the small holes in the radial array.

1. Micro SD card slot (Add 128GB or less microSD card to enable recording. Only supports microSD card with FAT32 format.)
2. Reset button (Press and hold the reset button for 5 seconds to reset the camera)
3. Light sensor
4. Microphone (talk to the app side)
5. Camera lens
6. Camera indicator (red: camera system start; blue blinking: ready to pair; blue solid: camera online)
7. Night lamp (ON/OFF be controlled by app)
8. Type-C USB power port (Input power: 5VDC, Max.11.5-A)
9. 1/4" Screw socket for mounting the flexible bracket or other tripod accessories
10. Speaker

Use the supplied DC 5V power adapter and the supplied power & temperature cable to power on the baby camera.
The camera will be turned on automatically.

Search for TuyaSmart or SmartLife app in the App Store or Google Play Store.
Download and install the app on your smart device.




Set up the smart baby camera by using the app Check to be sure the camera is in pairing mode. The Wi-Fi icon on the camera display must be flashing rapidly to connect. If not already flashing, press and hold the Reset button until you hear an audible tone.

Use the TuyaSmart or SmartLife app to complete the set up.

Tap 'Add Device' or the '+' sign, then select 'Security camera & Video security' and 'Smart camera(Wi-Fi)' then confirm. You will be prompted to enter your Wi-Fi network and password.

- Be sure to connect to a 2.4GHz Wi-Fi network that covers your installation location.
- One device can only be paired with one App account at a time, if the device has already been paired with another account, then it can't be paired to another account. The device can be removed from the app account by being deleted from the App. The device will be reset automatically once the blue light changes to a solid on.

1	Back to app home page
2	Camera Name
3	Camera settings
4	Current resolution (HD, SD)
5	Current temperature
6	Open to hear from the camera
7	Zoom in/ Zoom out
8	Thumbnails floating on the screen
9	Full screen of the live view
10	Take a photo (photo screenshot)
11	Talk to the camera
12	Take a video (video screen shot)
13	Hide the menu
14	Area of available functions
15	Message center (motion/sound detection)
16	Cloud (Purchase a cloud subscribe- optional)
17	Features (All available features of the camera)

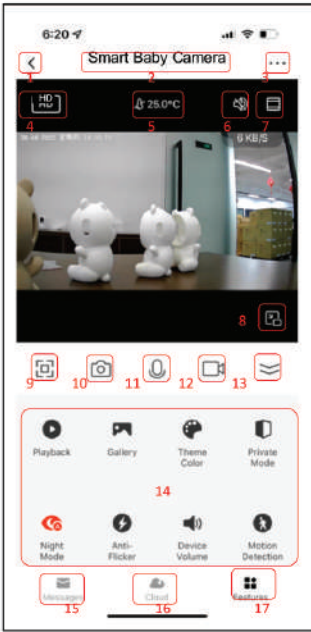

PROBLEM	CORRECTIVE ACTION
Camera will not connect to my Wi-Fi network	- Make sure the Wi-Fi signal is flashing. If the Wi-Fi signal is not flashing, you will need to press and hold Reset Button (see the Description section). - Make sure the Wi-Fi network is a 2.4GHz network, device will not connect to a 5GHz network. - Test your Wi-Fi network work with other devices such as your phone or computer to make sure it is operation properly. - The Wi-Fi connection may be out of range during pairing. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection. - Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.
The camera is off-line	- There could be a temporary issue with your internet connection (e.g., service disruption). Please try again in a few minutes. - Make sure your Wi-Fi network is turned On. - The camera may not have power to it, make sure the wall switch and breaker is in the On position. - Make sure the camera is getting a good signal from your Wi-Fi router. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection. - The camera may have been disconnected from your Wi-Fi network. Press and hold Reset Button(see the Description section) until you hear an audible tone.
Live video stream is slow to load	- Camera streaming issues may be caused by any of the following: - Your server's cellular connection, which relies on mobile coverage. - Limited internet bandwidth at home, for example, other video streaming services running at the same time on your camera can cause congestion slowing down the internet upload and download speeds. - Wi-Fi reception may not be stable or work reliably if the camera's Wi-Fi signal strength is less than 2 signal bars. You may need to install a Wi-Fi repeater or extender to boost the Wi-Fi signal.
How to reset the camera to reenter pairing mode?	Press and hold reset button located at the back of the camera (see Description section) until you hear an audible tone.

The camera is not recording?	- Make sure Record Switch is turned ON in APP, under SD Card Settings. This is located in Settings menu on the upper right corner in the control panel. - Make sure that the microSD card is installed correctly. To confirm the camera is recognizing the microSD card, go to the SD card Settings in the Settings menu and make sure microSD Card is selected. Note: Total capacity, Used and Free Space. If this does not appear you may consider reformatting the microSD card. - WARNING: Reformatting microSD card will delete all videos stored on card. Please go through the troubleshooting section before doing so.
How do I set the camera to Event or Continuous Recording?	In the Settings menu under SD card settings make sure Record Switch is Turned ON and then select Event Recording or Continuous Recording.
How do I check the available space on the SD card?	- In the Settings menu under SD settings, you will see Used Space and Free Space. - NOTE: Camera only support 128GB or less microSD Cards with FAT32 format.
What happens when the microSD card reaches full capacity?	On the microSD card reaches full capacity, new videos will start rewriting/deleting over the oldest videos.
Can I use a new microSD card if I do not want to record over existing videos?	- Yes, you can use a new microSD card if you do not want to record over existing videos by removing the old camera card and replacing with the new card. Inserting the new card with a new one as long as it does not exceed 128GB. Once this is completed, go to the SD card Settings menu and select the new card by going to the SD card settings in the Settings menu and pressing Format SD Card then Confirm. - WARNING: Reformatting microSD card will delete all content stored on card.

For more information, please contact our support team:
support@teqtronixme.com

Designed and produced by Teqtronix international Inc
All rights reserved 2022.

hey@powerology.me | www.powerology.me
f powerology @ powerology.me

Made in China



 • x1 كاميرا الطفل الذكية
 • x1 محول الطاقة
 • x1 كبل شحن تايب-سي
 • x1 إعادة ضبط
 • x1 قوس مرن
 (التركيب حامل الكاميرا)

- x كاميرا الطفل الذكية
 - x محول الطاقة
 - x كبل شحن تابلت-سي
 - x إعادة ضبط
 - x قوس مرين
- (لتركيب حامل الكاميرا)

ملاحظة: بطاقة micro SD غير متضمنة


١٤. فاتحة بطاقة المراقبة (الفرد، المصحف، بطاقة micro5000 نسخة) IFA حجابيات أو أملا
١٥. التفتيش، السجل، بدء بطاقة micro5000 نسخة (FATF)
١٦. إرجاعه الصلة (المصاحف مع السمسار على إرجاعه بطاقة ٥٠ لوان لإعاده
١٧. صفة الكاميرا
١٨. مستشعر الضوء
١٩. صفة الكاميرا (التحدث إلى جانب التفتيش)
٢٠. صفة الكاميرا
٢١. صفة الكاميرا (أحمد) بدء تشغيل نظام الكاميرا: ويضيء أرقى جاهز للإرسال: أ
٢٢. كابل كامييرا، صفة الكاميرا
٢٣. صفة الكاميرا (البريت)
٢٤. صفة الكاميرا (البريت)
٢٥. صفة الكاميرا (البريت)
٢٦. صفة الكاميرا (البريت)
٢٧. صفة الكاميرا (البريت)
٢٨. صفة الكاميرا (البريت)
٢٩. صفة الكاميرا (البريت)
٣٠. صفة الكاميرا (البريت)
٣١. صفة الكاميرا (البريت)
٣٢. صفة الكاميرا (البريت)
٣٣. صفة الكاميرا (البريت)
٣٤. صفة الكاميرا (البريت)
٣٥. صفة الكاميرا (البريت)
٣٦. صفة الكاميرا (البريت)
٣٧. صفة الكاميرا (البريت)
٣٨. صفة الكاميرا (البريت)
٣٩. صفة الكاميرا (البريت)
٤٠. صفة الكاميرا (البريت)
٤١. صفة الكاميرا (البريت)
٤٢. صفة الكاميرا (البريت)
٤٣. صفة الكاميرا (البريت)
٤٤. صفة الكاميرا (البريت)
٤٥. صفة الكاميرا (البريت)
٤٦. صفة الكاميرا (البريت)
٤٧. صفة الكاميرا (البريت)
٤٨. صفة الكاميرا (البريت)
٤٩. صفة الكاميرا (البريت)
٥٠. صفة الكاميرا (البريت)
٥١. صفة الكاميرا (البريت)
٥٢. صفة الكاميرا (البريت)
٥٣. صفة الكاميرا (البريت)
٥٤. صفة الكاميرا (البريت)
٥٥. صفة الكاميرا (البريت)
٥٦. صفة الكاميرا (البريت)
٥٧. صفة الكاميرا (البريت)
٥٨. صفة الكاميرا (البريت)
٥٩. صفة الكاميرا (البريت)
٦٠. صفة الكاميرا (البريت)
٦١. صفة الكاميرا (البريت)
٦٢. صفة الكاميرا (البريت)
٦٣. صفة الكاميرا (البريت)
٦٤. صفة الكاميرا (البريت)
٦٥. صفة الكاميرا (البريت)
٦٦. صفة الكاميرا (البريت)
٦٧. صفة الكاميرا (البريت)
٦٨. صفة الكاميرا (البريت)
٦٩. صفة الكاميرا (البريت)
٧٠. صفة الكاميرا (البريت)
٧١. صفة الكاميرا (البريت)
٧٢. صفة الكاميرا (البريت)
٧٣. صفة الكاميرا (البريت)
٧٤. صفة الكاميرا (البريت)
٧٥. صفة الكاميرا (البريت)
٧٦. صفة الكاميرا (البريت)
٧٧. صفة الكاميرا (البريت)
٧٨. صفة الكاميرا (البريت)
٧٩. صفة الكاميرا (البريت)
٨٠. صفة الكاميرا (البريت)
٨١. صفة الكاميرا (البريت)
٨٢. صفة الكاميرا (البريت)
٨٣. صفة الكاميرا (البريت)
٨٤. صفة الكاميرا (البريت)
٨٥. صفة الكاميرا (البريت)
٨٦. صفة الكاميرا (البريت)
٨٧. صفة الكاميرا (البريت)
٨٨. صفة الكاميرا (البريت)
٨٩. صفة الكاميرا (البريت)
٩٠. صفة الكاميرا (البريت)
٩١. صفة الكاميرا (البريت)
٩٢. صفة الكاميرا (البريت)
٩٣. صفة الكاميرا (البريت)
٩٤. صفة الكاميرا (البريت)
٩٥. صفة الكاميرا (البريت)
٩٦. صفة الكاميرا (البريت)
٩٧. صفة الكاميرا (البريت)
٩٨. صفة الكاميرا (البريت)
٩٩. صفة الكاميرا (البريت)
١٠٠. صفة الكاميرا (البريت)



كاميرا الطفل الذكية

MODEL: PSWBCWH

١	المودع إلى الصفحة الرئيسية للتطبيق
٢	اسم الكاميرا
٣	إعدادات الكاميرا
٤	الدفعة الحالية (HD, SD)
٥	درجة الحرارة الحالية
٦	أماح لتسممع من الكاميرا
٧	تكبير / تصغير
٨	الصورة المصغرة تظهر على الشاشة
٩	شاشة كاملة لعرض المباشر
١٠	اللقطة صورة (لقطة شاشة)
١١	تحدث إلى الكاميرا
١٢	خذ مقطع فيديو (لقطة شاشة فيديو)
١٣	إدخال القائمة
١٤	مجال الوظائف المتاحة
١٥	مركز الرسائل (كشف الحركة / الصوت)
١٦	Cloud (شراء اشتراك سحابي / اختياري)
١٧	ميزات (جميع الميزات الموفرة في الكاميرا)

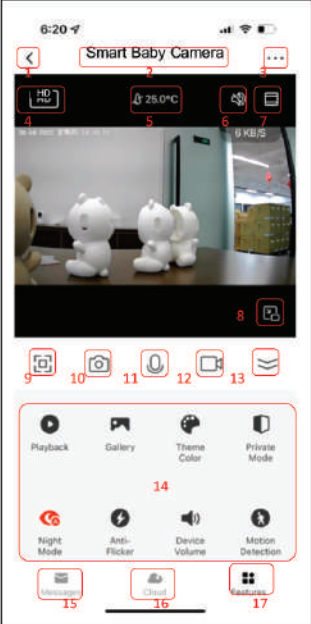

يستخدم محول التيار المستمر بجهد 5 فولت وكابل الطاقة ودرجة الحرارة المرفقين لتشغيل كاميرا الأطفال.

تبحث عن تطبيق Tuya Smart أو Smart Life في App Store أو Google Play Store. قم بتنزيل التطبيق وتثبيته على جهازك الذكي.



قم بإعداد كاميرا الطفل الذكية باستخدام التطبيق تحقق للتأكد من أن الكاميرا في وضع الإقرا. يجب أن يكون رمز Wi-Fi على شاشة الكاميرا سريعاً للاتصال. إذا لم يكن الأمر كذلك ، فاضغط مع الاستمرار على زر إعادة الضبط حتى تسمع نغمة مسموعة.

استخدم تطبيق Tuya Smart أو Smart Life لإكمال الإعداد.

نشر على "إضافه جهاز" أو علامه "+" ، ثم حدد "كامرا الأمان وأمان الفيديو" و "الكاميرا الذكيه (Wi-Fi)" ثم حدد. سيطلب منك إدخال شبكة Wi-Fi وكلمة المرور.

تأكد من الاتصال بشبكة Wi-Fi بتردد ٢,٤ جيجا هرتز تغطي موقع التثبيت الخاص بك.

ب) لا يمكن إقران جهاز واحد إلا بحساب تطبيق واحد في كل مرة ، إذا تم إقران الجهاز بالفعل بحساب آخر ، فلا يمكن إقرانه بحساب آخر. يمكن إزالة الجهاز من حساب التطبيق عن طريق حذفه من التطبيق. سيتم إعادة ضبط الجهاز تلقائياً بمجرد أن يتغير الضوء الأزرق إلى وضع ثابت.

[illegible]

لمزيد من المعلومات ، يرجى الاتصال بفرق الدعم لدينا:
support@teqtronixme.com
مصمم وإنتاج شركة ليكترونكس إنترناشيونال.
جميع الحقوق محفوظة ٢٠٢٢.

hey@powerology.me | www.powerology.me
f powerology @ powerology.me

Made in China
FCC RoHS