POWEROLOGY

USER MANUAL

300W
POWER SERIES CORDLESS VACUUM

PSV300V2GY

Safety Warning

1. Do not use the unit, store, or charge battery outdoors or on wet surfaces. Do not allow to get wet.

2. Do not allow to be used as a toy Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.

3. Do not use a charger with a damaged power cord or plug. If the device or charger does not work properly, dropped, damaged, missed or dropped into water, please contact us.

4. Do not touch the charger with wet hands to avoid electric shock.

5. Do not vacuum flammable or combustible liquids, such as gasoline, or use in areas where liquids may be present.

6- Turn off the power switch before removing or installing the power nozzle.

7- Do not vacuum anything that is burning or smoking, such as cigarettes, matches or hot ashes.

8- Do not use without filters or dirt cups to avoid contaminating the air. Wash your hands after using the vacuum cleaner.

9- Do not incinerate even if the charger, battery, or equipment is severely damaged. The battery may explode on fire. Do not expose the battery to high temperatures, as it may catch fire or explode.

10- Unplug the charger from the power outlet before performing routine cleaning or maintenance.

11- Battery leaks may occur under extreme conditions. If any liquid gets on your skin, wash quickly with soap and water. If liquid gets into your eyes, rinse with water for at least 15 minutes immediately. Seek medical attention immediately.

12- Charge the unit with the charger we provided.

13- The charger is for indoor use only. Make sure to always keep the battery and charger in a dry place.

14- Avoid using this product to vacuum hard, sharp objects, as this may cause damage.

15- Store properly in a dry place indoors. Do not expose the machine to freezing temperatures.

16- Note: The vacuum cleaner adopted thermal protection technology to prevent overheating, will stop working when the item is over-heating.

Package List

Part name	Quantity
Main Body	1
Retractable Aluminum Alloy Tube	1
Motor Brush Head	1
2 in 1 Dusting Brush	1
Crevice Tool	1
Carpet Brush Roller	1
Extra HEPA Filter	1
Wall Mount	1
Detachable Battery	1
Charger	1
Brush Cleaning Tool	1
User's Manual	1

Accessories Introduction

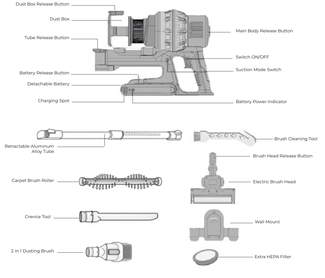

Product Assembling Diagram



Charging



- Charging, low charged
- Charging, medium charged
- Charging, near fully charged
- Fully charged

Power Indicator

Attention:

Please ensure that it is fully charged when using it for the first time. Please run out the battery power before first charge to extend the product life.

- High level of charge
- Medium level of charge
- Low level of charge
- Empty and needs charging

Brush Introduction

1. Crevice Nozzle Tool

Remove dust on hard-to-reach area like window gap, bed feet, gaps between tables and chairs, etc .



2. 2-in-1 Brush Tool

Remove dust and hair on carpets and fleece



How to Use

Preparing

Please confirm if the vacuum is fully charged before using. Please charge it for more than 5 hours before the first use to ensure the normal operation of the product. Then select the appropriate brush head according to the area need to be cleaned. (check the "Brush Instructions")

Battery Install and Remove

Press the release button and drag the battery to remove it. Press the release button and push the battery to install it.



Operating

Switch On/Off and Change Suction Mode



Press the switch ON/OFF to turn on, the machine will start to operate in standard suction mode. Press the switch ON/ OFF again to turn off the vacuum.

Maintenance

Please clean it regularly to prolong the service life of the vacuum cleaner. Wash the filter unit with cold water at least every month.

Main Body (hand-held, non-washable parts) Cleaning:

(1) Turn off the power before cleaning the body
(2) Please use a neutral detergent, wipe the body with half-wet cloth,
(3) Please avoid sun exposure and store in a cool and dry place.

Dust Box Cleaning

A. Press the release button to open the dust box lid, dump out the trash (as shown below in the picture)

B. Press the main body release button to remove the main body.

C. Twist the dust box anticlockwise to remove the dust box and take out the filter.

D. Clean the filter and dust box with or without water and dry it.

E. Install the filter in correct direction, make the buckles in right place and twist to fix it.

F. Install the main body. Put the hook into the hole, push the rear part and stop until hearing the sound of locking.



Brush Roller Cleaning

Ensure the appliance is disconnected from the charger before removing the brush roller. Be careful not to pull the ON trigger.

(1) Push the brushbar head release button in the direction of the arrow until the cover of the brushbar head pops to open
(2) Remove the brushbar head by lifting it in the direction indicated
(3) The brush roller is washable. Before replacing, check that the brush roller is completely dry. After you have finished cleaning the Soft Roller Nozzle , reinstall it by following the disassembly steps in reverse to install the brush roller.



Troubleshooting

Common trouble	Possible causes	Solutions
Main unit not working	Low battery power	Charge the unit before use
	Suction inlet blocked	Remove blockage in suction inlet
Weak suction	Dust bin or filters blocked with dust	Remove the dust inside the bin or filters
	Rolling brushed is jemmed with hair or long straps	Remove hair or long straps from rolling brush.

For more information, please contact our support team:
hey@powerology.me

RoHS

www.powerology.me | www.powerology.me
powerology powerology.me

F. ثبّت الجسم الرئيسي. ضع الخطافات في الفتحة، واضغط الجزء الخلفي، وتوقف حتى تسمع صوت القفل.



تنظيف اسطوانة الفرشاة

تأكد من فصل الجهاز عن الشاحن قبل إزالة أسطوانة الفرشاة. اتجرى على عدم سحب الزناد ON.

(١) اضغط على زر تحرير رأس شريط الفرشاة في اتجاه السهم حتى ينفتح غطاء رأس شريط الفرشاة.
(٢) قم بإزالة رأس غطاء الفرشاة بوضعه في الاتجاه المحدد.
(٣) أسطوانة الفرشاة قابلة للغسل. قبل الاستبدال، تأكد من جفاف أسطوانة الفرشاة تمامًا. بعد الانتهاء من تنظيف فوهة الأسطوانة الناعمة ، أعد تركيبها باتباع خطوات التفكيك في اتجاه العكس لتثبيت أسطوانة الفرشاة.



استكشاف الأخطاء وإصلاحها

		حلول
مشكلة مشتركة	الأسباب المحتملة	
الوحدة الرئيسية لا تعمل	طاقة البطارية منخفضة	اشحن الوحدة قبل الاستخدام
	سد مدخل الشفط	إزالة الانسداد في مدخل الامتصاص
شفط ضعيف	حاوية الغبار أو الفرشاات مسدودة بالغبار	قم بإزالة الغبار الموجود داخل الصندوق أو الغبار
	فرشاة الدحرجة مشغولة بالشعر أو الأشرطة الطويلة	قم بإزالة الشعر أو الأشرطة الطويلة من الفرشاة المتدحرجة

لمزيد من المعلومات ، يرجى الاتصال بفريق الدعم لدينا:
hey@powerology.me

RoHS

www.powerology.me | www.powerology.me
powerology powerology.me

أعمال صيانة

يرجى تنظيفها بانتظام لإطالة عمر خدمة المكنسة الكهربائية. اغسل وحدة المرشح بالماء البارد كل شهر على الأقل.

الجسم الرئيسي /أجزاء محمولة باليد ، غير قابلة للغسل/ التنظيف:
(١) افصل الطاقة قبل تنظيف الجسم
(٢) يرجى استخدام منظف محايد ، امسح الجسم بقطعة قماش نصف مبللة ،
(٣) يرجى تجنب التعرض لأشعة الشمس وتخزينها في مكان بارد وجاف.

تنظيف صندوق الغبار
A. اضغط على زر التحرير لفتح غطاء صندوق الغبار ، وقم بتفريغ القمامة (كما هو موضح أدناه في الصورة)

B. اضغط على زر تحرير الجسم الرئيسي لإزالة الجسم الرئيسي.

C. قم بفك صندوق الغبار عكس اتجاه عقارب الساعة لإزالة صندوق الغبار وإخراج المرشح.

التشغيل
قم بتشغيل / إيقاف وتغيير وضع الشفط

D- نظف المرشح ومصدوق الغبار بالماء أو بدونه ثم جففهما.

٢. أداة فرشاة ٢ في ١
إزالة الغبار والشعر من السجاد



كيف تستعمل

خطة
يرجى التأكد إذا كانت المكنسة مشحونة بالكامل قبل الاستخدام. يرجى شحنه لأكثر من ٥ ساعات قبل أول استخدام لضمان التشغيل الطبيعي للمنتج. ثم حدد رأس الفرشاة المناسب حسب المنطقة المراد تنظيفها (الرجوع إلى "إرشادات الفرشاة")

تركيب وإزالة البطارية
اضغط على زر التحرير واسحب البطارية لإزالتها. اضغط على زر التحرير وادفع البطارية لتثبيتها.



التشغيل
قم بتشغيل / إيقاف وتغيير وضع الشفط

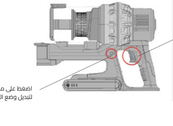

اضغط على مفتاح التشغيل / الإيقاف للتشغيل ، سيبدأ الجهاز في العمل في وضع الشفط القياسي. اضغط على مفتاح التشغيل / الإيقاف مرة أخرى لإيقاف تشغيل المكنسة الكهربائية.

اضغط على مفتاح وضع الشفط للتبديل وضع الشفط

مخطط لجميع المفتاح



الشحن



- الشحن ، منخفضة الشحن
- الشحن ، متوسط الشحن
- الشحن ، شبه مشحونة بالكامل
- مشحونة بالكامل

مؤشر طاقة

اقتباس
يرجى التأكد من أنه مشحون بالكامل عند استخدامه للمرة الأولى. يرجى نفاد طاقة البطارية قبل الشحن الأول لإطالة عمر المنتج.

- مستوى عالي من الشحن
- مستوى متوسط من الشحن
- مستوى منخفض من الشحن
- فارغ ويحتاج إلى الشحن

مقدمة للفرشاة

١. أداة شق فوهة
قم بإزالة الغبار عن الصناطق التي يصعب الوصول إليها مثل فتحة النافذة وأرجل السرير والفجوات بين الطاولات والكراسي ، إلخ.



قائمة العروة

	Quantity
جزء اسم	
الجسم الرئيسي	1
أنبوب سبائك الألومنيوم قابل للسحب	1
رأس فرشاة المحرك	1
٢ في ١ فرشاة غبار	1
أداة شق	1
فرشاة تنظيف السجاد	1
مقم HEPA إضافي	1
جدار داخلي	1
بطارية قابلة للفصل	1
شاحن	1
أداة تنظيف الفرشاة	1
دليل المستخدم	1

مقدمة الملحقات



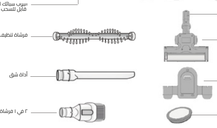

إرشادات السلامة

١. لا تستخدم الوحدة أو تخزن أو تشحن البطارية بالخارج أو على الأسطح الرطبة. لا تسمح للبلل.

٢. لا تسمح بأستخدامها كلعبة. غير مخصص للاستخدام من قبل الأطفال الذين يقع أعمارهم ١٢ عامًا أو أقل. الإشراف الدقيق ضروري عند استخدامه من قبل الأطفال أو بالقرب منهم لتجنب الإصابة أو التلف. احرص على إبعاد الأطفال عن المنتج، ولا تسمح للأطفال بوضع أدوار أو أشياء أخرى في أي فتحات.

٣. لا تستخدم شاحنًا به سلك تالف أو قابس تالف. في حالة عدم عمل الجهاز أو الشاحن بشكل صحيح ، أو سقوطه ، أو تلفه ، أو فقده ، أو سقوطه في الماء ، فيرجى الاتصال بنا.

٤. لا تلمس الشاحن بيد مبللة لتجنب الصدمة الكهربائية.

٥. لا تقم بتفريغ السوائل القابلة للقبول أو الحارق ، مثل البنزين ، أو استخدامها في المناطق التي قد توجد بها سوائل.

٦. قم بإيقاف تشغيل مفتاح الطاقة قبل إزالة فوهة الطاقة أو تركيبها.

٧. لا تقم بتنظيف أي شيء يحترق أو يدخن ، مثل السجائر أو أعواد الثقاب أو الرماد الساخن.

٨. لا تستخدم بدون مرشحات أو أكواب قذرة لتجنب تلوث الهواء. اغسل يديك بعد استخدام المكنسة الكهربائية.

٩. لا تحرق حتى في حالة تلف الشاحن أو البطارية أو الجهاز بشدة. قد تنفجر البطارية أثناء الاشتعال. لا تعرض البطارية لدرجات حرارة عالية ، قد تعرق بها أو تشتعل.

١٠. افصل الشاحن عن مأخذ التيار الكهربائي قبل إجراء التنظيف أو الصيانة الروتينية.

١١. قد يحدث تسرب للبطارية في ظل ظروف قاسية. إذا لامس أي سائل بشرتك ، اغسلها بسرعة بالماء والصابون. إذا دخل السائل في عينيك ، اشطفهما بالماء لمدة ١٥ دقيقة على الأقل. على الفور. اطلب العناية الطبية على الفور.

١٢. اشحن الوحدة بالشاحن الذي قدمناه.

١٣. الشاحن للاستخدام الداخلي فقط. تأكد دائمًا من الاحتفاظ بالبطارية والشاحن في مكان جاف.

١٤. تجنب استخدام هذا المنتج للتنظيف الأشياء الصلبة والحادة ، فقد يتسبب ذلك في تلفها.

١٥. يجب التخزين بشكل صحيح في مكان جاف بالداخل. لا تعرض الجهاز لدرجات حرارة متجمدة.

١٦. ملاحظة: المكنسة الكهربائية المستخدم تقنية الحماية الحرارية لمنع ارتفاع درجة الحرارة ، وسوف تتوقف عن العمل عندما يكون العنصر في درجة حرارة زائدة.

POWEROLOGY

دليل الاستخدام

مكنسة كهربائية بدون أسلاك
بقوة ٣٠٠ واط

PSV300V2GY