80 mm

103 mm

POWEROLOGY

THE POWER EXPERTS

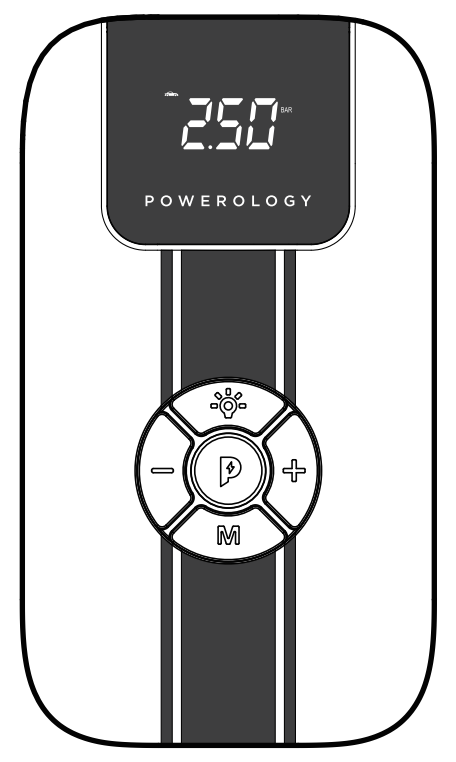

User Manual

Jump Starter with Air Compressor

Model: PPBCHA13

Made In China

CE RoHS compliant

Product Description

1. Please read this manual carefully and keep it properly before using this product for the first time. It will guide you to use it correctly and remind you of relevant precautions.
2. This product is a portable car jump starter + air compressor product. It can start a car whose battery (12V) is losing electricity, and has the function of inflating cars, motorcycles, bicycle tires and balls; it can also be used as a mobile power source for mobile phones, tablets, PSP, MP3/MP4, cameras, etc. Digital electronic products are charged/powered, and the products also have LED light functions (lighting mode, warning mode).
3. Note that this product is not a toy and children are forbidden to use it.

Product Features

Engine Start

Power Bank

LED Light

Air Inflation

Car Tires

Motorcycle Tire

Bicycle Tire

Ball Supplies

Product Diagram

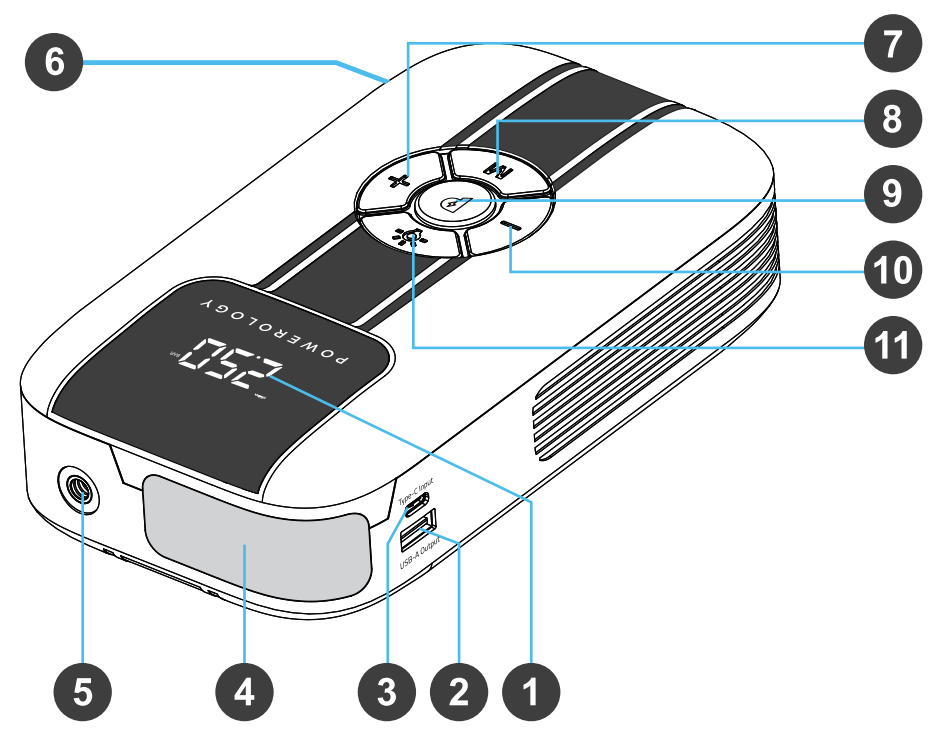

1. Digital Tube Display
2. USB 5V/9V/12V Output
3. Type-C Charging Port
4. LED Light
5. Inflatable Tube Interface
6. Jumper Cable Connection Port
7. Air Pressure Set " + " Button
8. " M " Button(Mode/Unit Switching)
9. Power Button
10. Air Pressure Set " - "Button
11. LED Light Button

Charge Digital Products



Plug the USB port of the charging cable into the product USB interface.



Insert the other end of the charging cable into the corresponding charging port of the mobile phone or digital device.



Press and hold the "Power" button for 2 seconds to turn on the power, and the USB power supply can be started.

Car Jump Start



Remove the silicone plug and insert the EC5 connector of the jumper cable into the hole position.



Connect the red clamp to the positive pole (+) and the black clamp to the negative pole (-) of the car battery.



Ignition within 30 seconds: Press the car start button or turn the ignition switch to the START position.



After successful startup, pull the plug of the wire clip from the product and remove the clip from the positive and negative terminals of the car battery.

Note: When starting the car,
please make sure that the power of the product is above 50%.

Detailed Instructions For Inflation Function

1. Charge the Product

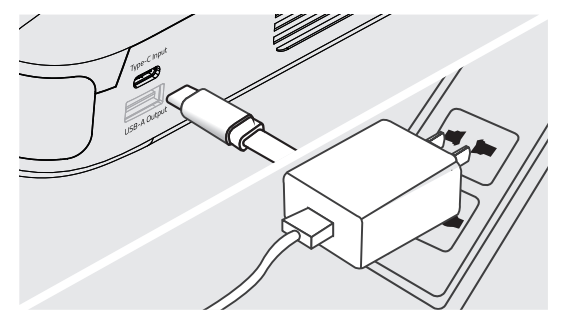

Please fully charge the product before using it for the first time. Charging: The units digit of the battery percentage value flashes (flashing once per second).the screen displays: 🔋 Fully charged: Stop flashing and stop charging, turn off the screen after 10 seconds and enter sleep state. Note: The charging process will not be able to use this product.

2. Power On/Off

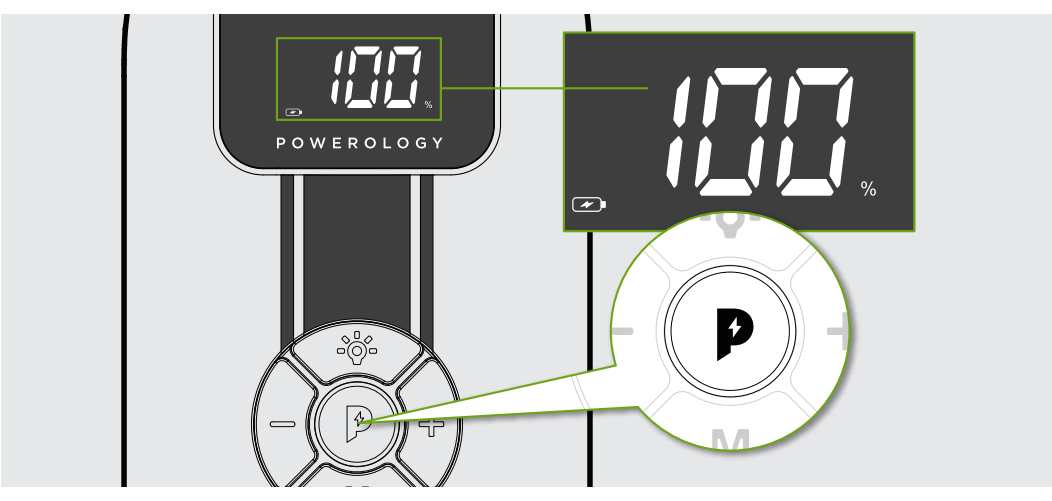

Press and hold the "Power" button for 2 seconds to turn on the device. At this time, the battery percentage and the " 🔋 " icon will be displayed on the screen, and the USB output function will be turned on at the same time. After booting, single press the "Power" button to switch between on/pause of inflation.
Press and hold the "Power" button again for 2 seconds to shut down. (If the product is turned on without any operation within 30 seconds, it will also automatically shut down.)

3. Connect the Inflation Tube

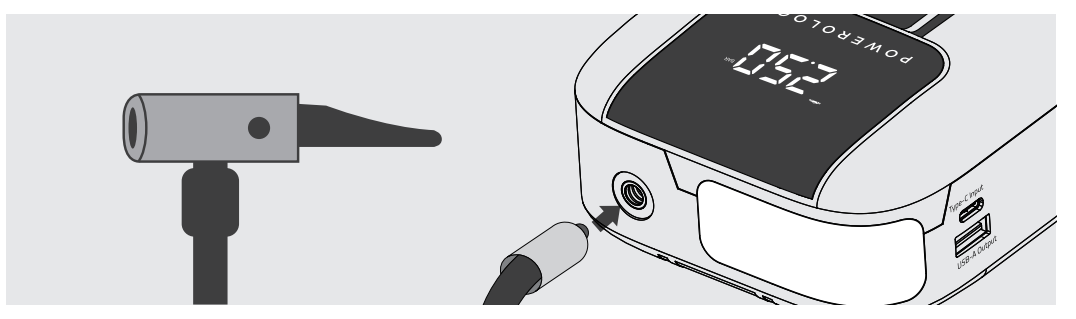

Bicycles, electric bicycles, motorcycles, and cars are usually directly connected by this air pipe.

4. Gas Nozzle / Gas Needle Mounting Method



When inflating the air bed and swimming ring, please select a suitable air nozzle, and connect the air nozzle to the inflation tube before inflating.



When inflating basketball, football and other balls, you need to use an air needle. Connect the air needle to the inflation tube before inflating.

5. Inflation Air Pressure

To ensure safety, before using this device for inflation, please know the air pressure value required by the inflated item (check the surface information of the inflated item or query the instruction manual of the inflated item) to avoid personal injury caused by over-inflation.

Common Items Recommended Inflatable Air Pressure Gauge

Category	Types	Recommended air pressure range
Car	Car tires	2.2-2.8 bar (32-40psi)
Motorcycle	Motorcycle, Electric Motorcycle tires	1.8-3.0 bar (26-44psi)
Bike	Folding bicycle tires 12" 14" 16" bicycle tires 20" 22" 24" bicycle tires 26" 27.5" 29" bicycle tires	45-50psi 30-50psi 40-50psi 45-65psi
Ball	Basketball Football Volleyball Rugby	7-9psi 8-16psi 4-5psi 12-14psi

Note:

1. This product is not suitable for truck tires and road bicycle tires.
2. The data of the recommended inflation air pressure range is for reference only. Please refer to the instruction manual of the inflated item for actual use. (The above data comes from the laboratory)

5. Preset Inflation Air Pressure

Mode Selection

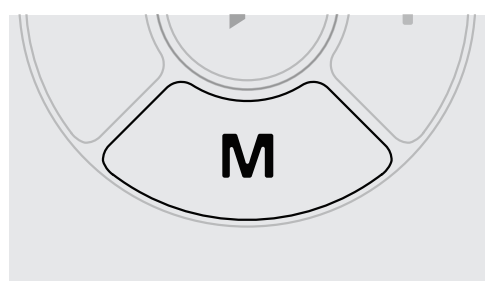

Short press the "M" button to select the inflation mode: each time you press this button, you can switch between the four inflation modes of "car", "motorcycle", "bicycle" and "ball".(Long press this key to switch between PSI, BAR, KPA, Kg/cm2 four air pressure units.)

Car mode:
Default 36psi (approximately equal to 2.5bar)

Motorcycle mode:
Default 35psi (approximately equal to 2.4bar)

Bicycle mode:
Default 45psi (approximately equal to 3bar)

Ball mode:
Default 8psi (approximately equal to 0.6bar)

After select the matching inflation mode, the screen displays the default setting value and flashes three times at a frequency of once per second, and then enters the air pressure detection state to detect the current air pressure value of the inflated object. (When the inflated object is not connected, the air pressure value will display "0".)

Adjust Presets

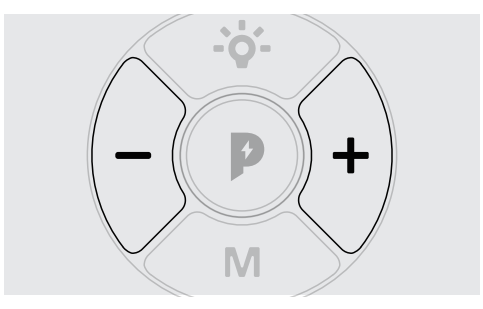

After selecting the inflation mode, short press the "+" key or "-" key to adjust the preset air pressure value; long press to quickly adjust the air pressure value. After the setting is completed, the air pressure value flashes three times at a frequency of once per second, and then the setting is automatically confirmed.

Caution:

1. When adjusting the preset air pressure value, the number flashes to indicate the target air pressure adjustment status, and the number is always on to indicate the real-time air pressure.
2. The default value will be restored after the mode is switched or restarted.
3. When inflating the swimming ring and air bed, just adjust to "ball mode".

7. Inflation Instructions

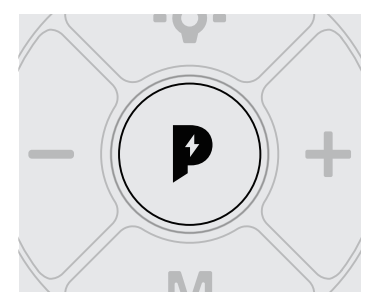

Turn on inflation: After the air pressure setting is completed, short press the "Power" button to start inflation, and the screen displays real-time air pressure changes during inflation.

Stop inflation: When the air pressure reaches the preset value, the air pump will automatically stop inflation. During the inflation process, you can also pause the inflation by short pressing the "Power" button.

Shut down: In the power-on state, press and hold the "Power" button for 2 seconds to shut down. In order to avoid accidental touch, it will automatically shut down if there is no operation within 30 seconds when it is turned on.

Special Reminder

① 75-80dB noise will be generated during inflation.

② The inflation air pressure of balloons, toy balls, swimming rings and other products is less than the range of the air pump, and the inflation cannot be automatically stopped at the preset air pressure. Please be careful when using it.

③ When the equipment continues to work for a long time, the temperature of the body and the gas tube will increase significantly. Please avoid touching the air tube with your hands for a long time. If the temperature is too high, please cool down before continuing to use it. Be careful of burns when disassembling the gas nozzle after use, there will be slight air leakage, please disassemble it quickly.

④ Increased pressure load and lower ambient temperature may cause the endurance of this device to deteriorate.

⑤ As the air pump generates a large amount of heat, please rest for at least 10 minutes after inflating for 10 minutes before using it.

8. Multifunctional Lighting



After the power is turned on, press the "LED light" button to turn on the lighting mode. Short press again in turn to switch to warning light mode, and off.

Basic Parameters

Product Name	Powerology Jump Starter & Air Pump
Model	PPBCHA13
Size	198 x 112 x 53mm
Inflation Pressure Range	0.2~8bar / 3~120psi
Operating Temperature	Charge: 0°C~45°C, Discharge:-10°C~45°C
Storage Temperature	-10°C~50°C
Inflatable Tube Length	435mm(including gas nozzle)
Battery Capacity	11200mAh(41.44wh)
Working Noise	Less than 80dB away from 1 meter
Charging Input	Type-C 15W 5V/3A
Charging Time	About 3.5 hours
Air Pressure Sensor Accuracy	±1psi
USB-A Output	18W 5V/3A, 9V/2A, 12V/1.5A
Start Car Current	600A (1200A Peak)

Precautions

Usage Notice

- This product is not a toy, and it is forbidden for children to use it; it is recommended for users over 16 years of age.
- When the product is used for the first time, charge the product for more than 3 hours.
- This product has a built-in non-removable lithium battery. It is forbidden to throw this product into a fire or throw it away at will. The lithium battery may catch fire, spontaneously ignite and explode due to overheating, impact or water. Please avoid exposure to the sun in the car, or exposed to high temperature environment.
- If the product is swollen, leaking or smells, please stop using it immediately.
- If the product has abnormal noise or high temperature during use, please stop using it and shut it down immediately.
- Please store or use in a dry and clean environment. Avoid dampness, heavy falls, water immersion and sand intrusion. The intrusion of sand and dust may cause damage to the product; this product is also not waterproof, and it is forbidden to wash in water.
- Please keep away from corrosive materials when storing this product, and the storage temperature should not be lower than -10°C or higher than 50°C. Too cold or too hot will shorten the life of the product and damage the built-in battery.
- Please keep this product charged at least once every 3 months.
- Do not disassemble the machine by yourself, otherwise it may cause a safety accident.

Inflation Notice

- The product has a built-in DC motor, which may generate electric sparks during operation. Please do not use it in an flammable and explosive environment.
- Before inflating, please confirm the required air pressure value of the inflated item to avoid personal injury caused by explosion caused by over-inflation.
- When setting the inflation air pressure value, please make sure that the measurement unit is selected correctly, otherwise it may cause accidents such as a tyre burst. Common unit conversion: 1 bar=14.5psi, 1 bar=100kPa.
- When inflating objects, please keep this product a safe distance from children.
- Do not bend or step on the inflation tube when inflating, and be sure to keep the airflow unobstructed.
- Operators are not allowed to leave the scene during inflation. Please observe the inflation process to prevent the inflation air pressure from being too high due to the unpreset air pressure.

Jump Start Notice

- This product can be used to start a 12V battery engine, but cannot be used to start a 24V battery engine.
- Be sure to use the cord clamp provided with the product to start the vehicle.
- It is forbidden to start the car when the power of the product is lower than 50%, otherwise it will cause damage to the product.
- Do not clamp the battery clamps at both ends, otherwise it may cause a safety accident.
- If a startup fails, please try again after at least 1 minute to avoid damage to the product.
- After starting the car, please wait at least 30 minutes before charging the product.

Packing List



Product x1



Inflatable tube x 1

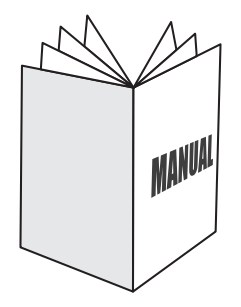

Guide x1



Storage Bag x1



Gas Needle x1



Gas Nozzle x2

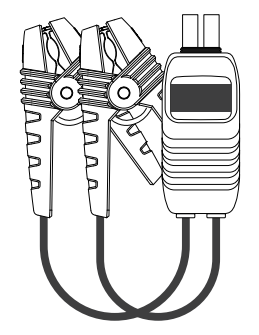

Jumper Cable x1

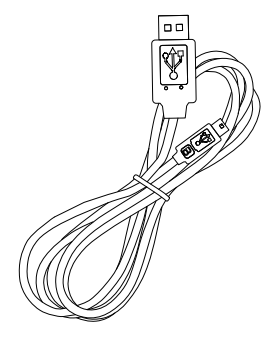

Type-C Charging Cable x1

Note: The illustrations of products, accessories, and display interface in this manual are all schematic diagrams and are for reference only. Since the product is iteratively upgraded from time to time, the actual product and the schematic diagram may be different, please refer to the actual product!

Trouble Shooting

Problem	Elimination Method
Slow inflation	1. Check whether the battery power is sufficient. 2. Check for air leaks in the trachea. 3. Check whether the connecting parts at both ends of the trachea are tightly installed. 4. Check whether the tires are flat.
Has been turned on, but cannot be inflated	1. Check whether the battery power is sufficient. 2. Check whether the air pressure of the inflated item is higher than the preset value.
The inflation is normal, but the display pressure value is zero	Low-pressure inflated objects such as balloons are not within the measurable range of this device.
After installing the gas nozzle tightly, the power has been automatically turned off	It will automatically shut down if there is no operation within 30 seconds, just restart it.
There is air leakage when connecting the trachea	Install the trachea tightly.

Disclaimer

1. The company does not assume any responsibility for problems caused by misoperation beyond the instructions.
2. If the product is damaged by disassembling and installing by oneself, our company will not bear any responsibility.
3. If the use of a mismatched charger causes problems, our company does not assume any responsibility.
4. The company does not assume any responsibility for products beyond the warranty period.

For more information, please contact our support team support@teqtronixme.com

hey@powerology.me | www.powerology.me powerology powerology.me

---

POWEROLOGY

THE POWER EXPERTS

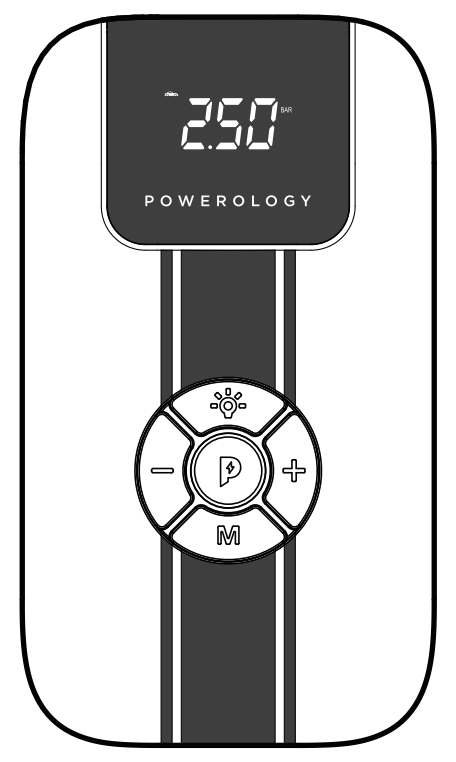

دليل الاستخدام

جامب ستارتر بضاغط هواء

Model: PPBCHA13

Made In China

CE RoHS compliant

وصف المنتج

١. يرجى قراءة هذا الدليل بعناية والاحتفاظ به بشكل صحيح قبل استخدام هذا المنتج لـ اول مرة. سوف يوجهك لاستخدامه بشكل صحيح ويذكرك بالاحتياطات ذات الصلة.

٢. هذا المنتج عبارة عن جهاز تشغيل متنقل للسيارة + منتج ضاغط هواء. يمكنه بدء تشغيل السيارة التي تفقد بطاريتها (١٢ فولت) الكهرباء , ولها وظيفة نفخ السيارات والدراجات النارية وإطارات الدراجات والكرات ؛ يمكن استخدامه أيضًا كمصدر طاقة محمول للهواتف المحمولة والأجهزة اللوحية و PSP و MP٣ / MP٤ والكاميرات, الخ المنتجات الإلكترونية الرقمية مشحونة / تعمل بالطاقة , وتحتوي المنتجات أيضًا على وظائف إضاءة LED (وضع الإضاءة, وضع التحذير).

٣. لاحظ أن هذا المنتج ليس لعبة وأن الأطفال ممنوعون من استخدامه.

ميزات المنتج

بدء تشغيل المحرك

أداة للشحن

ضوء LED

تضخم الهواء

اطارات السيارات

اطارات الدراجات النارية

اطارات الدراجات الهوائية

لوازم الكرة

مخطط المنتج

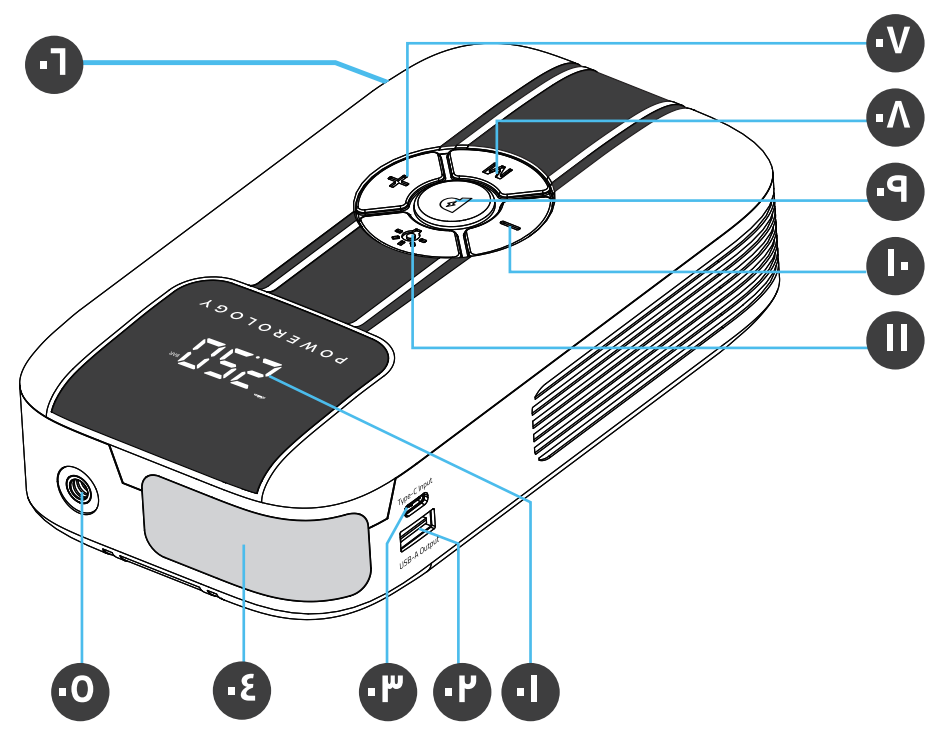

٠١ عرض الأنبوب الرقمي
٠٢ خرج يو أس بي ٥ فولت/ ٩ فولت/ ١٢فولت
٠٣ مدخل شحن تايب-سي
٠٤ ضوء LED
٠٥ واجهة أنبوب قابل للنفخ
٠٦ منفذ توصيل الكابل
٠٧ ضبط ضغط الهواء زر "+"
٠٨ زر "M" (تبديل الوضع / الوحدة
٠٩ زر الطاقة
١٠ ضبط ضغط الهواء زر " - "
١١ زر ضوء LED

شحن المنتجات الرقمية



قم بتوصيل منفذ يو اس بي الخاص بـ كابل الشحن في واجهة يو اس بي للمنتج.



أدخل الطرف الآخر من كابل الشحن في منفذ الشحن المقابل للهاتف المحمول أو الجهاز الرقمي.



اضغط مع الاستمرار على زر "الطاقة" لمدة ثانيتين لتشغيل الطاقة , ويمكن بدء تشغيل مصدر طاقة يو اس بي.

جامب ستارتر للسيارة



قم بإزالة قابس السيليكون وأدخل موصل EC5 الخاص بكابل العبور في موضع الفتحة.



قم بتوصيل المشبك الأحمر بالقطب الموجب (+) والمشبك الأسود بالقطب السالب (-) لبطارية السيارة.



الإشعال في غضون ٣٠ ثانية: اضغط على زر بدء تشغيل السيارة أو أدر مفتاح الإشعال إلى وضع START.



بعد بدء التشغيل الناجح , اسحب قابس مشبك السلك من المنتج وإزالة المقطع من المحطات الموجبة والسالبة لبطارية السيارة.

ملاحظة: عند بدء تشغيل السيارة ,
يرجى التأكد من أن قوة المنتج أعلى من ٥٠%.

تعليمات مفصلة لوظيفة التضخم

١. شحن المنتج

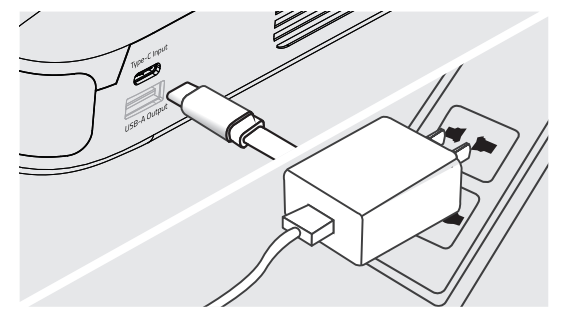

يرجى شحن المنتج بالكامل قبل استخدامه لأول مرة. الشحن: يومض رقم الوحدات من قيمة النسبة المئوية للبطارية (يومض مرة واحدة في الثانية). تعرض الشاشة: 🔋 مشحونة بالكامل: توقف عن الوميض وأوقف الشحن , قم بإيقاف تشغيل الشاشة بعد ١٠ ثوانٍ وادخل في حالة السكون. ملاحظة: لن تتمكن عملية الشحن من استخدام هذا المنتج.

٢ . تشغيل/إيقاف

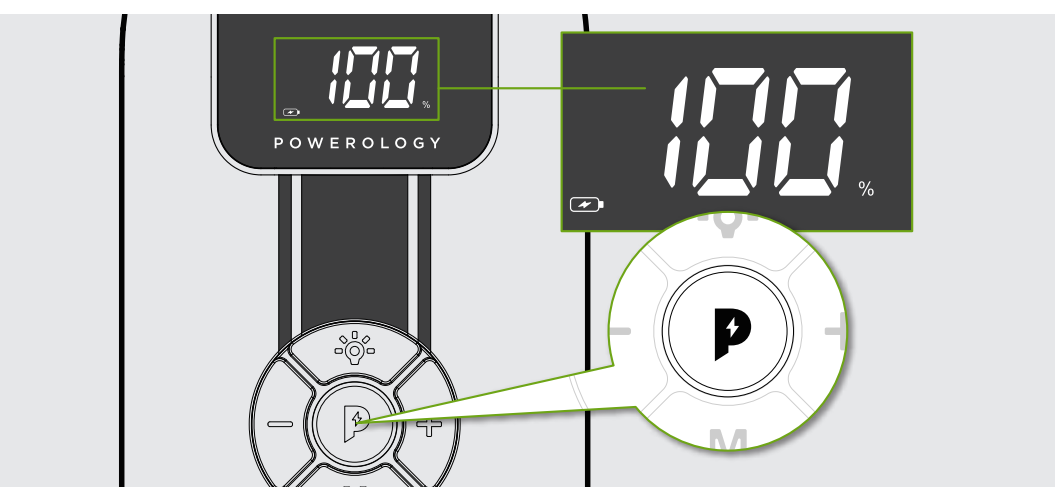

اضغط مع الاستمرار على زر "التشغيل" لمدة ثانيتين لتشغيل الجهاز. في هذا الوقت ,
سيتم عرض نسبة البطارية والرمز " 🔋 " على الشاشة وإخراج يو أس بي
سيتم تشغيل الوظيفة في نفس الوقت. بعد الإقلاع , اضغط مرة واحدة على زر "الطاقة" للتبديل
بين التشغيل / الإيقاف المؤقت للتضخم.
اضغط مع الاستمرار على زر "التشغيل" مرة أخرى لمدة ثانيتين للإغلاق. (إذا تم تشغيل المنتج دون
أي عملية خلال ٣٠ ثانية , فسيتم إيقاف تشغيله تلقائيًا.)

٣. قم بتوصيل أنبوب التضخم

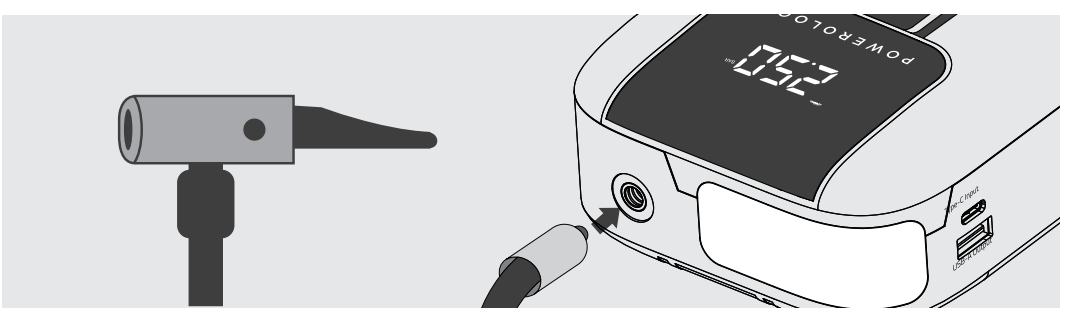

عادة ما يتم توصيل الدراجات والدراجات الكهربائية والدراجات النارية والسيارات مباشرة بواسطة أنبوب الهواء هذا.

٤. فوهة الغاز / طريقة تركيب إبرة الغاز



عند نفخ السرير الهوائي وحلقة السباحة , يرجى تحديد فوهة الهواء المناسبة , وتوصيل فوهة الهواء بأنبوب النفخ قبل النفخ.



عند نفخ كرة السلة وكرة القدم والكرات الأخرى , تحتاج إلى استخدام إبرة هوائية. قم بتوصيل إبرة الهواء بأنبوب النفخ قبل النفخ.

٥. ضغط الهواء

لضمان السلامة , قبل استخدام هذا الجهاز للتضخم , يرجى معرفة قيمة ضغط الهواء التي يتطلبها العنصر المضخم (تحقق من المعلومات السطحية للعنصر المتضخم أو الاستعلام عن دليل التعليمات الخاص بالعنصر المتضخم) لتجنب الإصابة الشخصية الناجمة عن التضخم المفرط .

العناصر المشتركة الموصى بها مقياس ضغط الهواء القابل للنفخ

فئة	أنواع	الهواء الموصى به نطاق الضغط
سيارة	اطارات السيارات	٢,٨-٢,٢ bar (٤٠-٣٢psi)
دراجة نارية	دراجة نارية كهربائية إطارات الدراجات النارية	٣,٠-١,٨ bar (٤٤-٢٦psi)
دراجة هوائية	إطارات دراجات قابلة للطي إطارات دراجات مقاس" ١٢ " ١٤ " ١٦ إطارات دراجات مقاس" ٢٠ "٢٢" ٢٤ إطارات دراجات مقاس" ٢٦ " ٢٧,٥ " ٢٩	٥٠-٤٥psi ٥٠-٣٠psi ٥٠-٤٠psi ٦٥-٤٥psi
كرة	كرة سلة كرة القدم الكرة الطائرة كرة القدم الامريكية	٩-٧psi ١٦-٨psi ٥-٤psi ١٤-١٢psi

ملحوظة:

١. هذا المنتج غير مناسب لإطارات الشاحنات وإطارات دراجات الطرق.

٢. بيانات نطاق ضغط الهواء الموصى به هي للإشارة فقط. يرجى الرجوع إلى دليل التعليمات الخاص بالعنصر المضخم للاستخدام الفعلي. (البيانات أعلاه تأتي من المختبر)

٥. ضبط مسبق لضغط الهواء للتضخم

طريقة الاختيار

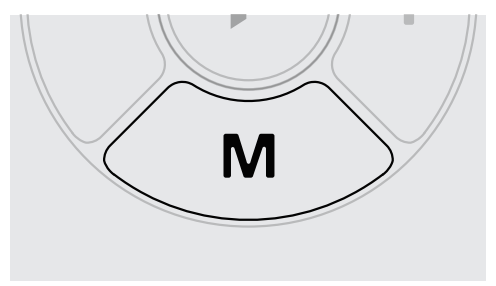

اضغط قصيرًا على الزر "M" لتحديد وضع النفخ: في كل مرة تضغط على هذا الزر , يمكنك التبديل بين أوضاع النفخ الأربعة وهي "السيارة" و "الدراجة النارية" و "الدراجة" و "الكرة". (اضغط لفترة طويلة على هذا المفتاح للتبديل بين أربع وحدات ضغط هواء PSI و BAR و KPA و Kg / cm2).

وضع السيارة
افتراضي ٣٦ رطل لكل بوصة مربعة (يساوي ٢,٥ بار تقريبًا)

وضع الدراجات النارية
افتراضي ٣٦ رطل لكل بوصة مربعة (يساوي ٢,٤ بار تقريبًا)

وضع الدراجات الهوائية
افتراضي ٤٥ رطل لكل بوصة مربعة (يساوي ٣ بار تقريبًا)

وضع الكرة
افتراضي ٨ رطل لكل بوصة مربعة (يساوي ٠,٦ بار تقريبًا)

بعد تحديد وضع التضخم المطابق , تعرض الشاشة قيمة الإعداد الافتراضية وتومض ثلاث مرات بتردد مرة واحدة في الثانية , ثم تدخل حالة الكشف عن ضغط الهواء لاكتشاف قيمة ضغط الهواء الحالية للكائن المتضخم. (عندما تضخم الكائن غير متصل , ستعرض قيمة ضغط الهواء "٠".)

ضبط الإعدادات المسبقة

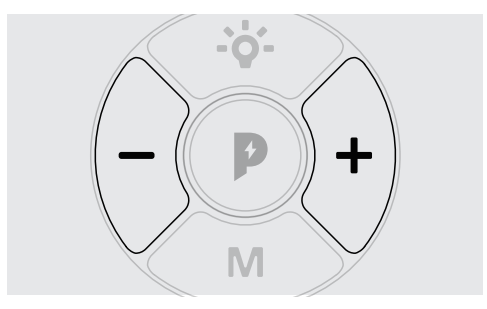

بعد تحديد وضع النفخ , اضغط لفترة قصيرة على مفتاح "+" أو مفتاح "-" لضبط قيمة ضغط الهواء المحددة مسبقًا ؛ الضغط لفترة طويلة لضبط قيمة ضغط الهواء بسرعة. بعد اكتمال الإعداد , تومض قيمة ضغط الهواء ثلاث مرات بتردد مرة واحدة في الثانية , ثم يتم تأكيد الإعداد تلقائيًا.

تحذير :

١. عند ضبط قيمة ضغط الهواء المضبوطة مسبقًا , يومض الرقم للإشارة إلى حالة ضبط ضغط الهواء المستهدف , ويكون الرقم دائمًا في وضع التشغيل للإشارة إلى ضغط الهواء في الوقت الفعلي.

٢. ستتم استعادة القيمة الافتراضية بعد تبديل الوضع أو إعادة تشغيله.

٣. عند نفخ حلقة السباحة والسرير الهوائي , ما عليك سوى ضبط "وضع الكرة".

٧. تعليمات التضخم

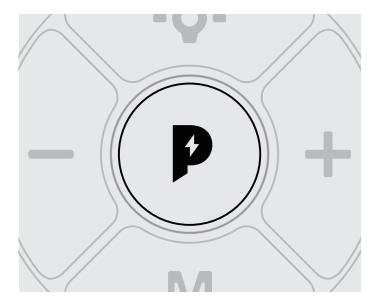

قم بتشغيل التضخم: بعد اكتمال إعداد ضغط الهواء , اضغط لفترة قصيرة على زر "الطاقة" لبدء النفخ , وتعرض الشاشة تغيرات ضغط الهواء في الوقت الفعلي أثناء النفخ.

وقف التضخم: عندما يصل ضغط الهواء إلى الإعداد المسبق القيمة , سوف تتوقف مضخة الهواء تلقائيًا عن التضخم. أثناء عملية النفخ , يمكنك أيضًا إيقاف التضخم مؤقتًا عن طريق الضغط على زر "الطاقة" لفترة قصيرة.

إيقاف التشغيل: في حالة التشغيل , اضغط مع الاستمرار على زر "التشغيل" لمدة ثانيتين للإغلاق أسفل. لتجنب اللمس العرضي , سيتم إيقاف تشغيله تلقائيًا إذا لم تكن هناك عملية في غضون 30 ثانية عند تشغيله.

تذكير خاص

① ٨٠-٧٥ ديسيبل ضوضاء ستتولد أثناء النفخ.

② ضغط الهواء نفخ البالونات وكرات اللعب وحلقات السباحة وغيرها من المنتجات أقل من نطاق مضخة الهواء , ولا يمكن إيقاف النفخ تلقائيًا عند ضغط الهواء المحدد مسبقًا. يرجى توخي الحذر عند استخدامه.

③ عندما يستمر الجهاز في العمل لفترة طويلة , سترتفع درجة حرارة الجسم وأنبوب الغاز بشكل ملحوظ. يرجى تجنب لمس أنبوب الهواء بيديك لفترة طويلة. إذا كانت درجة الحرارة مرتفعة جدًا , فيرجى التهدئة قبل الاستمرار في استخدامها. كن حذرًا من الحروق عند تفكيك فوهة الغاز بعد الاستخدام , سيكون هناك تسرب طفيف للهواء , يرجى تفكيكها بسرعة.

④ قد يؤدي حمل الضغط المتزايد وانخفاض درجة الحرارة المحيطة إلى تدهور قدرة هذا الجهاز على التحمل.

⑤ نظرًا لأن مضخة الهواء تولد قدرًا كبيرًا من الحرارة , يرجى الراحة لمدة ١٠ دقائق على الأقل بعد النفخ لمدة ١٠ دقائق قبل استخدامها.

٨. إضاءة متعددة الوظائف



بعد تشغيل الطاقة , اضغط على زر "ضوء LED" لتشغيل وضع الإضاءة. اضغط لفترة قصيرة مرة أخرى بدوره للتبديل إلى وضع ضوء التحذير , وإيقاف تشغيله.

المعلمات الأساسية

اسم المنتج	جامب ستارتر بضاغط هواء
نموذج	PPBCHA13
حجم	١٩٨ x ١١٢ x ٥٣mm
نطاق ضغط التضخم	٠,٢ ~ ٨ بار / ٣ ~ ١٢٠ رطل / بوصة مربعة
درجة حرارة التشغيل	الشحن: ٠ ~ ٤٥ , التفريغ: -١٠ ~ ٤٥
درجة حرارة التخزين	-١٠ درجة مئوية ~ ٥٠ درجة مئوية
طول الأنبوب القابل للنفخ	٤٣٥ مم (بما في ذلك فوهة الغاز)
قدرة البطارية	١١٢٠٠ مللي أمبير (٤١,٤٤ ساعة)
ضوضاء العمل	أقل من ٨٠ ديسيبل على بعد متر واحد
مدخلات الشحن	تايب سي ١٥ واط ٥ فولت / ٣ أمبير
وقت الشحن	حوالي ٣,٥ ساعة
دقة حساس ضغط الهواء	١ رطل ±
خرج يو أس بي_أيه	١٨ واط ٥ فولت / ٣ أمبير , ٩ فولت / ٢ أمبير , ١٢ فولت / ١,٥ أمبير
بدء تشغيل السيارة الحالية	٦٠٠ أمبير (١٢٠٠ أمبير ذروة)

احتياطات

إشعار الاستخدام

- هذا المنتج ليس لعبة , ويحظر على الأطفال استخدامه ؛ يوصى به للمستخدمين الذين تزيد أعمارهم عن ١٦ عامًا.
- عند استخدام المنتج لأول مرة , اشحن المنتج لأكثر من ٣ ساعات.
- يحتوي هذا المنتج على بطارية ليثيوم مدمجة غير قابلة للإزالة. يحظر رمي هذا المنتج في النار أو التخلص منه حسب الرغبة. قد تشتعل بطارية الليثيوم بالنيران وتشتعل تلقائيًا وتنفجر بسبب ارتفاع درجة الحرارة أو الصدمة أو الماء. يرجى تجنب التعرض لأشعة الشمس في السيارة , أو التعرض لدرجات حرارة عالية في البيئة.
- في حالة تورم المنتج أو تسريبه أو وجود روائح كريهة , يرجى التوقف عن استخدامه على الفور.
- إذا كان المنتج به ضوضاء غير طبيعية أو ارتفاع في درجة الحرارة أثناء الاستخدام , فيرجى التوقف عن استخدامه وإغلاقه على الفور.
- يرجى تخزينها أو استخدامها في بيئة جافة ونظيفة. تجنب الرطوبة والسقوط الشديد والغطس في الماء وتسلل الرمال. قد يؤدي تسرب الرمل والغبار إلى تلف المنتج ؛ هذا المنتج أيضًا غير مقاوم للماء , ويحظر غسله بالماء.
- يرجى تخزينها أو استخدامها في بيئة جافة ونظيفة. تجنب الرطوبة والسقوط الشديد والماء الغمر وتسلل الرمال. قد يؤدي تسرب الرمل والغبار إلى تلف منتج؛ هذا المنتج أيضًا غير مقاوم للماء , ويحظر غسله بالماء.
- يرجى الابتعاد عن المواد المسببة للتآكل عند تخزين هذا المنتج , ويجب ألا تقل درجة حرارة التخزين عن -10 درجة مئوية أو أعلى من 50 درجة مئوية. سيؤدي البرودة الشديدة أو السخونة الشديدة إلى تقصير عمر المنتج وإتلاف البطارية المدمجة.
- يرجى الاحتفاظ بهذا المنتج مشحونًا مرة واحدة على الأقل كل ٣ أشهر.

إشعار التضخم

- يحتوي المنتج على محرك تيار مستمر مدمج , والذي قد يولد شرارات كهربائية أثناء التشغيل.
- الرجاء عدم استخدامه في بيئة قابلة للاشتعال والانفجار.
- قبل النفخ , يرجى تأكيد قيمة ضغط الهواء المطلوبة للعنصر المضخم لتجنب الإصابة الشخصية الناجمة عن الانفجار الناجم عن التضخم المفرط.
- عند ضبط قيمة التضخم لضغط الهواء , يرجى التأكد من القياس تم اختيار الوحدة بشكل صحيح , وإلا فقد يتسبب ذلك في وقوع حوادث مثل انفجار الإطار. مشترك تحويل الوحدة: ١ بار = ١٤,٥ رطل لكل بوصة مربعة , ١ بار = ١٠٠ كيلو باسكال.
- عند نفخ الأشياء , يرجى إبقاء هذا المنتج على مسافة آمنة من الأطفال.
- لا تنحني أو تخطو على أنبوب النفخ عند النفخ , وتأكد من الحفاظ على تدفق الهواء دون عائق.

لا يُسمح للمشغلين بمغادرة المكان أثناء التضخم. يرجى ملاحظة عملية النفخ لمنع ارتفاع ضغط الهواء بسبب ضغط الهواء غير المحدد.

إشعار بدء الانتقال السريع

- يمكن استخدام هذا المنتج لبدء تشغيل محرك بطارية ١٢ فولت , ولكن لا يمكن استخدامه لبدء محرك بطارية ٢٤ فولت.
- تأكد من استخدام مشبك السلك المرفق بالمنتج لبدء تشغيل السيارة.
- يحظر تشغيل السيارة عندما تكون قوة المنتج أقل من ٥٠% , وإلا فإنه سوف يتسبب في تلف المنتج.
- لا تقم بربط مشابك البطارية من كلا الطرفين , وإلا فقد يتسبب ذلك في وقوع حادث أمان.
- في حالة فشل بدء التشغيل , يرجى المحاولة مرة أخرى بعد دقيقة واحدة على الأقل لتجنب تلف المنتج.
- بعد بدء تشغيل السيارة , يرجى الانتظار لمدة ٣٠ دقيقة على الأقل قبل شحن المنتج.

قائمة التعبئة



المنتج x١



أنبوب قابل للنفخ x١

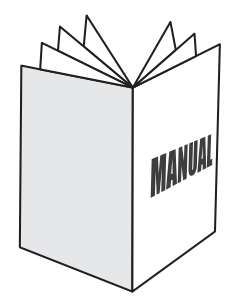

دليل x١



حقيبة تخزين x١



غاز x١



فوهة الغاز x٢

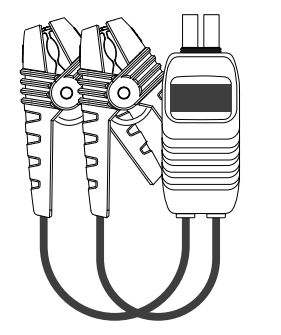

كابل الطائر x١

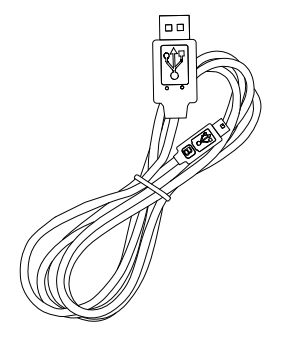

كابل شحن تايب-سي x١

ملاحظة: الرسوم التوضيحية للمنتجات والملحقات وواجهة العرض في هذا الدليل كلها مخططات تخطيطية وهي للإشارة فقط. نظرًا لأنه يتم ترقية المنتج بشكل متكرر من وقت لآخر , فقد يختلف المنتج الفعلي والرسم التخطيطي , يرجى الرجوع إلى المنتج الفعلي!

استكشاف الأخطاء وإصلاحها

مشكلة	طريقة الاستبعاد
تضخم بطيء	١. تحقق مما إذا كانت طاقة البطارية كافية. ٢. تحقق من عدم وجود تسرب للهواء في القصبة الهوائية. ٣. تحقق مما إذا كانت الأجزاء المتصلة في كلا طرفي القصبة الهوائية مثبتة بإحكام. ٤. تحقق مما إذا كانت الإطارات فارغة.
تم تشغيله , لكن لا يمكن نفخه	١. تحقق مما إذا كانت طاقة البطارية كافية. ٢. تحقق مما إذا كان ضغط الهواء للعنصر المنفوخ أعلى من القيمة المحددة مسبقًا.
التضخم طبيعي , لكن ضغط الشاشة القيمة صفر	الأجسام المتضخمة ذات الضغط المنخفض مثل البالونات ليست ضمن النطاق القابل للقياس لهذا الجهاز.
بعد تركيب فوهة الغاز بإحكام , كانت القوة إيقاف تلقائيا	سيتم إيقاف تشغيله تلقائيًا إذا لم تكن هناك عملية خلال ٣٠ ثانية , فقط أعد تشغيله.
عندما يكون هناك تسرب للهواء ربط القصبة الهوائية	قم بتثبيت القصبة الهوائية بإحكام.

تنازل

١.لا تتحمل الشركة أي مسؤولية عن المشاكل الناتجة عن سوء التشغيل خارج التعليمات.

٢. في حالة تلف المنتج عن طريق فكه وتركيبه بنفسه , ستقوم شركتنا بذلك لا نتحمل أي مسؤولية.

٣.إذا تسبب استخدام شاحن غير متطابق في حدوث مشكلات , فإن شركتنا لا تتحمل أي مشكلات المسؤولية.

٤.لا تتحمل الشركة أي مسؤولية عن المنتجات بعد فترة الضمان.

لمزيد من المعلومات , يرجى الاتصال بفريق الدعم الخاص بنا support@teqtronixme.com

hey@powerology.me | www.powerology.me powerology powerology.me