



**Powerology**

## **NICE Smart Audio Sunglasses**

SKU: PWHY1009


# Table of Contents

Power On and Off	2
Pairing Guide	2
Music Playback	3
Camera Shutter	4
Activate Voice Assistant	5
Charging Guide	5
Call Management	6
Smart Sleep Mode	7
Specifications	7
Disposal	8
Warranty	9
Contact Us	9

## Power On and Off

**Power On:** Press and hold the multifunction key on both temples for 3 seconds to turn the device on.

**Power Off:** Press and hold the multifunction key on either temple for 5 seconds, and both temples will turn off simultaneously.

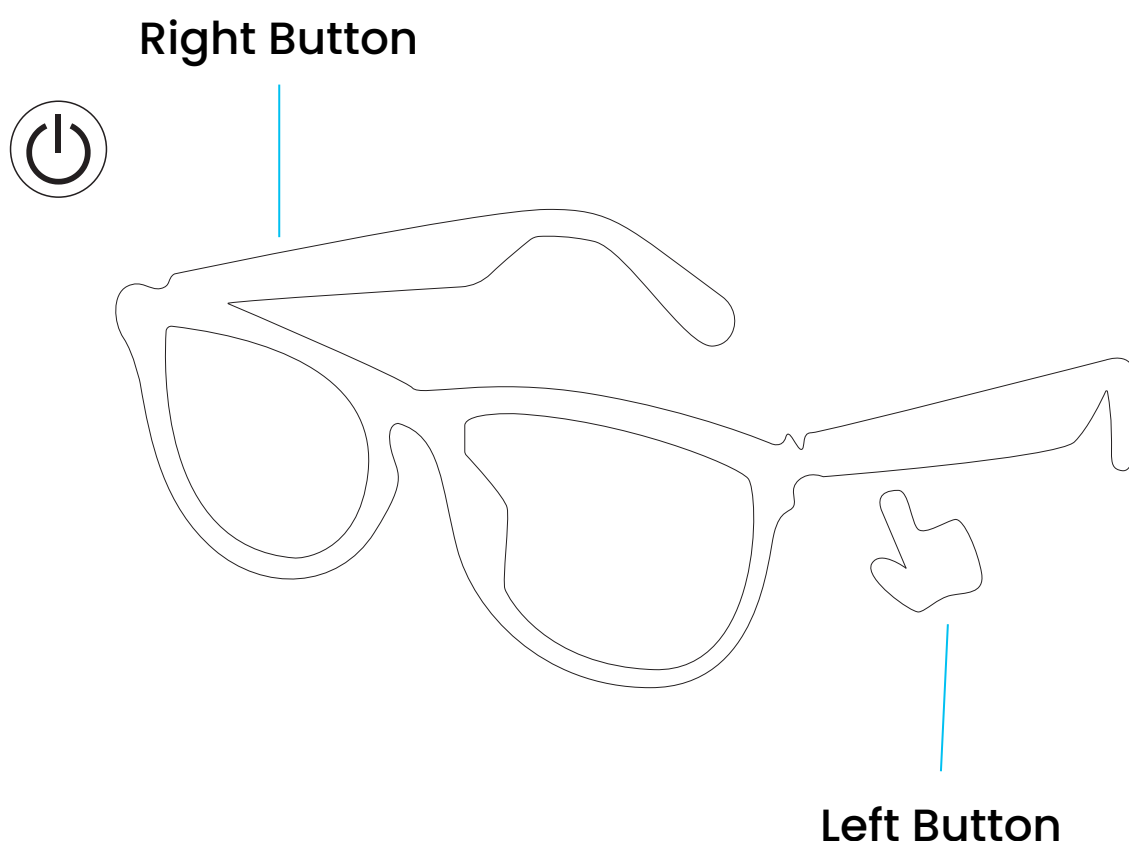


## Pairing Guide

The left and right temples will automatically pair when the device is turned on. Once the left and right temples of the Bluetooth glasses are successfully paired, enable Bluetooth on your mobile phone and search for the Bluetooth name 'PWHY1009' to connect to the device.

### Note:

1. The smart glasses automatically turn off when charging and will automatically turn on when the charger is unplugged or when fully charged.
2. The glasses will automatically recognize paired devices and connect without any additional input.
3. If you click on any temple four times consecutively after turning the glasses on, a prompt will appear in either Chinese or English.

### Right button

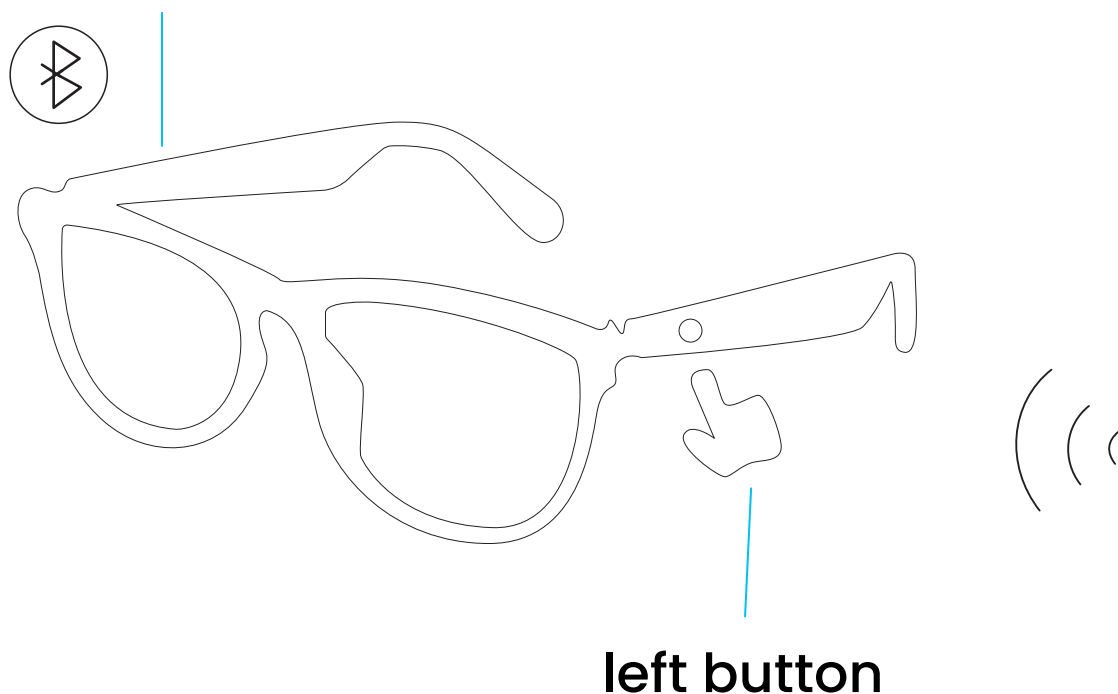


## Music Playback

**Music Pause/Play:** Press the left or right multifunction key once to pause or play music.


**Previous Song:** Press the left multifunction key twice.

**Next Song:** Press the right multifunction key twice.

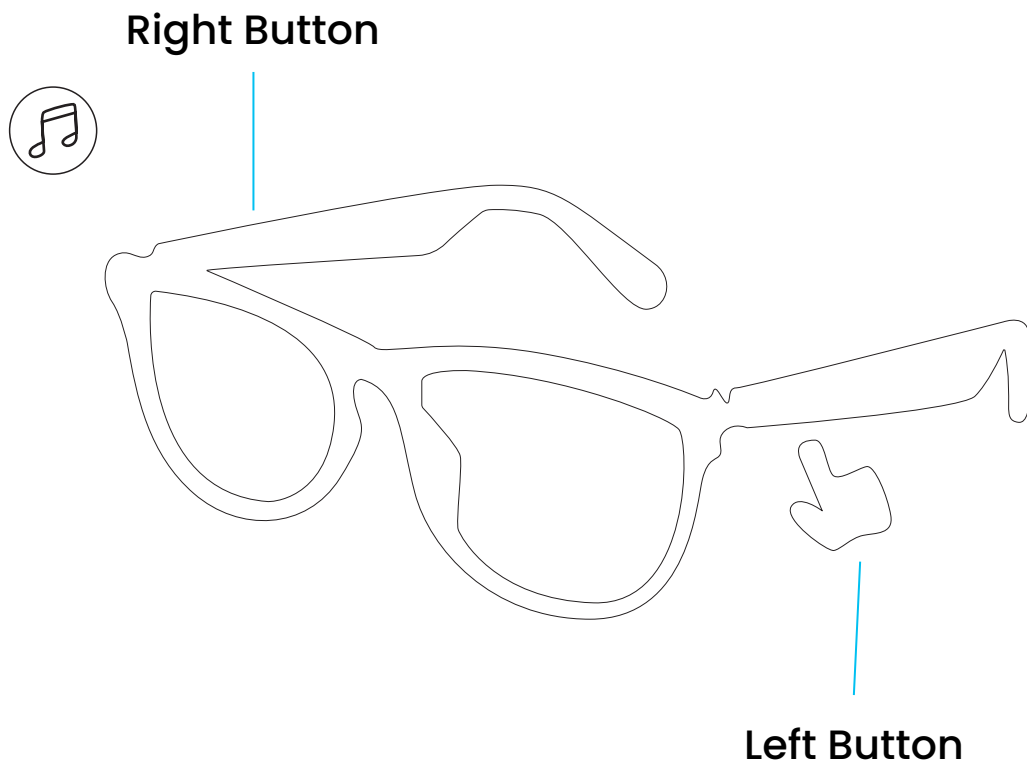


## Camera Shutter

Press and hold the right ear for 1 second to capture a photo.

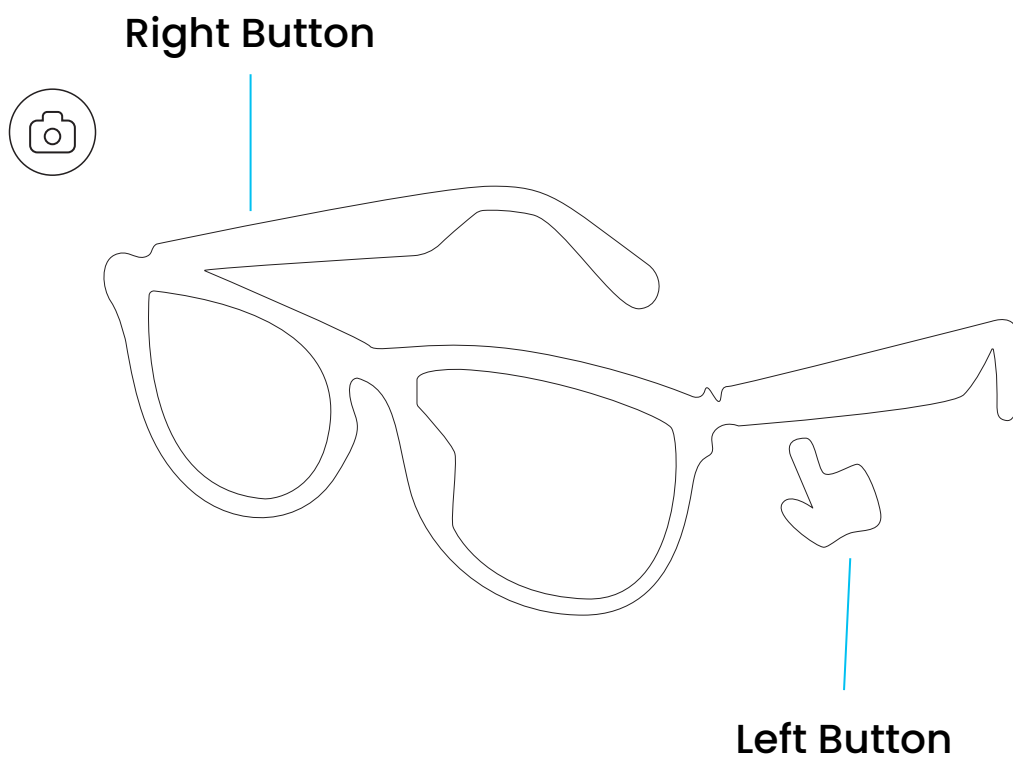

## **Activate Voice Assistant**


Press and hold the left ear for 2.5 seconds to activate Siri.

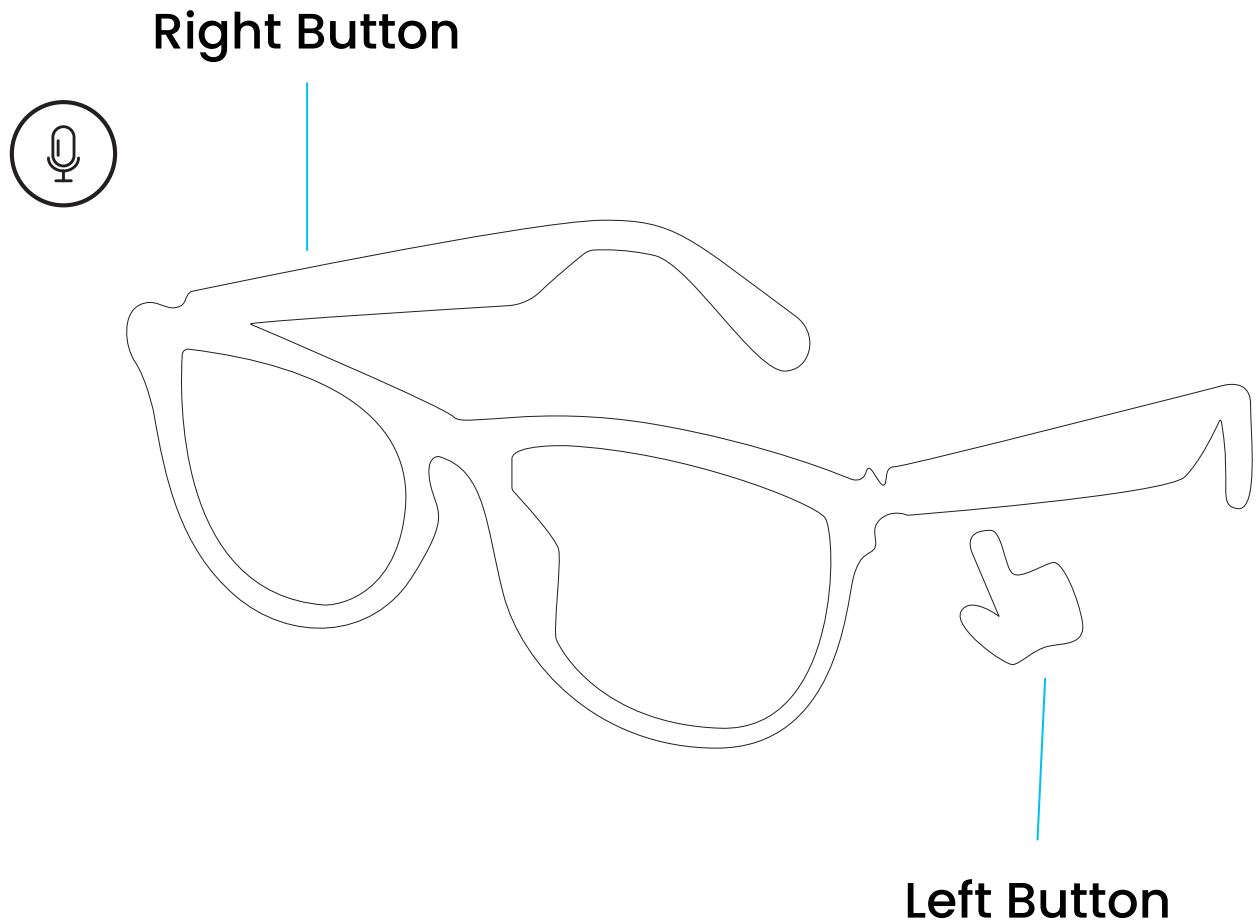

## **Charging Guide**

Connect the magnetic charging cable to the charging posts on both the left and right temples to begin charging.


Note: The glasses will automatically turn off while charging.

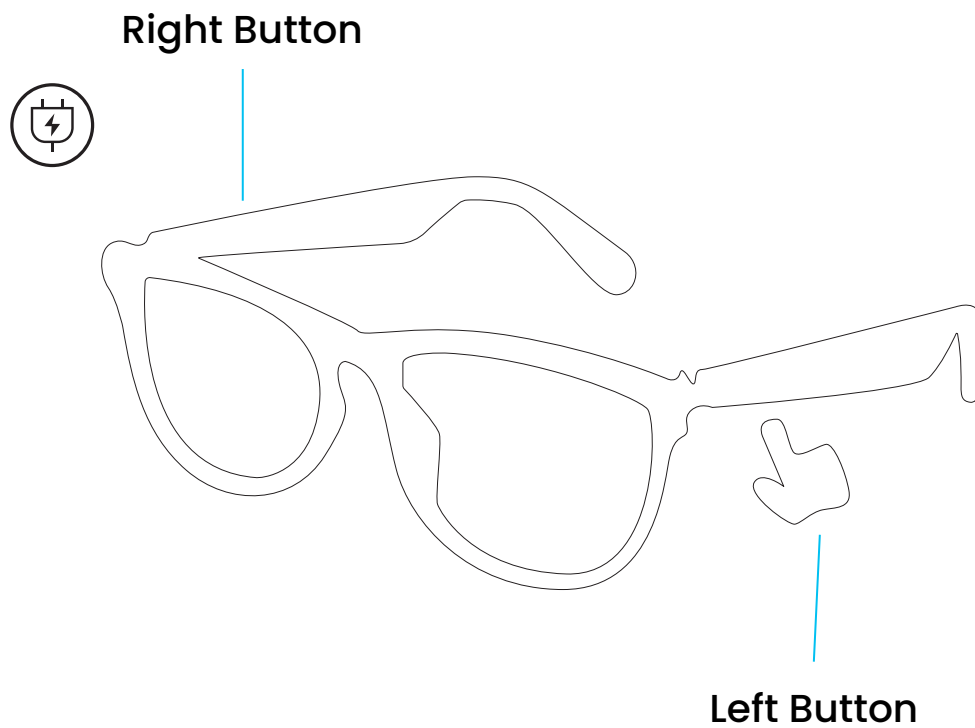

## Call Management


**Answer/Hang Up the Call:** Press the left or right multifunction key once to answer or hang up a call.

**Reject a Call:** Press and hold the left or right multifunction key for 2 seconds to reject the call.

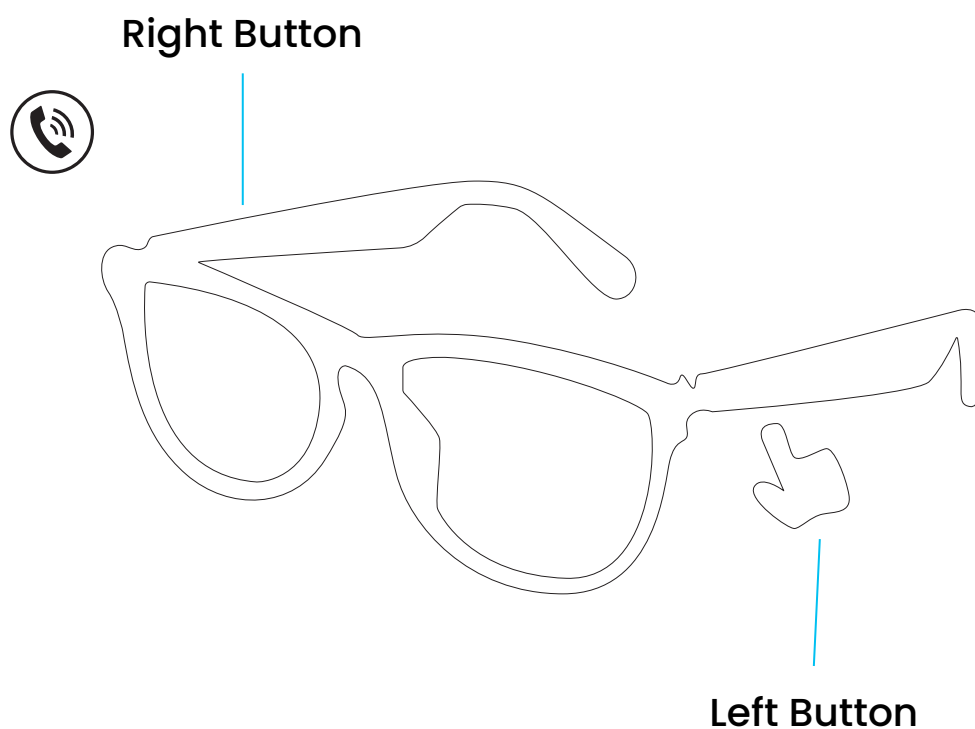

## Smart Sleep Mode

The Bluetooth smart glasses will automatically turn off after 5 minutes if they are not connected to Bluetooth devices such as mobile phones.

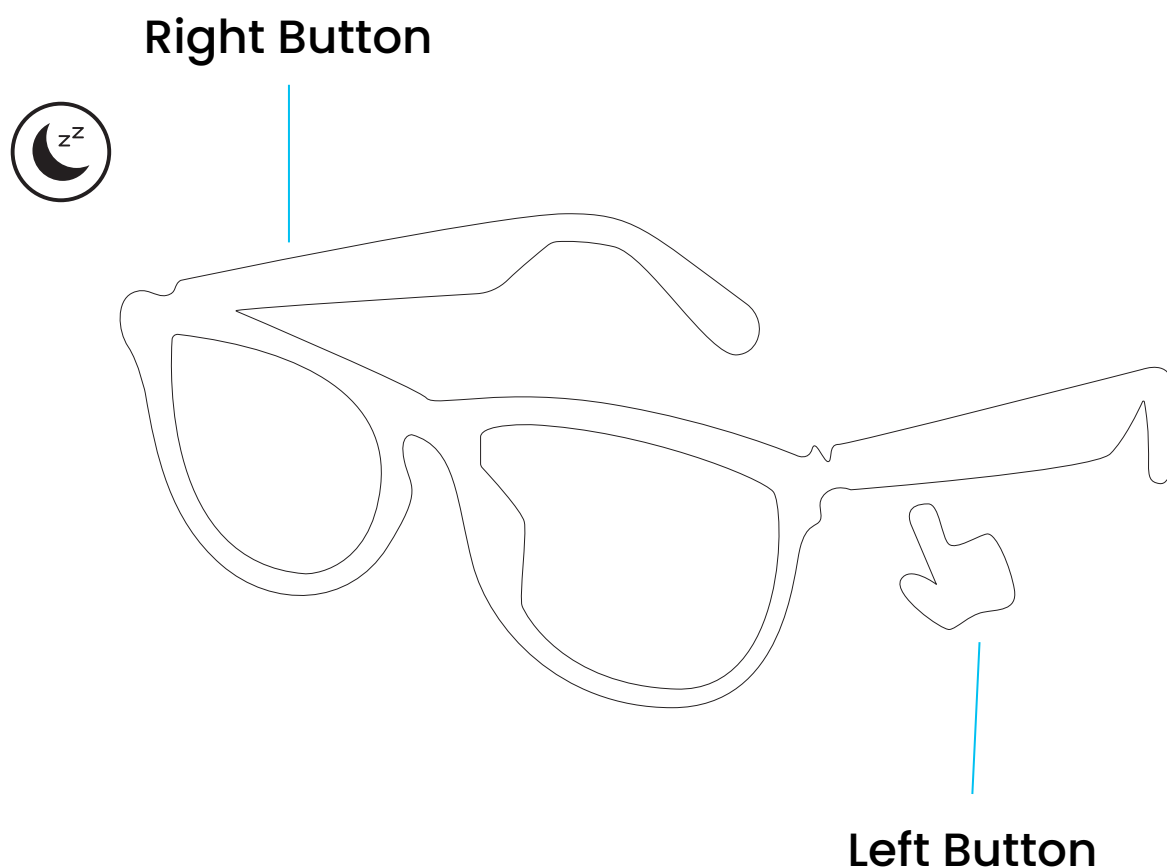

## Specifications

Model	PWHY1009
Input	5V/1A
Battery Capacity	2x90mAh/3.7V
Charging Interface	Magnetic
Recharge Time	2H
Talk Time	6H (@%60 Volume)



Music Playtime	8H (@%60 Volume)
Bluetooth	V5.4
Bluetooth Frequency Range	2.402GHz-2.480GHz
Transmission Distance	10m
SNR	≥ 90dB
Frequency Response	20Hz-20KHz
Product Dimension	50 x 18 x 140mm
Net Weight	35g

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
**powerology.me/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**  
Website: **powerology.me**  
Instagram: **powerology\_official**  
Facebook: **powerology.ME**